



RIGOL

MSO/DS9000 Series

Digital Oscilloscope

Programming Guide

Mar.2026

Guaranty and Declaration

Copyright

© 2026 RIGOL TECHNOLOGIES CO., LTD. All Rights Reserved.

Trademark Information

RIGOL® is the trademark of RIGOL TECHNOLOGIES CO., LTD.

Notices

- RIGOL products are covered by P.R.C. and foreign patents, issued and pending.
- RIGOL reserves the right to modify or change parts of or all the specifications and pricing policies at the company's sole decision.
- Information in this publication replaces all previously released materials.
- Information in this publication is subject to change without notice.
- RIGOL shall not be liable for either incidental or consequential losses in connection with the furnishing, use, or performance of this manual, as well as any information contained.
- Any part of this document is forbidden to be copied, photocopied, or rearranged without prior written approval of RIGOL.

Product Certification

RIGOL guarantees that this product conforms to the national and industrial standards in China as well as the ISO9001:2015 standard and the ISO14001:2015 standard. Other international standard conformance certifications are in progress.

Contact Us

If you have any problem or requirement when using our products or this manual, please contact RIGOL.

E-mail: service@rigol.com

Website: <http://www.rigol.com>

Section	Description	Page
	List of Figures.....	XXV
	List of Tables.....	XXVI
1	Document Overview	1
2	Programming Overview	3
2.1	SCPI Command Overview	3
2.2	Remote Control	5
2.3	Sequential Commands and Overlapped Commands	6
2.4	Compatible Commands	8
3	Command System	10
3.1	Root Commands	10
3.1.1	:CLEAr	10
3.1.2	:RUN	10
3.1.3	:STOP	11
3.1.4	:SINGle	12
3.1.5	:TFORce	12
3.2	:AUToset Commands	13
3.2.1	:AUToset	13
3.2.2	:AUToset:PEAK	14
3.2.3	:AUToset:OPENch	14
3.2.4	:AUToset:OVERlap	15
3.2.5	:AUToset:KEEPcoup	16
3.2.6	:AUToset:LOCK	16
3.2.7	:AUToset:ENABle	17
3.3	:ACQuire Commands	18
3.3.1	:ACQuire:AVERages	18
3.3.2	:ACQuire:BITS	19
3.3.3	:ACQuire:MDEPth	19
3.3.4	:ACQuire:MEMDepth?	21
3.3.5	:ACQuire:TYPE	21
3.3.6	:ACQuire:SRATE?	22
3.4	:BUS<n> Commands	23
3.4.1	:BUS<n>:MODE	23
3.4.2	:BUS<n>:DISPlay	24

3.4.3	:BUS<n>:FORMat	24
3.4.4	:BUS<n>:EVENT	25
3.4.5	:BUS<n>:LABel	26
3.4.6	:BUS<n>:DATA?	26
3.4.7	:BUS<n>:EEXPort	27
3.4.8	:BUS<n>:POSition	28
3.4.9	:BUS<n>:THReshold	29
3.4.10	:BUS<n>:PARallel	30
3.4.10.1	:BUS<n>:PARallel:BUS	31
3.4.10.2	:BUS<n>:PARallel:CLK	32
3.4.10.3	:BUS<n>:PARallel:SLOPe	32
3.4.10.4	:BUS<n>:PARallel:WIDTh	33
3.4.10.5	:BUS<n>:PARallel:BITX	34
3.4.10.6	:BUS<n>:PARallel:SOURce	35
3.4.10.7	:BUS<n>:PARallel:ENDian	35
3.4.10.8	:BUS<n>:PARallel:POLarity	36
3.4.11	:BUS<n>:RS232	37
3.4.11.1	:BUS<n>:RS232:TX	38
3.4.11.2	:BUS<n>:RS232:RX	38
3.4.11.3	:BUS<n>:RS232:POLarity	39
3.4.11.4	:BUS<n>:RS232:PARity	40
3.4.11.5	:BUS<n>:RS232:ENDian	41
3.4.11.6	:BUS<n>:RS232:BAUD	41
3.4.11.7	:BUS<n>:RS232:DBITs	42
3.4.11.8	:BUS<n>:RS232:SBITs	43
3.4.12	:BUS<n>:IIC	43
3.4.12.1	:BUS<n>:IIC:SCLK:SOURce	44
3.4.12.2	:BUS<n>:IIC:SDA:SOURce	44
3.4.12.3	:BUS<n>:IIC:EXCHange	45
3.4.12.4	:BUS<n>:IIC:ADDRes	46
3.4.12.5	:BUS<n>:IIC:ADDBits	46
3.4.13	:BUS<n>:SPI	48
3.4.13.1	:BUS<n>:SPI:SCLK:SOURce	48
3.4.13.2	:BUS<n>:SPI:SCLK:SLOPe	49
3.4.13.3	:BUS<n>:SPI:MISO:SOURce	49
3.4.13.4	:BUS<n>:SPI:MOSI:SOURce	50
3.4.13.5	:BUS<n>:SPI:POLarity	51

3.4.13.6	:BUS<n>:SPI:MISO:POLarity	52
3.4.13.7	:BUS<n>:SPI:MOSI:POLarity	52
3.4.13.8	:BUS<n>:SPI:DBITs	53
3.4.13.9	:BUS<n>:SPI:ENDian	54
3.4.13.10	:BUS<n>:SPI:MODE	54
3.4.13.11	:BUS<n>:SPI:TIMEout:TIME	55
3.4.13.12	:BUS<n>:SPI:SS:SOURce	56
3.4.13.13	:BUS<n>:SPI:SS:POLarity	57
3.4.14	:BUS<n>:CAN	57
3.4.14.1	:BUS<n>:CAN:SOURce	58
3.4.14.2	:BUS<n>:CAN:STYPe	59
3.4.14.3	:BUS<n>:CAN:BAUD	60
3.4.14.4	:BUS<n>:CAN:SPOint	60
3.4.14.5	:BUS<n>:CAN:FDBaud (Option)	61
3.4.14.6	:BUS<n>:CAN:FDSPoint	61
3.4.15	:BUS<n>:FLEXray (Option)	62
3.4.15.1	:BUS<n>:FLEXray:BAUD	62
3.4.15.2	:BUS<n>:FLEXray:SOURce	63
3.4.15.3	:BUS<n>:FLEXray:SPOint	64
3.4.15.4	:BUS<n>:FLEXray:STYPe	64
3.4.15.5	:BUS<n>:FLEXray:CHANnel	65
3.4.16	:BUS<n>:LIN (Option)	65
3.4.16.1	:BUS<n>:LIN:PARity	66
3.4.16.2	:BUS<n>:LIN:SOURce	66
3.4.16.3	:BUS<n>:LIN:STANdard	67
3.4.16.4	:BUS<n>:LIN:BAUD	68
3.4.17	:BUS<n>:IIS (Option)	68
3.4.17.1	:BUS<n>:IIS:SOURce:CLOCK	69
3.4.17.2	:BUS<n>:IIS:SOURce:DATA	69
3.4.17.3	:BUS<n>:IIS:SOURce:WSElect	70
3.4.17.4	:BUS<n>:IIS:ALIGNment	71
3.4.17.5	:BUS<n>:IIS:CLOCK:SLOPe	71
3.4.17.6	:BUS<n>:IIS:RWIDth	72
3.4.17.7	:BUS<n>:IIS:RECewidth	73
3.4.17.8	:BUS<n>:IIS:WSLow	73
3.4.17.9	:BUS<n>:IIS:ENDian	74
3.4.17.10	:BUS<n>:IIS:POLarity	75

3.4.18	:BUS<n>:M1553 (Option)	75
3.4.18.1	:BUS<n>:M1553:SOURce	76
3.4.19	:BUS<n>:SENT	76
3.4.19.1	:BUS<n>:SENT:SOURce	77
3.4.19.2	:BUS<n>:SENT:TICK	77
3.4.19.3	:BUS<n>:SENT:TOLerance	78
3.4.19.4	:BUS<n>:SENT:NIBBnum	79
3.4.19.5	:BUS<n>:SENT:POLarity	79
3.4.19.6	:BUS<n>:SENT:CRC	80
3.4.19.7	:BUS<n>:SENT:PAUSE	80
3.4.19.8	:BUS<n>:SENT:TYPE	81
3.5	:BODEplot Commands	82
3.5.1	:BODEplot:ENABLE	82
3.5.2	:BODEplot:RUNStop	83
3.5.3	:BODEplot:ANALysis:MODE	83
3.5.4	:BODEplot:SWEEptype	84
3.5.5	:BODEplot:REF:IN	84
3.5.6	:BODEplot:REF:OUT	85
3.5.7	:BODEplot:FREQuency:START	86
3.5.8	:BODEplot:FREQuency:STOP	86
3.5.9	:BODEplot:FREQuency:FIXed	87
3.5.10	:BODEplot:POINts	88
3.5.11	:BODEplot:VOLTag	88
3.5.12	:BODEplot:VOLTag:VARiance	89
3.5.13	:BODEplot:OUTput:VOLTag	90
3.5.14	:BODEplot:AFG:SOURce	90
3.5.15	:BODEplot:AFG:LOAD	91
3.6	:CHANnel<n> Commands	91
3.6.1	:CHANnel<n>:BWLimit	92
3.6.2	:CHANnel<n>:COUPling	93
3.6.3	:CHANnel<n>:DISPlay	94
3.6.4	:CHANnel<n>:INVert	94
3.6.5	:CHANnel<n>:OFFSet	95
3.6.6	:CHANnel<n>:TCALibrate	96
3.6.7	:CHANnel<n>:SCALE	97
3.6.8	:CHANnel<n>:IMPedance	98
3.6.9	:CHANnel<n>:BVOLtag	98

3.6.10	:CHANnel<n>:CStArt	99
3.6.11	:CHANnel<n>:PROBe	100
3.6.12	:CHANnel<n>:PROBe:DElAy	101
3.6.13	:CHANnel<n>:PROBe:BIAS	102
3.6.14	:CHANnel<n>:PROBe:CALibration	102
3.6.15	:CHANnel<n>:PROBe:DEMag	103
3.6.16	:CHANnel<n>:PROBe:EXTattenuation	103
3.6.17	:CHANnel<n>:LABel:SHOW	104
3.6.18	:CHANnel<n>:LABel:CONTent	105
3.6.19	:CHANnel<n>:UNITs	105
3.6.20	:CHANnel<n>:VERNier	106
3.6.21	:CHANnel<n>:POSition	107
3.7	:COUNter Commands	108
3.7.1	:COUNter:CURRent?	108
3.7.2	:COUNter:ENABle	108
3.7.3	:COUNter:SOURce	109
3.7.4	:COUNter:MODE	110
3.7.5	:COUNter:NDIGits	110
3.7.6	:COUNter:STATistic:ENABle	111
3.7.7	:COUNter:STATistic:CLEar	112
3.7.8	:COUNter:STATistic:MAXimum?	112
3.7.9	:COUNter:STATistic:MINimum?	113
3.7.10	:COUNter:STATistic:AVERages?	113
3.8	:CURSor Commands	114
3.8.1	:CURSor:MODE	115
3.8.2	:CURSor:MANual:HREF	116
3.8.3	:CURSor:MANual:VREF	117
3.8.4	:CURSor:MANual:TYPE	117
3.8.5	:CURSor:MANual:MODE	118
3.8.6	:CURSor:MANual:SOURce1	118
3.8.7	:CURSor:MANual:SOURce2	119
3.8.8	:CURSor:MANual:TUNit	120
3.8.9	:CURSor:MANual:VUNit	120
3.8.10	:CURSor:MANual:CAX	121
3.8.11	:CURSor:MANual:CAY	121
3.8.12	:CURSor:MANual:CBX	122
3.8.13	:CURSor:MANual:CBY	123

3.8.14	:CURSor:MANual:AXValue?	123
3.8.15	:CURSor:MANual:AYValue?	124
3.8.16	:CURSor:MANual:BXValue?	124
3.8.17	:CURSor:MANual:BYValue?	125
3.8.18	:CURSor:MANual:XDELta?	126
3.8.19	:CURSor:MANual:IXDelta?	126
3.8.20	:CURSor:MANual:YDELta?	127
3.8.21	:CURSor:TRACk:SOURce1	127
3.8.22	:CURSor:TRACk:SOURce2	128
3.8.23	:CURSor:TRACk:TYPE	128
3.8.24	:CURSor:TRACk:CAX	129
3.8.25	:CURSor:TRACk:CBX	130
3.8.26	:CURSor:TRACk:CAY	130
3.8.27	:CURSor:TRACk:CBY	131
3.8.28	:CURSor:TRACk:AXValue?	132
3.8.29	:CURSor:TRACk:AYValue?	132
3.8.30	:CURSor:TRACk:BXValue?	133
3.8.31	:CURSor:TRACk:BYValue?	133
3.8.32	:CURSor:TRACk:XDELta?	134
3.8.33	:CURSor:TRACk:YDELta?	134
3.8.34	:CURSor:TRACk:IXDelta?	135
3.8.35	:CURSor:TRACk:MODE	135
3.8.36	:CURSor:XY:AX	136
3.8.37	:CURSor:XY:BX	136
3.8.38	:CURSor:XY:AY	137
3.8.39	:CURSor:XY:BY	137
3.8.40	:CURSor:XY:AXValue?	138
3.8.41	:CURSor:XY:AYValue?	138
3.8.42	:CURSor:XY:BXValue?	139
3.8.43	:CURSor:XY:BYValue?	139
3.8.44	:CURSor:XY:XDELta?	140
3.8.45	:CURSor:XY:YDELta?	140
3.9	:DISPlay Commands	141
3.9.1	:DISPlay:CLEar	141
3.9.2	:DISPlay:TYPE	142
3.9.3	:DISPlay:GRADing:TIME	142
3.9.4	:DISPlay:WBRightness	143

3.9.5	:DISPlay:GRID	144
3.9.6	:DISPlay:GBrightness	144
3.9.7	:DISPlay:CBrightness	145
3.9.8	:DISPlay:DATA?	145
3.9.9	:DISPlay:RULers	146
3.9.10	:DISPlay:COLor	147
3.9.11	:DISPlay:WHOLd	147
3.10	:DVM Commands	148
3.10.1	:DVM:CURRent?	148
3.10.2	:DVM:ENABle	148
3.10.3	:DVM:SOURce	149
3.10.4	:DVM:MODE	150
3.11	:HISTogram Commands	150
3.11.1	:HISTogram:ENABle	151
3.11.2	:HISTogram:TYPE	152
3.11.3	:HISTogram:SOURce	152
3.11.4	:HISTogram:HEIGHt	153
3.11.5	:HISTogram:RANGe:LEFT	153
3.11.6	:HISTogram:RANGe:RIGHT	154
3.11.7	:HISTogram:RANGe:TOP	155
3.11.8	:HISTogram:RANGe:BOTTom	156
3.11.9	:HISTogram:STATistics:RESult?	157
3.11.10	:HISTogram:RESet	157
3.12	:EYE Commands (Option)	158
3.12.1	:EYE:ENABle	159
3.12.2	:EYE:RST	160
3.12.3	:EYE:SOURce	161
3.12.4	:EYE:MEASure:ENABle	161
3.12.5	:EYE:MEASure:ITEM?	162
3.12.6	:EYE:OVERlap	163
3.12.7	:EYE:GRID	163
3.12.8	:EYE:HIGH	164
3.12.9	:EYE:LOW	165
3.12.10	:EYE:HISTogram	165
3.12.10.1	:EYE:HISTogram:ENABle	165
3.12.10.2	:EYE:HISTogram:PIXel:LEFT	166
3.12.10.3	:EYE:HISTogram:PIXel:RIGHT	167

3.12.10.4	:EYE:HISTogram:PIXel:HIGH	167
3.12.10.5	:EYE:HISTogram:PIXel:LOW	168
3.12.10.6	:EYE:HISTogram:TYPE	168
3.12.11	:EYE:CURSor	169
3.12.11.1	:EYE:CURSor:ENABle	169
3.12.11.2	:EYE:CURSor:CAX	169
3.12.11.3	:EYE:CURSor:CBX	170
3.12.11.4	:EYE:CURSor:CAY	171
3.12.11.5	:EYE:CURSor:CBY	171
3.12.11.6	:EYE:CURSor:LINK	172
3.12.12	:EYE:MTESt	172
3.12.12.1	:EYE:MTESt:ENABle	173
3.12.12.2	:EYE:MTESt:STARt	173
3.12.12.3	:EYE:MTESt:STOP	174
3.12.12.4	:EYE:MTESt:SAVE	174
3.12.12.5	:EYE:MTESt:LOAD	175
3.12.12.6	:EYE:MTESt:OFailure:STOP	176
3.12.12.7	:EYE:MTESt:OFailure:SCReen	176
3.12.12.8	:EYE:MTESt:OFailure:BEEPer	177
3.12.12.9	:EYE:MTESt:OFailure:FRAMESave	177
3.12.12.10	:EYE:MTESt:STANdand:LOAD	178
3.13	:CLOCKrecovery Commands (Option)	179
3.13.1	:CLOCKrecovery:SOURce	179
3.13.2	:CLOCKrecovery<n>:PRESet	180
3.13.3	:CLOCKrecovery<n>:METHod	180
3.13.4	:CLOCKrecovery<n>:DARAtE:SETup	181
3.13.5	:CLOCKrecovery<n>:DARAtE:METHod	182
3.13.6	:CLOCKrecovery<n>:DARAtE:MEAsure	183
3.13.7	:CLOCKrecovery<n>:RELAtion	183
3.13.8	:CLOCKrecovery<n>:EDGE	184
3.13.9	:CLOCKrecovery<n>:JTF:BANDwidth	185
3.13.10	:CLOCKrecovery<n>:JTF:DIVisor	185
3.13.11	:CLOCKrecovery<n>:OJTF:BANDwidth	186
3.13.12	:CLOCKrecovery<n>:OJTF:DIVisor	186
3.13.13	:CLOCKrecovery<n>:OJTF:DAMPing	187
3.13.14	:CLOCKrecovery<n>:TRANsition	188
3.13.15	:CLOCKrecovery<n>:SETTLing	188

3.13.16	:CLOCKrecovery<n>:IDLE	189
3.13.17	:CLOCKrecovery<n>:JTF:PEAK	190
3.13.18	:CLOCKrecovery<n>:DAMPing	190
3.13.19	:CLOCKrecovery<n>:NAFRe	191
3.13.20	:CLOCKrecovery<n>:POFRe	192
3.13.21	:CLOCKrecovery<n>:MULTi	192
3.13.22	:CLOCKrecovery<n>:EXTChan	193
3.13.23	:CLOCKrecovery<n>:ALIGn	194
3.13.24	:CLOCKrecovery<n>:FREQuency	194
3.14	:THReshold Commands (Option)	195
3.14.1	:THReshold:GENeral:SOURce	195
3.14.2	:THReshold<n>:GENeral:METHod	196
3.14.3	:THReshold<n>:GENeral:LEVel	197
3.14.4	:THReshold<n>:GENeral:PHIGH	197
3.14.5	:THReshold<n>:GENeral:PMID	198
3.14.6	:THReshold<n>:GENeral:PLOW	199
3.14.7	:THReshold<n>:GENeral:LHIGH	199
3.14.8	:THReshold<n>:GENeral:LMID	200
3.14.9	:THReshold<n>:GENeral:LLOW	201
3.14.10	:THReshold<n>:GENeral:HYSTeresis	201
3.14.11	:THReshold<n>:GENeral:ALIGnzero	202
3.14.12	:THReshold<n>:GENeral:TAUTo	203
3.14.13	:THReshold<n>:GENeral:HCUSStomer	203
3.14.14	:THReshold<n>:GENeral:LCUSStomer	204
3.15	:SIGNAltype Commands (Option)	204
3.15.1	:SIGNAltype:SOURce	205
3.15.2	:SIGNAltype<n>:TYPE	205
3.16	Jitter Analysis Commands (option)	206
3.16.1	:TIE	206
3.16.1.1	:TIE:ENABle	208
3.16.1.2	:TIE:SOURce	209
3.16.1.3	:TIE:TYPE	209
3.16.1.4	:TIE:EDGE	210
3.16.1.5	:TIE:UNIT	210
3.16.1.6	:TIE:TREND:ENABle	211
3.16.1.7	:TIE:TREND:SMOoth:ENABle	211
3.16.1.8	:TIE:TREND:SMOoth:FACTor	212

3.16.1.9 :TIE:SPECTrum:ENABle	213
3.16.1.10 :TIE:HISTogram:ENABle	213
3.16.1.11 :TIE:RESult:ENABle	214
3.16.1.12 :TIE:RESult:TIE	214
3.16.1.13 :TIE:RESult:CYCY	215
3.16.1.14 :TIE:RESult:POSPos	216
3.16.1.15 :TIE:RESult:NEGNeg	216
3.16.1.16 :TIE:RESult:DUTY	217
3.16.1.17 :TIE:RESult:DTIE	217
3.16.1.18 :TIE:RESult:DHISt	218
3.16.1.19 :TIE:RESet	218
3.17 IEEE488.2 Common Commands	219
3.17.1 *IDN?	221
3.17.2 *RST	221
3.17.3 *CLS	222
3.17.4 *ESE	222
3.17.5 *ESR?	223
3.17.6 *OPC	223
3.17.7 *RCL	224
3.17.8 *SAV	224
3.17.9 *SRE	225
3.17.10 *STB?	226
3.17.11 *WAI	226
3.17.12 *TST?	227
3.18 :LA Commands	227
3.18.1 :LA:ENABle	227
3.18.2 :LA:ACTive	228
3.18.3 :LA:POSition	229
3.18.4 :LA:AUTosort	229
3.18.5 :LA:DIGital:ENABle	230
3.18.6 :LA:DIGital:LABel	231
3.18.7 :LA:POD<n>:DISPlay	231
3.18.8 :LA:POD<n>:THReshold	232
3.18.9 :LA:POD<n>:LABel:ENABle	233
3.18.10 :LA:POD<n>:INSert?	234
3.18.11 :LA:SIZE	234
3.18.12 :LA:PROBecal:DELay	235

3.18.13	:LA:LAYer:ACTive	236
3.19	:LAN Commands	236
3.19.1	:LAN:DHCP	236
3.19.2	:LAN:AUTOip	237
3.19.3	:LAN:GATeway	238
3.19.4	:LAN:DNS	239
3.19.5	:LAN:MAC?	239
3.19.6	:LAN:DSErver?	240
3.19.7	:LAN:MANual	240
3.19.8	:LAN:IPADdress	241
3.19.9	:LAN:SMASk	242
3.19.10	:LAN:STATus?	242
3.19.11	:LAN:VISA?	243
3.19.12	:LAN:MDNS	244
3.19.13	:LAN:HOST:NAME	244
3.19.14	:LAN:DESCription	245
3.19.15	:LAN:APPLY	245
3.20	:MASK Commands	246
3.20.1	:MASK:ENABle	246
3.20.2	:MASK:SOURce	247
3.20.3	:MASK:OPERate	247
3.20.4	:MASK:X	248
3.20.5	:MASK:Y	249
3.20.6	:MASK:CREate	249
3.20.7	:MASK:RESet	250
3.20.8	:MASK:FAILed?	250
3.20.9	:MASK:PASSed?	251
3.20.10	:MASK:TOTal?	251
3.20.11	:MASK:OUTPut:ENABle	252
3.20.12	:MASK:OUTPut:EVENT	252
3.20.13	:MASK:OUTPut:TIME	253
3.20.14	:MASK:OUTPut:POLarity	254
3.21	:MATH<n> Commands	254
3.21.1	:MATH<n>:DISPlay	257
3.21.2	:MATH<n>:OPERator	258
3.21.3	:MATH<n>:SOURce1	259
3.21.4	:MATH<n>:SOURce2	260

3.21.5	:MATH<n>:LSourc1	261
3.21.6	:MATH<n>:LSourc2	262
3.21.7	:MATH<n>:SCALE	262
3.21.8	:MATH<n>:OFFSet	263
3.21.9	:MATH<n>:INVert	264
3.21.10	:MATH<n>:GRID	264
3.21.11	:MATH<n>:DISMode	265
3.21.12	:MATH<n>:RESet	266
3.21.13	:MATH<n>:EXPand	266
3.21.14	:MATH<n>:WAVetype	267
3.21.15	:MATH<n>:FFT:SOURce	268
3.21.16	:MATH<n>:FFT:WINDow	268
3.21.17	:MATH<n>:FFT:UNIT	269
3.21.18	:MATH<n>:FFT:MODE	270
3.21.19	:MATH<n>:FFT:AVCNt	270
3.21.20	:MATH<n>:FFT:SCALE	271
3.21.21	:MATH<n>:FFT:OFFSet	272
3.21.22	:MATH<n>:FFT:HSCale	273
3.21.23	:MATH<n>:FFT:HCENter	273
3.21.24	:MATH<n>:FFT:FREQuency:START	274
3.21.25	:MATH<n>:FFT:FREQuency:END	275
3.21.26	:MATH<n>:FFT:SEARch:ENABLE	275
3.21.27	:MATH<n>:FFT:SEARch:NUM	276
3.21.28	:MATH<n>:FFT:SEARch:THReshold	277
3.21.29	:MATH<n>:FFT:SEARch:EXCursion	277
3.21.30	:MATH<n>:FFT:SEARch:ORDer	278
3.21.31	:MATH<n>:FFT:SEARch:RES?	279
3.21.32	:MATH<n>:FILTer:TYPE	279
3.21.33	:MATH<n>:FILTer:W1	280
3.21.34	:MATH<n>:FILTer:W2	282
3.21.35	:MATH<n>:FILTer:BTWT:TYPE	282
3.21.36	:MATH<n>:FILTer:BTWT:ORDer	284
3.21.37	:MATH<n>:SENSitivity	284
3.21.38	:MATH<n>:DISTance	285
3.21.39	:MATH<n>:THReshold1	285
3.21.40	:MATH<n>:THReshold2	286
3.21.41	:MATH<n>:THReshold3	287

3.21.42	:MATH<n>:THReshold4	288
3.21.43	:MATH<n>:WINDow:TITLe?	289
3.21.44	:MATH<n>:LABel:SHOW	289
3.22	:MEASure Commands	290
3.22.1	:MEASure:SOURce	296
3.22.2	:MEASure:ITEM	297
3.22.3	:MEASure:CLEar	298
3.22.4	:MEASure:DELeTe	299
3.22.5	:MEASure:AMSource	299
3.22.6	:MEASure:STATistic:COUNt	300
3.22.7	:MEASure:STATistic:DISPlay	300
3.22.8	:MEASure:STATistic:RESet	301
3.22.9	:MEASure:STATistic:ITEM	301
3.22.10	:MEASure:SETup:MAX	303
3.22.11	:MEASure:SETup:MID	304
3.22.12	:MEASure:SETup:MIN	304
3.22.13	:MEASure:SETup:PSA	305
3.22.14	:MEASure:SETup:PSB	306
3.22.15	:MEASure:SETup:DSA	307
3.22.16	:MEASure:SETup:DSB	307
3.22.17	:MEASure:THReshold:SOURce	308
3.22.18	:MEASure:THReshold:TYPE	309
3.22.19	:MEASure:THReshold:DEFault	309
3.22.20	:MEASure:AREA	310
3.22.21	:MEASure:TYPE	311
3.22.22	:MEASure:CREGion:CBX	311
3.22.23	:MEASure:CREGion:CAX	312
3.22.24	:MEASure:INDicator	313
3.22.25	:MEASure:COUNter:ENABle	313
3.22.26	:MEASure:COUNter:SOURce	314
3.22.27	:MEASure:COUNter:VALue?	315
3.22.28	:MEASure:AMP:TYPE	315
3.22.29	:MEASure:AMP:MANual:TOP	316
3.22.30	:MEASure:AMP:MANual:BASE	316
3.22.31	:MEASure:CATegory	317
3.22.32	:MEASure:HISTogram:STATistics:RESult?	317
3.22.33	:MEASure:MULTIwindow	318

3.22.34	:MEASure:EDGedelay	318
3.23	:QUICK Command	320
3.23.1	:QUICK:OPERation	320
3.24	:RECORD Commands	321
3.24.1	:RECORD:WRECORD:ENABLE	321
3.24.2	:RECORD:ENABLE	322
3.24.3	:RECORD:WRECORD:OPERate	322
3.24.4	:RECORD:START	323
3.24.5	:RECORD:WRECORD:FRAMES	324
3.24.6	:RECORD:FRAMES	324
3.24.7	:RECORD:WRECORD:FRAMES:MAX	325
3.24.8	:RECORD:WRECORD: FMAX?	325
3.24.9	:RECORD:WRECORD:FINTErval	326
3.24.10	:RECORD:WRECORD:PROMpt	326
3.24.11	:RECORD:WREPlay:FCURrent	327
3.24.12	:RECORD:CURREnt	328
3.24.13	:RECORD:WREPlay:FCURrent:TIME?	328
3.24.14	:RECORD:WREPlay:FSTart	329
3.24.15	:RECORD:WREPlay:FEND	329
3.24.16	:RECORD:WREPlay:FMAX?	330
3.24.17	:RECORD:WREPlay:FINTErval	330
3.24.18	:RECORD:WREPlay:MODE	331
3.24.19	:RECORD:WREPlay:DIRection	331
3.24.20	:RECORD:WREPlay:OPERate	332
3.24.21	:RECORD:PLAY	333
3.24.22	:RECORD:WREPlay:BACK	333
3.24.23	:RECORD:WREPlay:NEXT	334
3.24.24	:RECORD:WREPlay:PLAY	334
3.25	:REFERENCE Commands	335
3.25.1	:REFERENCE:SOURce	335
3.25.2	:REFERENCE:VSCale	336
3.25.3	:REFERENCE:VOFFset	336
3.25.4	:REFERENCE:RESet	337
3.25.5	:REFERENCE:HOFFset	337
3.25.6	:REFERENCE:CURREnt	338
3.25.7	:REFERENCE:SAVE	339
3.25.8	:REFERENCE:COLor	339

3.25.9	:REFeRence:LABel:ENABle	340
3.25.10	:REFeRence:LABel:CONTeNt	340
3.26	:SAVe Commands	341
3.26.1	:SAVe:IMAGe:INVeRt	341
3.26.2	:SAVe:IMAGe:COLoR	342
3.26.3	:SAVe:IMAGe:FORMat	342
3.26.4	:SAVe:IMAGe:HEADeR	343
3.26.5	:SAVe:IMAGe	344
3.26.6	:SAVe:SEtUp	344
3.26.7	:SAVe:WAVeform	345
3.26.8	:SAVe:MEMoRy:WAVeform	346
3.26.9	:SAVe:HISToGram	347
3.26.10	:SAVe:STATus?	348
3.26.11	:SAVe:OVERlap	348
3.26.12	:SAVe:PREFix	349
3.26.13	:SAVe:MASK	349
3.26.14	:SAVe:PATHName	350
3.26.15	:LOAD:SEtUp	351
3.26.16	:LOAD:MASK	351
3.27	:SEARch Commands	352
3.27.1	:SEARch:COUNt?	352
3.27.2	:SEARch:STATe	352
3.27.3	:SEARch:MODE	353
3.27.4	:SEARch:EVENt	354
3.27.5	:SEARch:VALue?	354
3.27.6	:SEARch:EDGE:SLOPe	355
3.27.7	:SEARch:EDGE:SOURce	355
3.27.8	:SEARch:EDGE:THReShold	356
3.27.9	:SEARch:PULSe:POLarity	357
3.27.10	:SEARch:PULSe:QUALifier	357
3.27.11	:SEARch:PULSe:SOURce	358
3.27.12	:SEARch:PULSe:UWIDth	359
3.27.13	:SEARch:PULSe:LWIDth	359
3.27.14	:SEARch:PULSe:THReShold	360
3.28	:NAVigate Commands	360
3.28.1	:NAVigate:ENABle	360
3.28.2	:NAVigate:MODE	361

3.28.3	:NAVigate:TIME:SPEEd	362
3.28.4	:NAVigate:TIME:PLAY	362
3.28.5	:NAVigate:TIME:END	363
3.28.6	:NAVigate:TIME:STARt	363
3.28.7	:NAVigate:TIME:NEXT	364
3.28.8	:NAVigate:TIME:BACK	364
3.28.9	:NAVigate:SEARch:END	365
3.28.10	:NAVigate:SEARch:STARt	365
3.28.11	:NAVigate:SEARch:NEXT	366
3.28.12	:NAVigate:SEARch:BACK	366
3.29	Function/Arbitrary Waveform Generator Commands	367
3.29.1	:OUTPut<n>:STATe	367
3.29.2	:OUTPut<n>:LOAD	368
3.29.3	:SOURce<n>:FUNCTion	368
3.29.4	:SOURce<n>:FUNCTion:RAMP:SYMMetry	369
3.29.5	:SOURce<n>:FUNCTion:PULSe:DCYCLE	370
3.29.6	:SOURce<n>:FUNCTion:PULSe:TRANSition:TRAILing	371
3.29.7	:SOURce<n>:FUNCTion:PULSe:TRANSition:LEADing	372
3.29.8	:SOURce<n>:FUNCTion:PULSe:WIDTh	373
3.29.9	:SOURce<n>:FUNCTion:SQUare:DCYCLE	374
3.29.10	:SOURce<n>:FUNCTion:ARBitrary	374
3.29.11	:SOURce<n>:ARB:LOAD	375
3.29.12	:SOURce<n>:VOLTage	376
3.29.13	:SOURce<n>:VOLTage:OFFSet	377
3.29.14	:SOURce<n>:VOLTage:HIGh	378
3.29.15	:SOURce<n>:VOLTage:LOW	378
3.29.16	:SOURce<n>:FREQuency	379
3.29.17	:SOURce<n>:PERiod[:FIXed]	380
3.29.18	:SOURce<n>:PHASe	381
3.29.19	:SOURce<n>:PHASe:SYNChronize	382
3.29.20	:SOURce<n>:AM:STATe	382
3.29.21	:SOURce<n>:AM[:DEPT]h	383
3.29.22	:SOURce<n>:AM:INTernal:FREQuency	384
3.29.23	:SOURce<n>:AM:INTernal:FUNCTion	384
3.29.24	:SOURce<n>:AM:DSSC	385
3.29.25	:SOURce<n>:FM:STATe	386
3.29.26	:SOURce<n>:FM:DEViation	386

3.29.27	:SOURce<n>:FM:INTernal:FREQuency	387
3.29.28	:SOURce<n>:FM:INTernal:FUNcTion	388
3.29.29	:SOURce<n>:PM:STATe	389
3.29.30	:SOURce<n>:PM:DEViation	389
3.29.31	:SOURce<n>:PM:INTernal:FREQuency	390
3.29.32	:SOURce<n>:PM:INTernal:FUNcTion	391
3.30	:SYSTem Commands	392
3.30.1	:SYSTem:AOUTput	392
3.30.2	:SYSTem:LANGUage	392
3.30.3	:SYSTem:BEEPer	393
3.30.4	:SYSTem:DATE	394
3.30.5	:SYSTem:ERRor[:NEXT]?	394
3.30.6	:SYSTem:RCLock	395
3.30.7	:SYSTem:PON	396
3.30.8	:SYSTem:PSTatus	396
3.30.9	:SYSTem:OPTion:INSTall	397
3.30.10	:SYSTem:OPTion:UNINStall	398
3.30.11	:SYSTem:OPTion:STATus?	399
3.30.12	:SYSTem:OPTion:VALid?	400
3.30.13	:SYSTem:RAMount?	401
3.30.14	:SYSTem:RESet	402
3.30.15	:SYSTem:SETup	402
3.30.16	:SYSTem:TIME	403
3.30.17	:SYSTem:LOCKed	404
3.30.18	:SYSTem:MODules?	404
3.30.19	:SYSTem:AUToscale	405
3.30.20	:SYSTem:KEY:PRESS	406
3.30.21	:SYSTem:GAMount?	407
3.30.22	:SYSTem:STIME	408
3.30.23	:SYSTem:VERSion?	408
3.31	:TIMebase Commands	409
3.31.1	:TIMebase:DELay:ENABle	409
3.31.2	:TIMebase:DELay:OFFSet	410
3.31.3	:TIMebase:DELay:SCALE	411
3.31.4	:TIMebase[:MAIN][:OFFSet]	411
3.31.5	:TIMebase[:MAIN]:SCALE	412
3.31.6	:TIMebase:MODE	413

3.31.7	:TIMebase:HREference:MODE	413
3.31.8	:TIMebase:HREference:POSition	414
3.31.9	:TIMebase:VERNier	415
3.31.10	:TIMebase:HOTKeys	416
3.31.11	:TIMebase:ROLL	416
3.31.12	:TIMebase:XY:ENABLE	417
3.31.13	:TIMebase:XY:X	417
3.31.14	:TIMebase:XY:Y	418
3.31.15	:TIMebase:XY:GRID	419
3.32	:TRIGger Commands	419
3.32.1	:TRIGger:MODE	419
3.32.2	:TRIGger:COUPling	420
3.32.3	:TRIGger:STATus?	421
3.32.4	:TRIGger:SWEep	421
3.32.5	:TRIGger:HOLDoff	422
3.32.6	:TRIGger:NREJect	423
3.32.7	:TRIGger:POSition?	424
3.32.8	:TRIGger:EDGE	424
3.32.8.1	:TRIGger:EDGE:SOURce	424
3.32.8.2	:TRIGger:EDGE:SLOPe	425
3.32.8.3	:TRIGger:EDGE:LEVel	425
3.32.9	:TRIGger:PULSe	426
3.32.9.1	:TRIGger:PULSe:SOURce	427
3.32.9.2	:TRIGger:PULSe:POLarity	427
3.32.9.3	:TRIGger:PULSe:WHEN	428
3.32.9.4	:TRIGger:PULSe:UWIDth	429
3.32.9.5	:TRIGger:PULSe:LWIDth	429
3.32.9.6	:TRIGger:PULSe:LEVel	430
3.32.10	:TRIGger:SLOPe	431
3.32.10.1	:TRIGger:SLOPe:SOURce	431
3.32.10.2	:TRIGger:SLOPe:POLarity	432
3.32.10.3	:TRIGger:SLOPe:WHEN	432
3.32.10.4	:TRIGger:SLOPe:TUPPer	433
3.32.10.5	:TRIGger:SLOPe:TLOWer	434
3.32.10.6	:TRIGger:SLOPe:WINDow	434
3.32.10.7	:TRIGger:SLOPe:ALEVel	435
3.32.10.8	:TRIGger:SLOPe:BLEVel	436

3.32.11	:TRIGger:VIDeo	436
3.32.11.1	:TRIGger:VIDeo:SOURce	436
3.32.11.2	:TRIGger:VIDeo:POLarity	437
3.32.11.3	:TRIGger:VIDeo:MODE	438
3.32.11.4	:TRIGger:VIDeo:LINE	438
3.32.11.5	:TRIGger:VIDeo:STANdard	440
3.32.11.6	:TRIGger:VIDeo:LEVel	441
3.32.12	:TRIGger:PATtern	441
3.32.12.1	:TRIGger:PATtern:PATtern	442
3.32.12.2	:TRIGger:PATtern:SOURce	443
3.32.12.3	:TRIGger:PATtern:LEVel	444
3.32.13	:TRIGger:DURation	444
3.32.13.1	:TRIGger:DURation:SOURce	445
3.32.13.2	:TRIGger:DURation:TYPE	446
3.32.13.3	:TRIGger:DURation:WHEN	447
3.32.13.4	:TRIGger:DURation:TUPPer	447
3.32.13.5	:TRIGger:DURation:TLOWer	448
3.32.13.6	:TRIGger:DURation:LEVel	449
3.32.14	:TRIGger:TIMEout	450
3.32.14.1	:TRIGger:TIMEout:SOURce	450
3.32.14.2	:TRIGger:TIMEout:SLOPe	451
3.32.14.3	:TRIGger:TIMEout:TIME	452
3.32.14.4	:TRIGger:TIMEout:LEVel	452
3.32.15	:TRIGger:RUNT	453
3.32.15.1	:TRIGger:RUNT:SOURce	453
3.32.15.2	:TRIGger:RUNT:POLarity	454
3.32.15.3	:TRIGger:RUNT:WHEN	454
3.32.15.4	:TRIGger:RUNT:WUPPer	455
3.32.15.5	:TRIGger:RUNT:WLOWer	456
3.32.15.6	:TRIGger:RUNT:ALEVel	457
3.32.15.7	:TRIGger:RUNT:BLEVel	457
3.32.16	:TRIGger:WINDows	458
3.32.16.1	:TRIGger:WINDows:SOURce	458
3.32.16.2	:TRIGger:WINDows:SLOPe	459
3.32.16.3	:TRIGger:WINDows:POSition	459
3.32.16.4	:TRIGger:WINDows:TIME	460
3.32.16.5	:TRIGger:WINDows:ALEVel	461

3.32.16.6 :TRIGger:WINDows:BLEVel	461
3.32.17 :TRIGger:DELaY	462
3.32.17.1 :TRIGger:DELaY:SA	462
3.32.17.2 :TRIGger:DELaY:ASLoP	463
3.32.17.3 :TRIGger:DELaY:SB	464
3.32.17.4 :TRIGger:DELaY:BSLoP	464
3.32.17.5 :TRIGger:DELaY:TYPE	465
3.32.17.6 :TRIGger:DELaY:TUPPer	466
3.32.17.7 :TRIGger:DELaY:TLOWer	466
3.32.17.8 :TRIGger:DELaY:ALEVel	467
3.32.17.9 :TRIGger:DELaY:BLEVel	468
3.32.18 :TRIGger:SHOLd	468
3.32.18.1 :TRIGger:SHOLd:DSRC	469
3.32.18.2 :TRIGger:SHOLd:CSRC	470
3.32.18.3 :TRIGger:SHOLd:SLOPe	470
3.32.18.4 :TRIGger:SHOLd:PATtern	471
3.32.18.5 :TRIGger:SHOLd:TYPE	471
3.32.18.6 :TRIGger:SHOLd:STIMe	472
3.32.18.7 :TRIGger:SHOLd:HTIMe	473
3.32.18.8 :TRIGger:SHOLd:DLEVel	474
3.32.18.9 :TRIGger:SHOLd:CLEVel	474
3.32.19 :TRIGger:NEDGe	475
3.32.19.1 :TRIGger:NEDGe:SOURce	475
3.32.19.2 :TRIGger:NEDGe:SLOPe	476
3.32.19.3 :TRIGger:NEDGe:IDLE	477
3.32.19.4 :TRIGger:NEDGe:EDGE	477
3.32.19.5 :TRIGger:NEDGe:LEVel	478
3.32.20 :TRIGger:RS232	479
3.32.20.1 :TRIGger:RS232:SOURce	479
3.32.20.2 :TRIGger:RS232:LEVel	480
3.32.20.3 :TRIGger:RS232:POLarity	480
3.32.20.4 :TRIGger:RS232:WHEN	481
3.32.20.5 :TRIGger:RS232:DATA	482
3.32.20.6 :TRIGger:RS232:BAUD	482
3.32.20.7 :TRIGger:RS232:BUSer	483
3.32.20.8 :TRIGger:RS232:WIDTh	483
3.32.20.9 :TRIGger:RS232:STOP	484

3.32.20.10	:TRIGger:RS232:PARity	484
3.32.21	:TRIGger:IIC	485
3.32.21.1	:TRIGger:IIC:SCL	485
3.32.21.2	:TRIGger:IIC:CLeVel	486
3.32.21.3	:TRIGger:IIC:SDA	487
3.32.21.4	:TRIGger:IIC:DLeVel	487
3.32.21.5	:TRIGger:IIC:WHEN	488
3.32.21.6	:TRIGger:IIC:AWIDth	489
3.32.21.7	:TRIGger:IIC:ADDReSS	490
3.32.21.8	:TRIGger:IIC:DIRection	490
3.32.21.9	:TRIGger:IIC:DBYTeS	491
3.32.21.10	:TRIGger:IIC:DATA	492
3.32.21.11	:TRIGger:IIC:CURRbit	492
3.32.21.12	:TRIGger:IIC:CODE	493
3.32.22	:TRIGger:SPI	493
3.32.22.1	:TRIGger:SPI:CLK	494
3.32.22.2	:TRIGger:SPI:SCL	494
3.32.22.3	:TRIGger:SPI:CLeVel	495
3.32.22.4	:TRIGger:SPI:SLOPe	496
3.32.22.5	:TRIGger:SPI:MISO	496
3.32.22.6	:TRIGger:SPI:SDA	497
3.32.22.7	:TRIGger:SPI:DLeVel	498
3.32.22.8	:TRIGger:SPI:WHEN	498
3.32.22.9	:TRIGger:SPI:CS	499
3.32.22.10	:TRIGger:SPI:SLeVel	500
3.32.22.11	:TRIGger:SPI:MODE	501
3.32.22.12	:TRIGger:SPI:TIMEout	501
3.32.22.13	:TRIGger:SPI:WIDTh	502
3.32.22.14	:TRIGger:SPI:DATA	502
3.32.22.15	:TRIGger:SPI:CURRbit	503
3.32.22.16	:TRIGger:SPI:CODE	503
3.32.23	:TRIGger:CAN	504
3.32.23.1	:TRIGger:CAN:BAUD	504
3.32.23.2	:TRIGger:CAN:SOURce	505
3.32.23.3	:TRIGger:CAN:STYPe	506
3.32.23.4	:TRIGger:CAN:WHEN	506
3.32.23.5	:TRIGger:CAN:SPOint	508

3.32.23.6	:TRIGger:CAN:EXTended	509
3.32.23.7	:TRIGger:CAN:DEFine	509
3.32.23.8	:TRIGger:CAN:DWIDth	510
3.32.23.9	:TRIGger:CAN:DATA	511
3.32.23.10	:TRIGger:CAN:CURRbit	512
3.32.23.11	:TRIGger:CAN:CODE	512
3.32.23.12	:TRIGger:CAN:LEVel	513
3.32.23.13	:TRIGger:CAN:FDbaud (Option)	513
3.32.23.14	:TRIGger:CAN:FDSPoint (Option)	514
3.32.24	:TRIGger:LIN (Option)	515
3.32.24.1	:TRIGger:LIN:SOURce	515
3.32.24.2	:TRIGger:LIN:LEVel	516
3.32.24.3	:TRIGger:LIN:STANdard	516
3.32.24.4	:TRIGger:LIN:BAUD	517
3.32.24.5	:TRIGger:LIN:SAMPlepoint	517
3.32.24.6	:TRIGger:LIN:WHEN	518
3.32.24.7	:TRIGger:LIN:ERRor	519
3.32.24.8	:TRIGger:LIN:ID	520
3.32.24.9	:TRIGger:LIN:DATA	520
3.32.24.10	:TRIGger:LIN:CURRbit	521
3.32.24.11	:TRIGger:LIN:CODE	521
3.32.24.12	:TRIGger:LIN:LEVel	522
3.32.25	:TRIGger:IIS (Option)	523
3.32.25.1	:TRIGger:IIS:SOURce:CLOCK	523
3.32.25.2	:TRIGger:IIS:CLEVel	524
3.32.25.3	:TRIGger:IIS:SOURce:WSElect	525
3.32.25.4	:TRIGger:IIS:SLEVel	525
3.32.25.5	:TRIGger:IIS:SOURce:DATA	526
3.32.25.6	:TRIGger:IIS:DLEVel	527
3.32.25.7	:TRIGger:IIS:CLOCK:SLOPe	527
3.32.25.8	:TRIGger:IIS:AUDio	528
3.32.25.9	:TRIGger:IIS:WHEN	529
3.32.25.10	:TRIGger:IIS:UWIDth	529
3.32.25.11	:TRIGger:IIS:WIDTh	530
3.32.25.12	:TRIGger:IIS:ALIGnment	531
3.32.25.13	:TRIGger:IIS:DATA	531
3.32.25.14	:TRIGger:IIS:DMIN	532

3.32.25.15	:TRIGger:ILS:DMAX	532
3.32.25.16	:TRIGger:ILS:CODE	533
3.32.26	:TRIGger:FLEXray (Option)	534
3.32.26.1	:TRIGger:FLEXray:SOURce	534
3.32.26.2	:TRIGger:FLEXray:LEVel	535
3.32.26.3	:TRIGger:FLEXray:BAUD	536
3.32.26.4	:TRIGger:FLEXray:CH	536
3.32.26.5	:TRIGger:FLEXray:WHEN	537
3.32.26.6	:TRIGger:FLEXray:POS	537
3.32.26.7	:TRIGger:FLEXray:FRAME	538
3.32.26.8	:TRIGger:FLEXray:ERRor	539
3.32.26.9	:TRIGger:FLEXray:DEFine	539
3.32.26.10	:TRIGger:FLEXray:CYCComp	540
3.32.26.11	:TRIGger:FLEXray:MAXCy	541
3.32.26.12	:TRIGger:FLEXray:MINCy	541
3.32.26.13	:TRIGger:FLEXray:IDCMp	542
3.32.26.14	:TRIGger:FLEXray:MINid	543
3.32.26.15	:TRIGger:FLEXray:MAXid	543
3.32.26.16	:TRIGger:FLEXray:SYMBOL	544
3.32.27	:TRIGger:M1553 (Option)	545
3.32.27.1	:TRIGger:M1553:SOURce	545
3.32.27.2	:TRIGger:M1553:ALEVel	546
3.32.27.3	:TRIGger:M1553:BLEVel	547
3.32.27.4	:TRIGger:M1553:POLarity	547
3.32.27.5	:TRIGger:M1553:WHEN	548
3.32.27.6	:TRIGger:M1553:SYNC	549
3.32.27.7	:TRIGger:M1553:ERRor	549
3.32.27.8	:TRIGger:M1553:DATComp	550
3.32.27.9	:TRIGger:M1553:DATValue	551
3.32.27.10	:TRIGger:M1553:DMAX	551
3.32.27.11	:TRIGger:M1553:DMIN	552
3.32.27.12	:TRIGger:M1553:DRTA	552
3.32.27.13	:TRIGger:M1553:DBIT	553
3.32.27.14	:TRIGger:M1553:CODE	554
3.33	:WAVEform Commands	554
3.33.1	:WAVEform:SOURce	557
3.33.2	:WAVEform:MODE	558

3.33.3	:WAVEform:FORMat	558
3.33.4	:WAVEform:POINts	559
3.33.5	:WAVEform:DATA?	560
3.33.6	:WAVEform:XINCrement?	560
3.33.7	:WAVEform:XORigin?	561
3.33.8	:WAVEform:XREFerence?	562
3.33.9	:WAVEform:YINCrement?	562
3.33.10	:WAVEform:YORigin?	563
3.33.11	:WAVEform:YREFerence?	564
3.33.12	:WAVEform:START	564
3.33.13	:WAVEform:STOP	565
3.33.14	:WAVEform:PREamble?	566
4	Application Examples	568
4.1	To Configure Basic Parameters	568
4.2	To Set Measurements	569
4.3	To Read the Waveform	570
5	Programming Examples	572
5.1	Programming Preparations	572
5.2	LabVIEW Programming Example	572
5.3	Visual Basic Programming Example	576
5.4	Visual C++ Programming Example	578

List of Figures

Figure 3.1 Schematic Diagram of Parallel Decoding	31
Figure 3.2 Schematic Diagram of RS232 Serial Bus	37
Figure 3.3 I2C Serial Bus	43
Figure 3.4 SPI Serial Bus	48
Figure 3.5 Sample Position	58
Figure 3.6 Cursors	114
Figure 3.7 Diagram of Eye Measurement Parameters	158
Figure 3.8 Schematic Diagram of RS232 Frame Format	479
Figure 3.9 Schematic Diagram of I2C Frame Format	485
Figure 3.10 Sequential Chart of SPI Bus	494
Figure 3.11 Data Frame Format of the CAN Bus	504
Figure 3.12 Data Frame Format of the LIN Bus	515
Figure 3.13 Sequential Chart of I2S Bus	523
Figure 3.14 Frame Format of FlexRay Bus	534
Figure 3.15 Formats of the Command Word, Data Word, and Status Word of the 1553B Bus	545
Figure 3.16 Parameter Definitions in NORMAL Mode	555
Figure 3.17 Parameter Definitions in RAW Mode	555

List of Tables

Table 3.256 Table of the Bit Definition of Standard Event Status Register	219
Table 3.257 Table of the Bit Definition of Status Byte Register	220
Table 3.294 Window Function	256
Table 3.295 Logic Operation Results	257

1 Document Overview

This manual introduces how to program and control MSO/DS9000 series via the remote interface by using the SCPI (Standard Commands for Programmable Instruments) commands. MSO/DS9000 series digital oscilloscope can be connected to the PC via the USB or LAN interface.



TIP

For the latest version of this manual, download it from the official website of RIGOL (<http://www.rigol.com>).

Publication Number

PGA40102-1110

Software Version

00.01.00

Software upgrade might change or add product features. Please acquire the latest version of the manual from RIGOL website or contact RIGOL to upgrade the software.

Format Conventions in this Manual

1. Key

The front panel key is denoted by the menu key icon. For example,  indicates the "DEFAULT" key.

2. Menu

The menu item is denoted by the format of "Menu Name (Bold) + Character Shading" in the manual. For example, **Setup** indicates the "Setup" sub-menu under the "Utility" function menu. You can click or tap **Setup** to access the "Setup" menu.

3. Operation Procedures

The next step of the operation is denoted by ">" in the manual. For example, 

> **Storage** indicates that first clicking or tapping the icon , then clicking or tapping **Storage**.

4. The front/rear panel connector is denoted by "Brackets + Connector Name (Bold)", for example, **[AUX OUT]**.

Content Conventions in this Manual

MSO/DS9000 series digital oscilloscope includes the following models, which support different combinations of features. Unless otherwise specified, this manual takes

DS9404 as an example to illustrate the functions and operation methods of MSO/DS9000 series oscilloscope.

Model	Max. Analog Bandwidth	Analog Channels	Function/ Arbitrary Waveform Generator Channels	Digital Channels	Bode Plot
DS9202	2 GHz	2	-	-	-
DS9204	2.5 GHz	4	-	-	-
DS9404	4 GHz	4	-	-	-
DS9604	6 GHz	4	-	-	-
MSO9402	4 GHz	2	2	16	Supported

2 Programming Overview

2.1 SCPI Command Overview

SCPI (Standard Commands for Programmable Instruments) is a standardized instrument programming language that is built upon the existing standard IEEE 488.1 and IEEE 488.2 and conforms to various standards, such as the floating point operation rule in IEEE 754 standard, ISO 646 7-bit coded character set for information interchange (equivalent to ASCII programming). The SCPI commands provide a hierarchical tree structure, and consist of multiple subsystems. Each command subsystem consists of one root keyword and one or more sub-keywords.

Syntax

The command line usually starts with a colon; the keywords are separated by colons, and following the keywords are the parameter settings available. The command ending with a quotation mark indicates querying a certain function and returns the query results. The keywords of the command and the first parameter are separated by a space.

For example,

```
:ACQuire:TYPE <type>
```

```
:ACQuire:TYPE?
```

ACQuire is the root keyword of the command, **TYPE** is the second-level keyword. The command line starts with a colon ":", and different levels of keywords are also separated by colons. *<type>* indicates a settable parameter. The command ending with a question mark "?" indicates querying a certain function. The command keywords **:ACQuire:TYPE** and the parameter *<type>* are separated by a space.

In some commands with parameters, "," is often used to separate multiple parameters. For example,

```
:SYSTem:DATE <year>,<month>,<day>
```

Symbol Description

The following symbols are not sent with the commands.

1. Braces { }

The contents in the braces can contain one or multiple parameters. These parameters can be omitted or used for several times. Parameters are usually separated by the vertical bar "|". When using the command, you must select one of the parameters.

2. Vertical Bar |

The vertical bar is used to separate multiple parameters. When using the command, you must select one of the parameters.

3. Square Brackets []

The contents in the square brackets can be omitted.

4. Angle Brackets < >

The parameter enclosed in the angle brackets must be replaced by an effective value.

Parameter Type

1. Bool

The parameter can be set to ON, OFF, 1, or 0. For example,

```
:SYSTem:BEEPer <bool>
```

```
:SYSTem:BEEPer?
```

Wherein, <bool> can be set to {{1|ON}}|{0|OFF}}. The query returns 1 or 0.

2. Discrete

The parameter can be any of the values listed. For example,

```
:SYSTem:PSTatus <sat>
```

```
:SYSTem:PSTatus?
```

Wherein,

- <sat> can be set to DEFault|OPEN.
- The query returns an abbreviated form: DEF or OPEN.

3. Integer

Unless otherwise specified, the parameter can be any integer (NR1 format) within the effective value range.



CAUTION

Do not set the parameter to a decimal, otherwise, errors will occur.

For example,

```
:DISPlay:GBRrightness <brightness>
```

```
:DISPlay:GBRrightness?
```

Wherein, <brightness> can be set to an integer ranging from 1 to 100. The query returns an integer ranging from 1 to 100.

4. Real

The parameter can be any real number within the effective value range, and this command accepts parameter input in decimal (NR2 format) and scientific notation (NR3 format). For example,

```
:TRIGger:TIMEout:TIME <time>
```

```
:TRIGger:TIMEout:TIME?
```

Wherein, <time> can be set to any real number ranging from 1.6E-8 (16 ns) to 1E+1 (10 s). The query returns a real number in scientific notation.

5. ASCII String

The parameter can be the combinations of ASCII characters. For example,

```
:LAN:GATeway <string>
```

Wherein, <string> can be set to

```
192.168.1.1
```

Command Abbreviation

The keywords of all the commands are case-insensitive. They can all be in upper case or in lower case. If an abbreviation is used, you must input all the capital letters in the command. For example,

```
:DISPlay:GBRightness?
```

can be abbreviated as

```
:DISP:GBR?
```

2.2 Remote Control

The instrument can communicate with the PC via the USB interface and LAN interface to realize remote control of the instrument by using the SCPI (Standard Commands for Programmable Instruments) commands.

Web Control

When the instrument is connected to the PC via the LAN interface, you can use Web Control to send SCPI commands from the PC to the instrument. The operation procedures are as follows:

1. Obtain the instrument's IP address and input it in the browser address bar to log in to the Web Control page.
2. After you enter the Web Control interface, click the "SCPI Panel Control" button to enter the SCPI Command interface.

3. Input the specified SCPI command and then click **Send & Read** to send the command. The operation process and the returned value will be displayed in the current interface.


2.3 Sequential Commands and Overlapped Commands

IEEE488.2 defines the differentiation between the Sequential commands and the Overlapped commands.

- **Sequential Commands**

Commands that shall be executed in sequence. Before completing the execution of one sequential command, another command shall not be executed. A command is a Sequential Command when Execution Control waits for the resulting device action to complete before it initiates the next device action.

 
The following figure shows the example of the sequence order for the sequential command.

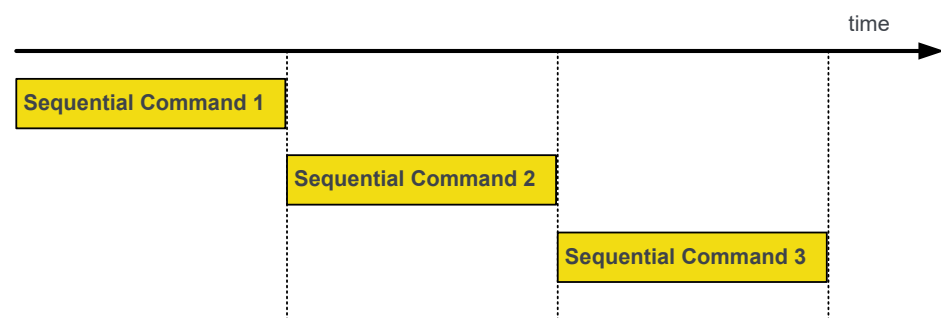

- **Overlapped Commands**

Commands that can be executed with several other commands being executed in parallel. During the execution process, several commands may be overlapped with each other. An overlapped command is a command that allows execution of subsequent commands while the device operations initiated by that overlapped command are still in progress.

 
The following figure shows the example of the sequence order for the overlapped command.

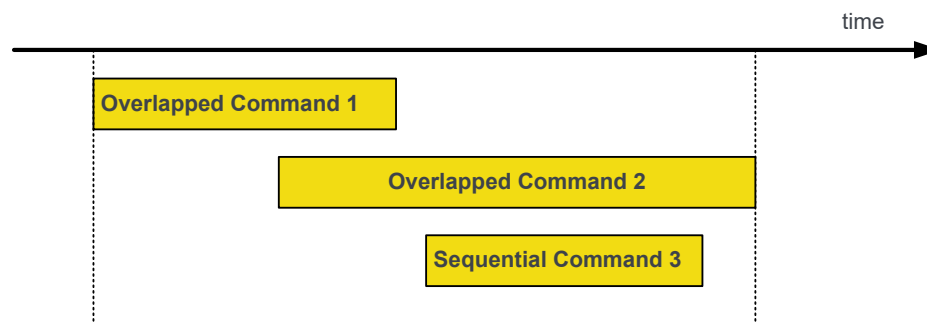

To ensure that the instrument functions can be synchronized through the commands executed in the specified order and query the command execution status, IEEE488.2 defines three general commands (**WAI*, **OPC*, and **OPC?*) to check the operation complete (OPC) function of the instrument.

- ***WAI:** The **WAI* command shall prevent the instrument from executing further commands or queries until all the received commands have been completely executed. The **WAI* command will not operate on the register.

 
If you want the overlapped commands to be executed in sequence just like the sequential commands, you can send the **WAI* command before or after the specified overlapped command. For example,

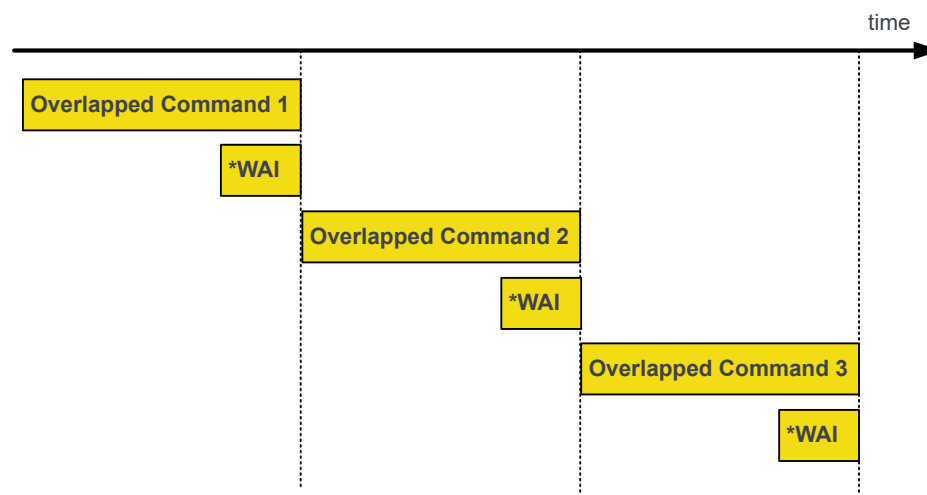

- ***OPC:** Upon receiving the **OPC* command, the instrument will wait until all the previously received commands have been completely executed. Meanwhile, it will set Bit 0 in the *Standard Event Register* to 1, and then execute the following commands.
- ***OPC?:** Upon receiving the **OPC?* Command, the instrument will query whether all the previous received commands have been completely executed. If

completed, the query returns 1; if not, it will wait until all the pending operations have been completed and then returns 1. The *OPC? command shall not operate on the register.

 If you want to query the execution status of a series of commands and control the execution sequence of the command, send the *OPC? Command. For example,

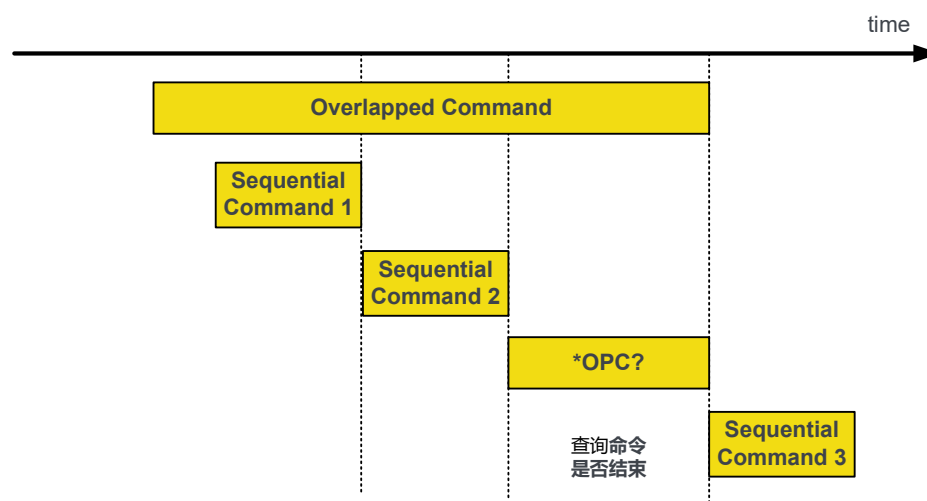

The following table lists the overlapped commands that support the Operation Complete (OPC) function. While using the overlapped commands, pay attention to the execution order of the command to avoid causing any abnormalities to the results.

Command	Constraint Condition
<i>*RST</i>	-

2.4 Compatible Commands

Compatible commands refer to the commands exist for backwards compatibility. After the syntax of the command has been updated to a new version, its old version can still be used and executed.

The following table lists the commands that exist for backwards compatibility and the new commands.

Current Commands	Compatible Commands
<i>:ACquire:MDepth</i>	<i>:ACquire:MEMDepth?</i>
<i>:BUS<n>:SPI:POLarity</i>	<i>:BUS<n>:SPI:MISO:POLarity</i> <i>:BUS<n>:SPI:MOSI:POLarity</i>

Current Commands	Compatible Commands
<i>:RECORD:WRECORD:ENABLE</i>	<i>:RECORD:ENABLE</i>
<i>:RECORD:WRECORD:OPERate</i>	<i>:RECORD:START</i>
<i>:RECORD:WRECORD:FRAMES</i>	<i>:RECORD:FRAMES</i>
<i>:RECORD:WREPLAY:FCURRENT</i>	<i>:RECORD:CURRENT</i>
<i>:RECORD:WREPLAY:OPERate</i>	<i>:RECORD:PLAY</i>
<i>:TRIGGER:SPI:CLK</i>	<i>:TRIGGER:SPI:SCL</i>
<i>:TRIGGER:SPI:MISO</i>	<i>:TRIGGER:SPI:SDA</i>

3 Command System

This chapter introduces the syntax, functions, parameters, and usage of each command. By default, only CH1 is enabled.



NOTE

For the parameter setting command (time, frequency, amplitude, etc.), the digital oscilloscope can only recognize the numbers, unable to recognize the unit sent together with them. The unit of the parameter is a default one. For the default units of various parameters, refer to the descriptions for the specified command.

3.1 Root Commands

Root level commands only have the root keywords, without the next level keywords. They control many of the basic operations of the instrument.

3.1.1 :CLEAr

Syntax

:CLEAr

Description

Clears all the waveforms on the screen.

This command functions the same as the front-panel key .

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.1.2 :RUN

Syntax

:RUN

Description

The :RUN command starts running the oscilloscope

This command functions the same as clicking or tapping the icon  in the quick operation bar at the upper-right part of the screen; or pressing the  key on the front panel.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.1.3 :STOP

Syntax

:STOP

Description

The :STOP command stops running the oscilloscope.

This command functions the same as clicking or tapping the icon  in the quick operation bar at the upper-right part of the screen; or pressing the  key on the front panel.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.1.4 :SINGle

Syntax

:SINGle

Description

Performs a single trigger. Sets the trigger mode of the oscilloscope to "Single". This command functions the same as sending the *:TRIGger:SWEEp SINGle* command.

This command functions the same as the front-panel key .

Parameter

N/A

Remarks

- In the single trigger mode, the oscilloscope performs a single trigger when the trigger conditions are met and then it stops.
- When the waveform recording function is enabled or the recorded waveforms are played back, this command is invalid.
- For the single trigger, you can use the *:TFORce* command to generate the trigger forcibly.

Return Format

N/A

Example

N/A

3.1.5 :TFORce

Syntax

:TFORce

Description

Generates a trigger signal forcefully. This command is only applicable to the normal and single trigger modes. Refer to the *:TRIGger:SWEEp* command).

This command functions the same as the  key in the trigger control area of the front panel.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.2 :AUToset Commands

The **:AUToset** commands are used to perform waveform auto setting operations.

3.2.1 :AUToset

Syntax**:AUToset****Description**

Enables the waveform auto setting function. The oscilloscope will automatically adjust the vertical scale, horizontal time base, and trigger mode according to the input signal to realize optimal waveform display.

This command functions the same as the front-panel key .

Parameter

N/A

Remarks

- When the AUTO function is disabled, this command is invalid. For details, refer to *:SYSTem:AUToscale*.
- When the pass/fail test is enabled, the AUTO function runs normally. When the pass/fail test is running, the AUTO function is disabled.
- When the waveform recording function is enabled, the AUTO function runs normally. When the oscilloscope records or plays the waveform, the AUTO function is disabled.

Return Format

N/A

Example

N/A

3.2.2 :AUToset:PEAK

Syntax`:AUToset:PEAK <bool>``:AUToset:PEAK?`**Description**

Sets or queries whether the peak-peak priority setting is enabled.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {0 OFF}}	1 ON

Remarks

This function is intended for the shifted signal. If there is a large deviation, you can view the signal waveform in priority when you enable the function.

Return Format

The query returns 0 or 1.

Example

```
:AUToset:PEAK OFF /*Disables the peak-peak priority setting.*/  
:AUToset:PEAK? /*The query returns 0.*/
```

3.2.3 :AUToset:OPENch

Syntax`:AUToset:OPENch <bool>``:AUToset:OPENch?`**Description**

Sets or queries whether to only test the enabled channel when performing the AUTO operation.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

- If you select "0|OFF", the system will test the four analog channels (CH1-CH4) in sequence when performing the AUTO operation. If no signal is found on the channel, then the channel is disabled. If a signal is found on the channel, adjust the channel to an optimal scale to show the signal.
- If you select "1|ON", the system will only test the enabled channels when performing the AUTO operation.

Return Format

The query returns 0 or 1.

Example

```
:AUToset:OPENch ON /*Sets to test only the enabled channel(s) for  
AUTO operation.*/  
:AUToset:OPENch? /*The query returns 1.*/
```

3.2.4 :AUToset:OVERlap

Syntax

:AUToset:OVERlap <bool>

:AUToset:OVERlap?

Description

Sets or queries whether to enable the waveform overlay display.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	1 ON

Remarks

- **1|ON:** enables the waveform overlay display. Waveforms of different channels will be displayed in the same position of the screen.

- **0|OFF:** disables the waveform overlay display. Waveforms of different channels will be displayed on the screen from top to bottom in sequence.

Return Format

The query returns 0 or 1.

Example

```
:AUToset:OVERlap OFF /*Disables the waveform overlay display.*/
:AUToset:OVERlap? /*The query returns 0.*/
```

3.2.5 :AUToset:KEEPCoup

Syntax

```
:AUToset:KEEPCoup <bool>
```

```
:AUToset:KEEPCoup?
```

Description

Sets or queries whether to enable keeping coupling.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

- **1|ON:** Enables keeping coupling. When enabled, the system performs auto setting operation. The settings for the channel coupling remain unchanged.
- **0|OFF:** Disables keeping coupling. When disabled, the channel is, by default, DC coupled.

Return Format

The query returns 0 or 1.

Example

```
:AUToset:KEEPCoup ON /*Sets to enable keeping coupling.*/
:AUToset:KEEPCoup? /*The query returns 1.*/
```

3.2.6 :AUToset:LOCK

Syntax

```
:AUToset:LOCK <bool>
```


:AUToset:LOCK?

Description

Sets or queries the on/off status of the AUTO function.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

- **1|ON:** locks the AUTO key; disables the AUTO function.
- **0|OFF:** unlocks the AUTO key; enables the AUTO function.

You can also send the **:AUToset:ENable** command to enable or disable the AUTO function.

Return Format

The query returns 0 or 1.

Example

```
:AUToset:LOCK ON /*Locks the AUTO key; disables the AUTO
function.*/
:AUToset:LOCK? /*The query returns 1.*/
```

3.2.7 :AUToset:ENable

Syntax

:AUToset:ENable <bool>

:AUToset:ENable?

Description

Sets or queries whether to enable the AUTO function.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	1 ON

Remarks

- **1|ON:** enables the AUTO function. It functions the same as enabling the front-

panel key .

- **0|OFF:** disables the AUTO function. It functions the same as disabling the front-panel key .

You can also send the **:AUToset:LOCK** command to enable or disable the AUTO function.

Return Format

The query returns 0 or 1.

Example

```
:AUToset:ENable OFF /*Disables the AUTO function.*/
:AUToset:ENable? /*The query returns 0.*/
```

3.3 :ACQuire Commands

The **:ACQuire** commands are used to set the memory depth of the oscilloscope, the acquisition mode, the average times, as well as query the current sample rate.

3.3.1 :ACQuire:AVERages

Syntax

```
:ACQuire:AVERages <count>
```

```
:ACQuire:AVERages?
```

Description

Sets or queries the number of averages in the average acquisition mode.

Parameter

Name	Type	Range	Default
<count>	Integer	2 ⁿ (n is an integer, and its range is from 1 to 16).	2

Remarks

- You can send the **:ACQuire:TYPE** command to set the acquisition mode.
- In the average acquisition mode, greater number of averages can lower the noise and increase the vertical resolution; but will also slow the response of the displayed waveform to the waveform changes.
- The number of averages must be in the Nth power of 2. When the value is not in the Nth power of 2, a value that is smaller than the one you input and the closest

to the N power-of-2 increments will be input automatically. For example, if you input 9 with the numeric keypad, the average count will be input 8 automatically.

Return Format

The query returns an integer ranging from 2 to 65536.

Example

```
:ACquire:AVERages 128      /*Sets the average times to 128.*/  
:ACquire:AVERages?         /*The query returns 128.*/
```

3.3.2 :ACquire:BITS

Syntax

:ACquire:BITS <*bit*>

:ACquire:BITS?

Description

Sets or queries the resolution bits supported by the oscilloscope in high-resolution mode.

Parameter

Name	Type	Range	Default
<bit>	Discrete	{9 10 12 14 16}	14

Remarks

This oscilloscope supports 9-16 bits in high-resolution mode; 8 bits in other modes.

Return Format

The query returns the resolution bits in integer. Its unit is bit.

Example

```
:ACquire:BITS 16      /*Sets the resolution in high-resolution mode  
to 16 bits.*/  
:ACquire:BITS?         /*The query returns 16.*/
```

3.3.3 :ACquire:MDEPth

Syntax

:ACquire:MDEPth <*mdep*>

:ACquire:MDEPth?

Description

Sets or queries the memory depth of the oscilloscope (that is, the number of waveform points that can be stored through the sampling in a single trigger). The default unit is pts.

Parameter

Name	Type	Range	Default
<mdep>	Discrete	{AUTO 1k 10k 100k 1M 10M 50M 100M 200M 500M 1G 2G 1000 10000 100000 1000000 10000000 50000000 100000000 200000000 500000000 1000000000 2000000000 1e3 1e4 1e5 1e6 1e7 5e7 1e8 2e8 5e8 1e9 2e9}	10k

Remarks

When you select the "Auto" mode, the oscilloscope selects the memory depth automatically according to the current sample rate.

The max. memory depth is:

- CH1 and CH2 are considered as one group; CH3 and CH4 are considered as another group. When one channel of each group is enabled, the memory depths available include Auto, 1 Kpts, 10 Kpts, 100 Kpts, 1 Mpts, 10 Mpts, 100 Mpts, 200 Mpts, 500 Mpts, 1 Gpts (option), and 2 Gpts (option).
- CH1 and CH2 are considered as one group; CH3 and CH4 are considered as another group. When two channels in either one of the group are enabled, the memory depths available include Auto, 1 Kpts, 10 Kpts, 100 Kpts, 1 Mpts, 10 Mpts, 100 Mpts, 200 Mpts, 500 Mpts (option), 1 Gpts (option).
- The max. memory depth of DS9202 is 10 Mpts, and the memory depth option is not available for DS9202.

Modifying the memory depth may affect the sample rate. To query the current sample rate, run the `:ACQUIRE:SRATE?` command.

Return Format

The query returns the memory depth in scientific notation.

Example

```
:ACQUIRE:MDEPth 1M /*Sets the memory depth to 1M.*/
:ACQUIRE:MDEPth? /*The query returns 1.000E+6.*/
```

3.3.4 :ACQUIRE:MEMDepth?

Syntax

:ACQUIRE:MEMDepth?

Description

Queries the memory depth of the oscilloscope.

Parameter

N/A

Remarks

This command exists for backwards compatibility. Use the command *:ACQUIRE:MDEPth*.

Return Format

The query returns the memory depth in strings.

Example

```
:ACQUIRE:MEMDepth? /*The query returns 1.000E+6.*/
```

3.3.5 :ACQUIRE:TYPE

Syntax

:ACQUIRE:TYPE <type>

:ACQUIRE:TYPE?

Description

Sets or queries the acquisition mode of the oscilloscope.

Parameter

Name	Type	Range	Default
<type>	Discrete	{NORMAL PEAK AVERages HRESolution}	NORMAL

Remarks

- **NORMAL:** In this mode, the oscilloscope samples the signal at a specified fixed time interval to rebuild the waveform. For most of the waveforms, using this mode can produce the optimal display effects.

- **AVERages:** In this mode, the oscilloscope averages the waveforms from multiple samples to reduce the random noise of the input signal and improve the vertical resolution. Greater number of averages can lower the noise and increase the vertical resolution; while at the same time, it will slow the response of the displayed waveform to the waveform changes.
- **PEAK:** indicates the peak detection. In this mode, the oscilloscope samples the maximum and minimum value of the signal at the fixed sampling interval to acquire the signal envelope or the narrow pulses that might be lost. In this mode, signal aliasing can be prevented, but the noise displayed would be larger.
- **HRESolution:** indicates high resolution. The oscilloscope will average the adjacent sample points of the sample waveform to lower the random noises of the input signals and display much more smoother waveforms. If the sample rate of the digital converter is greater than the storage rate of the acquisition memory, this mode is often adopted.

Return Format

The query returns NORM, PEAK, AVER, HRES.

Example

```
:ACQUIRE:TYPE AVERages /*Sets the acquisition mode to Average.*/
:ACQUIRE:TYPE? /*The query returns AVER.*/
```

3.3.6 :ACQUIRE:SRATE?

Syntax

:ACQUIRE:SRATE?

Description

Queries the current sample rate. The default unit is Sa/s.

Parameter

N/A

Remarks

- Sample rate indicates the frequency of the signal sampling, that is, the number of waveform points sampled per second.

- The sample rate and memory depth will change accordingly in accordance with the horizontal time base.

Return Format

The query returns the sample rate in scientific notation.

Example

```
:ACQuire:SRATe? /*The query returns 1.00000E+6.*/
```

3.4 :BUS<n> Commands

The **:BUS<n>** commands are used to execute the decoding-related settings and operations.

3.4.1 :BUS<n>:MODE

Syntax

```
:BUS<n>:MODE <mode>
```

```
:BUS<n>:MODE?
```

Description

Sets or queries the decoding type of the specified decoding bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<mode>	Discrete	{PARAllel RS232 SPI IIC LIN CAN IIS FLEXray M1553 SENT}	PARAllel

Remarks

Parallel, RS232, SPI, I2C, and CAN decodings are standard configurations. Other decodings are optional configurations. Only when the specified option has been installed, can this command be available.

Return Format

The query returns PAR, RS232, SPI, IIC, LIN, IIS, FLEX, M1553, SENT or CAN.

Example

```
:BUS1:MODE SPI /*Sets the decoding type of Bus 1 to SPI.*/
:BUS1:MODE? /*The query returns SPI.*/
```

3.4.2 :BUS<n>:DISPlay

Syntax

:BUS<n>:DISPlay <bool>

:BUS<n>:DISPlay?

Description

Enables or disables the specified decoding bus; or queries the on/off display status of the specified decoding bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<bool>	Bool	{{1 ON} {0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:BUS1:DISPlay ON      /*Enables the decoding bus.*/
:BUS1:DISPlay?        /*The query returns 1.*/
```

3.4.3 :BUS<n>:FORMat

Syntax

:BUS<n>:FORMat <format>

:BUS<n>:FORMat?

Description

Sets or queries the format of decoding data on the specified decoding bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<format>	Discrete	{HEX ASCIi DEC BIN}	HEX

Remarks

- **Hex:** indicates Hexadecimal;
- **ASCIi:** indicates ASCII;
- **DEC:** indicates Decimal;
- **BIN:** indicates Binary.

Return Format

The query returns HEX, ASC, DEC, or BIN.

Example

```
:BUS1:FORMat HEX      /*Sets the display format of the bus to HEX.*/
:BUS1:FORMat?         /*The query returns HEX.*/
```

3.4.4 :BUS<n>:EVENT

Syntax

:BUS<n>:EVENT <bool>

:BUS<n>:EVENT?

Description

Enables or disables the event table of the specified decoding bus; or queries the on/off status of the specified decoding bus event table.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<bool>	Bool	{{1 ON}} {0 OFF}}	0 OFF

Remarks

Before using the command, enable the specified decoding bus.

Return Format

The query returns 1 or 0.

Example

```
:BUS1:EVENT ON      /*Enables the event table of the specified
decoding bus.*/
:BUS1:EVENT?        /*The query returns 1.*/
```

3.4.5 :BUS<n>:LABel

Syntax

:BUS<n>:LABel <bool>

:BUS<n>:LABel?

Description

Enables or disables the label of the specified decoding bus; or queries the on/off display status of the label of the specified decoding bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<bool>	Bool	{{1 ON}}{0 OFF}}	1 ON

Remarks

Before using the command, enable the specified decoding bus.

Return Format

The query returns 1 or 0.

Example

```
:BUS1:LABel ON /*Enables the label of the specified decoding bus.*/
:BUS1:LABel? /*The query returns 1.*/
```

3.4.6 :BUS<n>:DATA?

Syntax

:BUS<n>:DATA?

Description

Reads the data from the decoding event table.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-

Remarks

N/A

Return Format

The query returns the data in the decoding event table with the following formats.

```
#9000000086PARALLEL
Time,Data,
-2.47us,0,
-2.444us,1,
-1.448us,0,
-446ns,1,
551.6ns,0,
1.554us,1,
```

Wherein, "#9000000086" is the TMC data block header, which is followed by the data in the event table. The 9-digit data following #9 in the data block header indicates the number of bytes of the effective data. "PARALLEL" indicates the decoding type. The available decoding type can also be RS232, I2C, SPI, LIN, and etc. The data are separated by a comma, and will automatically switch to the next line according to the data information in the decoding list. The data value is related to the numeral system that you have set.



CAUTION

You can save all the data (except TMC data block header and decoding type, e.g. #9000000086PARALLEL) as the "*.csv" file and view the data in the form of a list.

Example

N/A

3.4.7 :BUS<n>:EEXPort

Syntax

:BUS<n>:EEXPort <path>

Description

Exports the decoding information from the specified decoding bus event table in CSV form.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<path>	ASCII String	Refer to <i>Remarks</i>	-

Remarks

- <path> includes the file storage location and the filename with a suffix. If the specified storage location already contains a file with the same filename, the original file will be overwritten.
- When the operating status of the instrument is STOP (set it by sending the **.STOP** command), you can export the time and corresponding decoding data from the current event table.
- This command is valid when the display of the event table is enabled. You can enable the display of the event table by sending the **:BUS<n>:EVENTt** command.
- The stored "*.csv" file can be opened and edited in Excel.

Return Format

N/A

Example

```
:BUS1:EEEXPort C:/123.csv /*Exports the decoding information from
the bus event table and saves it to the local Disk C, with the
filename 123.csv.*/
```

3.4.8 :BUS<n>:POSition

Syntax

```
:BUS<n>:POSition <pos>
```

```
:BUS<n>:POSition?
```

Description

Sets or queries the vertical position of the bus on the screen.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<pos>	Integer	-250 to 250	0

Remarks

N/A

Return Format

The query returns an integer ranging from -250 to 250.

Example

```
:BUS1:POSition 200 /*Sets the vertical position of the bus to
200.* /
:BUS1:POSition? /*The query returns 200.* /
```

3.4.9 :BUS<n>:THReshold

Syntax

:BUS<n>:THReshold <value>,<type>

:BUS<n>:THReshold? <type>

Description

Sets or queries the threshold of the specified decoding source on the specified decoding bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<value>	Real	(-5 x VerticalScale - OFFSet) to (5 x VerticalScale - OFFSet)	0
<type>	Discrete	{PAL TX RX SCL SDA CS CLK MISO MOSI LIN CAN CANSUB1 FLEX1553 I2SCLK DATA WS SENT PALCLK CH1 CH2 CH3 CH4}	-

Remarks

For VerticalScale, refer to the :CHANnel<n>:SCALE command. For OFFSet, refer to the :CHANnel<n>:OFFSet command.

- **PAL:** indicates the bus source of Parallel decoding.
- **PALCLK:** indicates the clock source of Parallel decoding. Only when the source is enabled, can you set the threshold.
- **TX:** indicates the TX channel source of RS232 decoding.
- **RX:** indicates the RX channel source of RS232 decoding. Only when the RX source is enabled, can you set the threshold.

- **SCL:** indicates the clock source of I2C decoding.
- **SDA:** indicates the data source of I2C decoding.
- **DATA:** indicates the data source of I2S decoding.
- **WS:** indicates the audio channel of I2S decoding.
- **I2SClk:** indicates the clock source of I2S decoding.
- **CS:** indicates the source of the CS line of SPI decoding.
- **CLK:** indicates the clock source of SPI decoding.
- **MISO:** indicates the MISO data source of SPI decoding.
- **MOSI:** indicates the MOSI data source of SPI decoding.
- **LIN:** indicates the bus source of LIN decoding.
- **CAN|CANSub1:** indicates the source of CAN decoding.
- **1553:** indicates the channel source of M1553 decoding.
- **FLEX:** indicates the source of FlexRay decoding.
- **SENT:** indicates the source of SENT decoding.
- **CH1|CH2|CH3|CH4:** CH1-CH4, available for all the decoding types.

Return Format

The query returns the threshold of the specified decoding source in scientific notation.

Example

```
:BUS1:THReshold 2.4,PAL /*Sets the threshold of the Parallel
decoding source to 2.4 V.*/
:BUS1:THReshold? PAL /*The query returns 2.400000E0.*/
```

3.4.10 :BUS<n>:PARallel

:BUS<n>:PARallel commands are used to set relevant parameters for parallel decoding.

Parallel bus consists of clock line and data line. As shown in the figure below is the MSB decoding diagram, CLK is the clock line, whereas Bit0 and Bit1 are the 0 bit and 1st bit on the data line respectively. The oscilloscope will sample the channel data on the rising edge, falling edge, or the rising/falling edge of the clock and judge each data point (logic "1" or logic "0") according to the preset threshold level.

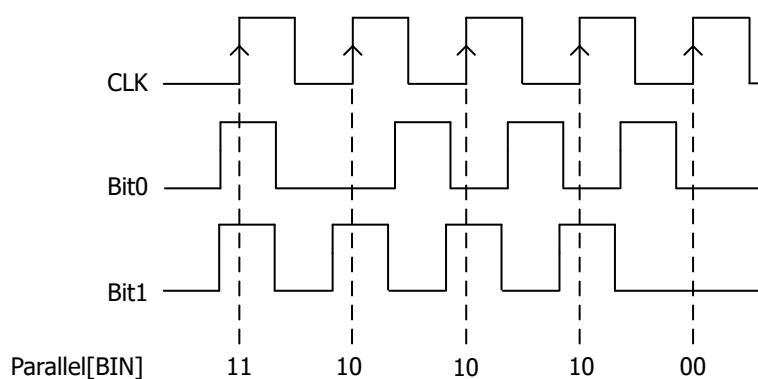 


Figure 3.1 Schematic Diagram of Parallel Decoding

3.4.10.1 :BUS<n>:PARallel:BUS

Syntax

```
:BUS<n>:PARallel:BUS <source>
```

```
:BUS<n>:PARallel:BUS?
```

Description

Sets or queries the source of Parallel decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<source>	Discrete	{D7D0 D15D8 D15D0 D0D7 D8D15 D0D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4 USER}	CHANnel1

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D7D0, D15D8, D15D0, D0D7, D8D15, D0D15, CHAN1, CHAN2, CHAN3, CHAN4 or USER.

Example

```
:BUS1:PARallel:BUS CHANnel1 /*Sets the source of Parallel
decoding on Bus 1 to CHANnel1.*/
:BUS1:PARallel:BUS? /*The query returns CHAN1.*/
```

3.4.10.2 :BUS<n>:PARAllel:CLK**Syntax**

```
:BUS<n>:PARAllel:CLK <source>
```

```
:BUS<n>:PARAllel:CLK?
```

Description

Sets or queries the clock source of Parallel decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4 OFF}	OFF

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, CHAN4 or OFF.

Example

```
:BUS1:PARAllel:CLK CHANnel2 /*Sets the clock source of Parallel
decoding on Bus 1 to CHANnel2.*/
:BUS1:PARAllel:CLK? /*The query returns CHAN2.*/
```

3.4.10.3 :BUS<n>:PARAllel:SLOPe**Syntax**

```
:BUS<n>:PARAllel:SLOPe <slope>
```

```
:BUS<n>:PARAllel:SLOPe?
```

Description

Sets or queries the edge type of the clock channel when being sampled by Parallel decoding on the data channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<slope>	Discrete	{POSitive NEGative BOTH}	POSitive

Remarks

If no clock channel is selected, the instrument will sample when the channel data hopping occurs during the decoding.

Return Format

The query returns POS, NEG, or BOTH.

Example

```
:BUS1:PARallel:SLOPe BOTH /*Sets the Parallel decoding to
sample on any edge of the clock channel.*/
:BUS1:PARallel:SLOPe? /*The query returns BOTH.*/
```

3.4.10.4 :BUS<n>:PARallel:WIDTh**Syntax**

:BUS<n>:PARallel:WIDTh <wid>

:BUS<n>:PARallel:WIDTh?

Description

Sets or queries the data width (number of bits per frame) of Parallel decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<wid>	Integer	Analog channel: 1 to 4; digital channel: 1 to 16	1

Remarks

- Only when the data source (bus) is set to User (*BUS<n>:PARallel:BUS USER*), can this command be available to use.

- After you send this command to set the data width of the bus, send the `:BUS<n>:PARAllel:BITX` and `:BUS<n>:PARAllel:SOURce` commands to select the bit respectively and set the channel source for the bit.

Return Format

The query returns an integer ranging from 1 to 4 or 1 to 16.

Example

```
:BUS1:PARAllel:WIDTh 4      /*Sets the data width of Parallel
decoding to 4.*/
:BUS1:PARAllel:WIDTh?      /*The query returns 4.*/
```

3.4.10.5 :BUS<n>:PARAllel:BITX

Syntax

`:BUS<n>:PARAllel:BITX <bit>`

`:BUS<n>:PARAllel:BITX?`

Description

Sets or queries the data bit that the parallel bus requires to set for the channel source.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<bit>	Integer	0 to (data width - 1)	0

Remarks

- Only when the bus source is set to User (`BUS<n>:PARAllel:BUS USER`), can this command be valid.
- The data width is set by the `:BUS<n>:PARAllel:WIDTh` command.
- After selecting the desired bit, send the `:BUS<n>:PARAllel:SOURce` command to set the channel source for the bit.

Return Format

The query returns the current data bits in integer. Its unit is Hz.

Example

```
:BUS1:PARAllel:BITX 2      /*Sets the current bit to 2.*/
:BUS1:PARAllel:BITX?      /*The query returns 2.*/
```

3.4.10.6 :BUS<n>:PARAllel:SOURce**Syntax**

```
:BUS<n>:PARAllel:SOURce <src>
```

```
:BUS<n>:PARAllel:SOURce?
```

Description

Sets or queries the channel source of the currently selected data bit.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<src>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	Related to the selected bit

Remarks

- Only when the bus source is set to User (*BUS<n>:PARAllel:BUS USER*), can this command be valid.
- Before sending this command, send the *:BUS<n>:PARAllel:BITX* command to select the desired data bit.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:BUS1:PARAllel:SOURce CHANnel2 /*Sets the channel source of the
current bit to CHANnel2.*/
:BUS1:PARAllel:SOURce?         /*The query returns CHAN2.*/
```

3.4.10.7 :BUS<n>:PARAllel:ENDian**Syntax**

```
:BUS<n>:PARAllel:ENDian <endian>
```

:BUS<n>:PARallel:ENDian?

Description

Sets or queries the endian of Parallel decoding on the specified decoding bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<endian>	Discrete	{MSB LSB}	LSB

Remarks

- **MSB:** indicates Most Significant Bit transmission sequence, i.g. the highest bit of the data is transmitted first.
- **LSB:** indicates Least Significant Bit transmission sequence, i.g. the lowest bit of the data is transmitted first.

Return Format

The query returns MSB or LSB.

Example

```
:BUS1:PARallel:ENDian LSB /*Sets the endian of Parallel decoding
to LSB.*/
:BUS1:PARallel:ENDian?      /*The query returns LSB.*/
```

3.4.10.8 :BUS<n>:PARallel:POLarity

Syntax

:BUS<n>:PARallel:POLarity <pol>

:BUS<n>:PARallel:POLarity?

Description

Sets or queries the data polarity of Parallel decoding.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<pol>	Discrete	{NEGative POSitive}	POSitive

Remarks

- **NEGative:** indicates negative polarity.
- **POSitive:** indicates positive polarity.

Return Format

The query returns NEG or POS.

Example

```
:BUS1:PARallel:POLarity NEGative /*Sets the data polarity of
Parallel decoding to Negative.*/
:BUS1:PARallel:POLarity? /*The query returns NEG.*/
```

3.4.11 :BUS<n>:RS232

The :BUS<n>:RS232 commands are used to set relevant parameters for RS232 decoding.

RS232 serial bus consists of the transmitting data line (TX) and the receiving data line (RX).


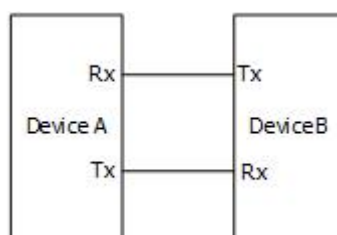 


Figure 3.2 Schematic Diagram of RS232 Serial Bus

 In RS232, baud rate is used to represent the transmission rate (namely bits per second) of the data. In RS232, you need to set the start bit, data bits, check bit (optional), and stop bit for each frame of data.

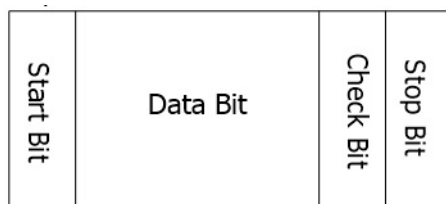

- **Start Bit:** indicates when to output data.
- **Data Bits:** indicates the number of data bits actually contained in each frame of data.
- **Check Bit:** used to check whether the data are properly transmitted.
- **Stop Bit:** indicates when to stop outputting data.

3.4.11.1 :BUS<n>:RS232:TX**Syntax**

```
:BUS<n>:RS232:TX <source>
```

```
:BUS<n>:RS232:TX?
```

Description

Sets or queries the Tx source of RS232 decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4 OFF}	CHANnel1

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

The Tx and Rx sources cannot be set to OFF at the same time. The Rx source can be set by using the *:BUS<n>:RS232:RX* command.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, CHAN4 or OFF.

Example

```
:BUS1:RS232:TX CHANnel2 /*Sets the Tx source of RS232 decoding
to CHANnel2.*/
:BUS1:RS232:TX? /*The query returns CHAN2.*/
```

3.4.11.2 :BUS<n>:RS232:RX**Syntax**

```
:BUS<n>:RS232:RX <source>
```

```
:BUS<n>:RS232:RX?
```

Description

Sets or queries the Rx source of RS232 decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4 OFF}	OFF

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

The Tx and Rx sources cannot be set to OFF at the same time. The Tx source can be set by using the *:BUS<n>:RS232:TX* command.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, CHAN4 or OFF.

Example

```
:BUS1:RS232:RX CHANnel2 /*Sets the Rx source of RS232 decoding
to CHANnel2.*/
:BUS1:RS232:RX? /*The query returns CHAN2.*/
```

3.4.11.3 :BUS<n>:RS232:POLarity**Syntax**

```
:BUS<n>:RS232:POLarity <pol>
```

```
:BUS<n>:RS232:POLarity?
```

Description

Sets or queries the polarity of RS232 decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<pol>	Discrete	{POSitive NEGative}	NEGative

Remarks

- **POSitive:** indicates positive polarity. High level is logic "1" and low level is logic "0".

- **NEGative:** indicates negative polarity. High level is logic "0" and low level is logic "1".

Return Format

The query returns POS or NEG.

Example

```
:BUS1:RS232:POLarity POSitive      /*Sets the polarity of RS232
decoding to POSitive.*/
:BUS1:RS232:POLarity?              /*The query returns POS.*/
```

3.4.11.4 :BUS<n>:RS232:PARity

Syntax

```
:BUS<n>:RS232:PARity <parity>
```

```
:BUS<n>:RS232:PARity?
```

Description

Sets or queries the odd-even check mode of data transmission in RS232 decoding.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<parity>	Discrete	{NONE ODD EVEN}	NONE

Remarks

- **NONE:** indicates that there is no parity bit in data transmission.
- **ODD:** indicates the odd parity bit. The total count of occurrences of 1 in the data bit and check bit is an odd number. For example, if 0x55 (01010101) is transmitted, 1 shall be added to the check bit.
- **EVEN:** indicates the even parity bit. The total count of occurrences of 1 in the data bit and check bit is an even number. For example, if 0x55 (01010101) is transmitted, 0 shall be added to the check bit.

Return Format

The query returns NONE, ODD, or EVEN.

Example

```
:BUS1:RS232:PARity ODD          /*Sets the odd-even check mode of
data transmission in RS232 decoding to ODD.*/
:BUS1:RS232:PARity?            /*The query returns ODD.*/
```

3.4.11.5 :BUS<n>:RS232:ENDian**Syntax**

```
:BUS<n>:RS232:ENDian <endian>
```

```
:BUS<n>:RS232:ENDian?
```

Description

Sets or queries the endian of data transmission in RS232 decoding.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<endian>	Discrete	{MSB LSB}	LSB

Remarks

- **LSB:** indicates Least Significant Bit transmission sequence, that is, the lowest bit of the data is transmitted first.
- **MSB:** indicates Most Significant Bit transmission sequence, that is, the highest bit of the data is transmitted first.

Return Format

The query returns LSB or MSB.

Example

```
:BUS1:RS232:ENDian MSB          /*Sets the transmission order of
RS232 decoding to MSB.*/
:BUS1:RS232:ENDian?            /*The query returns MSB.*/
```

3.4.11.6 :BUS<n>:RS232:BAUD**Syntax**

```
:BUS<n>:RS232:BAUD <baud>
```

```
:BUS<n>:RS232:BAUD?
```

Description

Sets or queries the baud rate of data transmission in RS232 decoding. The default unit is bps.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<baud>	Integer	1bps to 20Mbps	9600 bps

Remarks

If the baud rate is set to a value with "M", then "A" should be added at the end of the value. For example, if you send 5M, you need to send 5MA.

Return Format

The query returns an integer ranging from 1 to 20M.

Example

```
:BUS1:RS232:BAUD 4800 /*Sets the baud rate of data
transmission in RS232 decoding to 4800 bps.*/
:BUS1:RS232:BAUD? /*The query returns 4800.*/
```

3.4.11.7 :BUS<n>:RS232:DBITs**Syntax**

:BUS<n>:RS232:DBITs <bits>

:BUS<n>:RS232:DBITs?

Description

Sets or queries the data width of RS232 decoding.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<bits>	Discrete	{5 6 7 8 9}	8

Remarks

N/A

Return Format

The query returns 5, 6, 7, 8, or 9.

Example

```
:BUS1:RS232:DBITs 7 /*Sets the data width of RS232 decoding to 7.*/  
:BUS1:RS232:DBITs? /*The query returns 7.*/*
```

3.4.11.8 :BUS<n>:RS232:SBITs**Syntax**

```
:BUS<n>:RS232:SBITs <stop bits>
```

```
:BUS<n>:RS232:SBITs?
```

Description

Sets or queries the stop bits of each frame of data in RS232 decoding.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<stop bits>	Discrete	{1 1.5 2}	1

Remarks

N/A

Return Format

The query returns 1, 1.5, or 2.

Example

```
:BUS1:RS232:SBITs 2 /*Sets the stop bits of RS232 decoding to 2.*/  
:BUS1:RS232:SBITs? /*The query returns 2.*/*
```

3.4.12 :BUS<n>:IIC

The :BUS<n>:IIC commands are used to set relevant parameters for I2C decoding.

I2C serial bus consists of the clock line (SCL) and the data line (SDA).

- **SCL:** samples SDA on the of rising or falling edge of the clock.
- **SDA:** indicates the data channel.

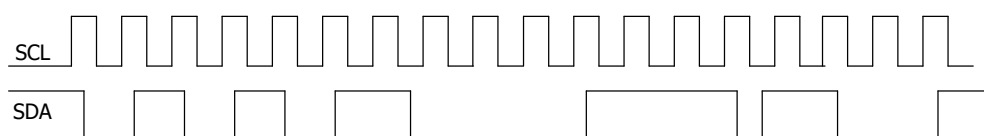 


Figure 3.3 I2C Serial Bus

3.4.12.1 :BUS<n>:IIC:SCLK:SOURce**Syntax**

```
:BUS<n> : IIC : SCLK : SOURce <source>
```

```
:BUS<n> : IIC : SCLK : SOURce?
```

Description

Sets or queries the clock source of I2C decoding.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:BUS1:IIC:SCLK:SOURce CHANnel2 /*Sets the clock source of I2C
decoding to CHANnel2.*/
:BUS1:IIC:SCLK:SOURce? /*The query returns CHAN2.*/
```

3.4.12.2 :BUS<n>:IIC:SDA:SOURce**Syntax**

```
:BUS<n> : IIC : SDA : SOURce <source>
```

```
:BUS<n> : IIC : SDA : SOURce?
```

Description

Sets or queries the data source of the I2C decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:BUS1:IIC:SDA:SOURce CHANnel2 /*Sets the data source of I2C
decoding to CHANnel2.*/
:BUS1:IIC:SDA:SOURce? /*The query returns CHAN2.*/
```

3.4.12.3 :BUS<n>:IIC:EXCHange**Syntax**

```
:BUS<n>:IIC:EXCHange <bool>
```

```
:BUS<n>:IIC:EXCHange?
```

Description

Sets to exchange the clock channel source and the data channel source of I2C decoding on the specified bus; queries whether the clock channel source and the data channel source of I2C decoding on the specified bus have been exchanged.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 0 or 1.

Example

```
:BUS1:IIC:EXCHange ON /*Sets to exchange the clock channel source
and the data channel source.*/
:BUS1:IIC:EXCHange? /*The query returns 1.*/
```

3.4.12.4 :BUS<n>:IIC:ADDRess**Syntax**

```
:BUS<n>:IIC:ADDRess <addr>
```

```
:BUS<n>:IIC:ADDRess?
```

Description

Sets or queries the address mode of I2C decoding.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<addr>	Discrete	{NORMal RW}	NORMal

Remarks

- **NORMal:** indicates that the address width does not include the R/W bit.
- **RW:** indicates that the address width includes the R/W bit.

Return Format

The query returns NORM or RW.

Example

```
:BUS1:IIC:ADDRess RW /*Sets the address of I2C decoding to
include the R/W bit.*/
:BUS1:IIC:ADDRess? /*The query returns RW.*/
```

3.4.12.5 :BUS<n>:IIC:ADDBits**Syntax**

```
:BUS<n>:IIC:ADDBits <bits>
```

```
:BUS<n>:IIC:ADDBits?
```

Description


Sets or queries the address width of I2C decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<bits>	Discrete	{7 8 10}	7

Remarks

 - **7:** In 7-bit addressing, after the START condition, a slave address is sent. The address starts to transfer from the first byte, as shown in the figure below. The first seven bits of the first byte make up the slave address, and the eighth bit is the LSB (least significant bit) which determines the direction of the message, also called a data direction bit (R/W). A "zero" indicates a transmission (WRITE), a "one" indicates a request for data (READ).

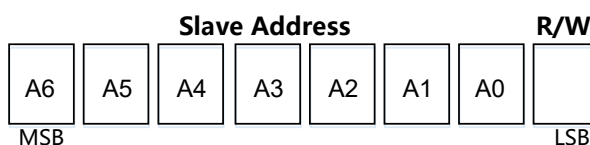

- **8:** same as the 7-bit addressing. A R/W bit is included in the 8-bit addressing for the slave address.
- **10:** 10-bit addressing is compatible with, and can be combined with, 7-bit addressing. As shown in the figure below, in 10-bit addressing, the first byte is the special reserved address 10-bit Address Indicator to indicate the current 10-bit address that is transferring.

**Return Format**

The query returns 7, 8, or 10.

Example

```

:BUS1:IIC:ADDBits 8      /*Sets the address width of I2C decoding on
Bus 1 to 8 bits.*/
:BUS1:IIC:ADDBits?      /*The query returns 8.*/

```

3.4.13 :BUS<n>:SPI

The :BUS<n>:SPI commands are used to set relevant parameters for SPI decoding.

SPI bus is based on the master-slave configuration and usually consists of chip select line (CS), clock line (CLK), and data line (SDA). Wherein, the data lines include the master input/slave output (MISO) data line and master output/slave input (MOSI) data line. The oscilloscope will sample the channel data on the rising edge, falling edge, or the rising/falling edge of the clock and judge each data point (logic "1" or logic "0") according to the preset threshold level).

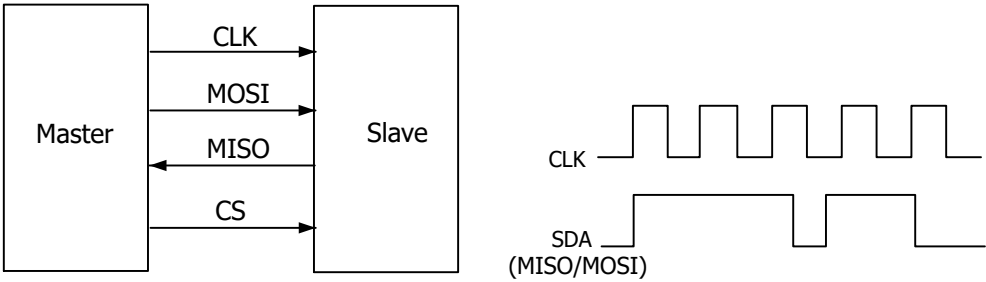 


Figure 3.4 SPI Serial Bus

3.4.13.1 :BUS<n>:SPI:SCLK:SOURce

Syntax

```
:BUS<n>:SPI:SCLK:SOURce <source>
:BUS<n>:SPI:SCLK:SOURce?
```

Description

Sets or queries the clock source of SPI decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:BUS1:SPI:SCLK:SOURce CHANnel2 /*Sets the clock source of SPI
decoding to CHANnel2.*/
:BUS1:SPI:SCLK:SOURce? /*The query returns CHAN2.*/
```

3.4.13.2 :BUS<n>:SPI:SCLK:SLOPe

Syntax

```
:BUS<n>:SPI:SCLK:SLOPe <slope>
```

```
:BUS<n>:SPI:SCLK:SLOPe?
```

Description

Sets or queries the clock edge type of the SPI decoding.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<slope>	Discrete	{POSitive NEGative}	POSitive

Remarks

N/A

Return Format

The query returns POS or NEG.

Example

```
:BUS1:SPI:SCLK:SLOPe NEGative /*Sets the clock edge type of SPI
decoding to Negative.*/
:BUS1:SPI:SCLK:SLOPe? /*The query returns NEG.*/
```

3.4.13.3 :BUS<n>:SPI:MISO:SOURce

Syntax

```
:BUS<n>:SPI:MISO:SOURce <source>
```

```
:BUS<n>:SPI:MISO:SOURce?
```

Description

Sets or queries the MISO source of SPI decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4 OFF}	CHANnel2

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

The source specified in this command and the *:BUS<n>:SPI:MOSI:SOURce* command cannot be set to OFF at the same time.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, CHAN4, or OFF.

Example

```
:BUS1:SPI:MISO:SOURce CHANnel2 /*Sets the MISO data source of
SPI decoding to CHANnel2.*/
:BUS1:SPI:MISO:SOURce? /*The query returns CHAN2.*/
```

3.4.13.4 :BUS<n>:SPI:MOSI:SOURce**Syntax**

```
:BUS<n>:SPI:MOSI:SOURce <source>
```

```
:BUS<n>:SPI:MOSI:SOURce?
```

Description

Sets or queries the MOSI source of SPI decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4 OFF}	OFF

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

The source specified in this command and the `:BUS<n>:SPI:MISO:SOURce` command cannot be set to OFF at the same time.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, CHAN4, or OFF.

Example

```
:BUS1:SPI:MOSI:SOURce CHANnel2 /*Sets the MOSI data source of
SPI decoding to CHANnel2.*/
:BUS1:SPI:MOSI:SOURce? /*The query returns CHAN2.*/
```

3.4.13.5 :BUS<n>:SPI:POLarity**Syntax**

```
:BUS<n>:SPI:POLarity <polarity>
```

```
:BUS<n>:SPI:POLarity?
```

Description

Sets or queries the polarity of the SPI decoding on the specified decoding bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<polarity>	Discrete	{HIGH LOW}	HIGH

Remarks

- **HIGH:** indicates positive polarity. The high level is 1, and low level is 0.
- **LOW:** indicates negative polarity. The high level is 0, and low level is 1.

Return Format

The query returns HIGH or LOW.

Example

```
:BUS1:SPI:POLarity HIGH /*Sets the polarity of the SPI
decoding to Positive.*/
:BUS1:SPI:POLarity? /*The query returns HIGH.*/
```

3.4.13.6 :BUS<n>:SPI:MISO:POLarity**Syntax**

```
:BUS<n>:SPI:MISO:POLarity <polarity>
```

```
:BUS<n>:SPI:MISO:POLarity?
```

Description

Sets or queries the polarity of MISO data line of SPI decoding.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<polarity>	Discrete	{HIGH LOW}	HIGH

Remarks

- **HIGH:** positive polarity. It indicates that high level is 1, and low level is 0.
- **LOW:** negative polarity. It indicates that low level is 1, and high level is 0.

This command exists for backwards compatibility. Use the command *:BUS<n>:SPI:POLarity*.

Return Format

The query returns HIGH or LOW.

Example

```
:BUS1:SPI:MISO:POLarity HIGH      /*Sets the polarity of MISO data
line to Positive.*/
:BUS1:SPI:MISO:POLarity?          /*The query returns HIGH.*/
```

3.4.13.7 :BUS<n>:SPI:MOSI:POLarity**Syntax**

```
:BUS<n>:SPI:MOSI:POLarity <polarity>
```

```
:BUS<n>:SPI:MOSI:POLarity?
```

Description

Sets or queries the polarity of MOSI data line of SPI decoding.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-

Name	Type	Range	Default
<polarity>	Discrete	{HIGH LOW}	HIGH

Remarks

- **HIGH:** positive polarity. It indicates that high level is 1, and low level is 0.
- **LOW:** negative polarity. It indicates that low level is 1, and high level is 0.

This command exists for backwards compatibility. Use the command `:BUS<n>:SPI:POLarity`.

Return Format

The query returns HIGH or LOW.

Example

```
:BUS1:SPI:MOSI:POLarity HIGH      /*Sets the polarity of MOSI data
line to HIGH.*/
:BUS1:SPI:MOSI:POLarity?          /*The query returns HIGH.*/
```

3.4.13.8 :BUS<n>:SPI:DBITs**Syntax**

`:BUS<n>:SPI:DBITs <width>`

`:BUS<n>:SPI:DBITs?`

Description

Sets or queries the data width of SPI decoding.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<width>	Integer	4 to 32	8

Remarks

N/A

Return Format

The query returns an integer ranging from 4 to 32.

Example

```
:BUS1:SPI:DBITs 10      /*Sets the data width of SPI decoding to
10.*/
:BUS1:SPI:DBITs?        /*The query returns 10.*/
```

3.4.13.9 :BUS<n>:SPI:ENDian**Syntax**

```
:BUS<n>:SPI:ENDian <endian>
```

```
:BUS<n>:SPI:ENDian?
```

Description

Sets or queries the endian of data transmission in SPI decoding.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<endian>	Discrete	{MSB LSB}	MSB

Remarks

- **MSB:** indicates Most Significant Bit transmission sequence, that is, the highest bit of the data is transmitted first.
- **LSB:** indicates Least Significant Bit transmission sequence, that is, the lowest bit of the data is transmitted first.

Return Format

The query returns MSB or LSB.

Example

```
:BUS1:SPI:ENDian LSB      /*Sets the endian of data transmission
in SPI decoding to LSB.*/
:BUS1:SPI:ENDian?         /*The query returns LSB.*/
```

3.4.13.10 :BUS<n>:SPI:MODE**Syntax**

```
:BUS<n>:SPI:MODE <mode>
```

```
:BUS<n>:SPI:MODE?
```

Description

Sets or queries the decode mode of SPI decoding.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<mode>	Discrete	{CS TIMEout}	TIMEout

Remarks

- **CS:** indicates chip select. It contains a chip select line (CS). You can perform frame synchronization according to CS.
- **TIMEout:** indicates timed out. You can perform frame synchronization according to the timeout.

Return Format

The query returns CS or TIM.

Example

```
:BUS1:SPI:MODE CS /*Sets the decode mode of SPI decoding to CS.*/
:BUS1:SPI:MODE? /*The query returns CS.*/
```

3.4.13.11 :BUS<n>:SPI:TIMEout:TIME**Syntax**

:BUS<n>:SPI:TIMEout:TIME <time>

:BUS<n>:SPI:TIMEout:TIME?

Description

Sets or queries the timeout value of SPI decoding on the specified bus. The unit is s.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<time>	Real	8 ns to 10 s	1μs

Remarks

- This setting command is only valid in timeout mode. You can send **:BUS<n>:SPI:MODE** to set or query the decode mode of SPI decoding.

- The timeout must be greater than the maximum clock pulse width and less than the idle time between frames.

Return Format

The query returns the timeout value in scientific notation.

Example

```
:BUS1:SPI:TIMEout:TIME 0.000005 /*Sets the timeout value to 5
µs.*/
:BUS1:SPI:TIMEout:TIME? /*The query returns
5.000000E-6.*/
```

3.4.13.12 :BUS<n>:SPI:SS:SOURce

Syntax

```
:BUS<n>:SPI:SS:SOURce <source>
```

```
:BUS<n>:SPI:SS:SOURce?
```

Description

Sets or queries the source of the CS line of SPI decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel3

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

This setting command is only valid in CS mode. You can send *:BUS<n>:SPI:MODE* to set or query the decode mode of the SPI decoding.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:BUS1:SPI:SS:SOURce CHANnel2 /*Sets the source of CS line of
SPI decoding to CHANnel2.*/
:BUS1:SPI:SS:SOURce? /*The query returns CHAN2.*/
```


3.4.13.13 :BUS<n>:SPI:SS:POLarity

Syntax

:BUS<n>:SPI:SS:POLarity <polarity>

:BUS<n>:SPI:SS:POLarity?

Description

Sets or queries the polarity of CS line of SPI decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<polarity>	Discrete	{HIGH LOW}	LOW

Remarks

- **HIGH:** indicates that the oscilloscope samples data of the source channel of data line on the specified edge of the clock signal when the CS signal is high level.
- **LOW:** indicates that the oscilloscope samples data of the source channel of data line on the specified edge of the clock signal when the CS signal is low level.

This setting command is only valid in CS mode. You can send *:BUS<n>:SPI:MODE* to set or query the decode mode of the SPI decoding.

Return Format

The query returns HIGH or LOW.

Example

```
:BUS1:SPI:SS:POLarity HIGH /*Sets the polarity of CS line of SPI
decoding to HIGH.*/
:BUS1:SPI:SS:POLarity? /*The query returns HIGH.*/
```

3.4.14 :BUS<n>:CAN

The commands in :BUS<n>:CAN section are used to set relevant parameters for CAN decoding.

The oscilloscope samples the CAN or CAN-FD signal in the specified sample position, and judges each data point to be logic "1" or logic "0" according to the set threshold level. The CAN decoding is required to specify the CAN or CAN-FD signal type and the sample position.

Sample Position

Sample Position is a point within a bit's time. The oscilloscope samples the bit level at this point. The sample point position is expressed as the ratio of "time from the bit start to the sample point" to "bit time", in %.

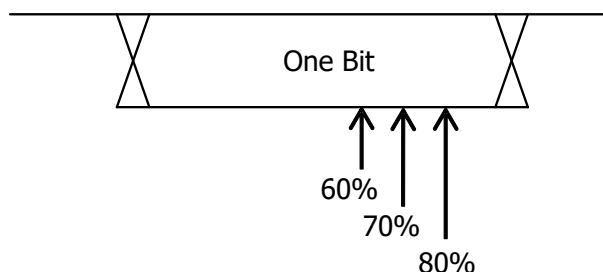 


Figure 3.5 Sample Position



NOTE

DS9404 oscilloscope supports the CAN decode commands (std.) and the CAN-FD decode commands (opt.). The CAN-FD decode commands are only available when the instrument has installed the CAN-FD option.

3.4.14.1

:BUS<n>:CAN:SOURce

Syntax

:BUS<n>:CAN:SOURce <source>

:BUS<n>:CAN:SOURce?

Description

Sets or queries the source of CAN decoding on the specific bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4 MATH1 MATH2 MATH3 MATH4}	CHANnel1

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns MATH1, MATH2, MATH3, MATH4, D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:BUS1:CAN:SOURce CHANnel2 /*Sets the source of CAN decoding on
Bus1 to CHANnel2.*/
:BUS1:CAN:SOURce? /*The query returns CHAN2.*/
```

3.4.14.2 :BUS<n>:CAN:STYPe

Syntax

```
:BUS<n>:CAN:STYPe <stype>
```

```
:BUS<n>:CAN:STYPe?
```

Description

Sets or queries the signal type of CAN decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<stype>	Discrete	{TX RX CANH CANL DIFFerential}	CANH

Remarks

- **TX:** indicates the Transmit signal from the CAN bus transceiver.
- **RX:** indicates the Receive signal from the CAN bus transceiver.
- **CANH:** indicates the actual CAN_H bus signal.
- **CANL:** indicates the actual CAN_L bus signal.
- **DIFFerential:** The CAN differential bus signals connected to an analog source channel by using a differential probe. Connect the differential probe's positive lead to the CAN_H bus signal and connect the negative lead to the CAN_L bus signal.

Return Format

The query returns TX, RX, CANH, CANL, or DIFF.

Example

```
:BUS1:CAN:STYPe TX /*Sets the signal type of CAN decoding to TX.*/
:BUS1:CAN:STYPe? /*The query returns TX.*/
```

3.4.14.3 :BUS<n>:CAN:BAUD**Syntax**

```
:BUS<n>:CAN:BAUD <baud>
```

```
:BUS<n>:CAN:BAUD?
```

Description

Sets or queries the signal rate of CAN decoding on the specified decoding bus. The unit is bps.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<baud>	Integer	10 kbps to 5 Mbps	1 Mbps

Remarks

If the baud rate is set to a value with "M", then "A" should be added at the end of the value. For example, if you send 5M, you need to send 5MA.

Return Format

The query returns an integer ranging from 10k to 5M.

Example

```
:BUS1:CAN:BAUD 120000 /*Sets the signal rate of CAN decoding to
120000 bps*/
:BUS1:CAN:BAUD? /*The query returns 120000.*/
```

3.4.14.4 :BUS<n>:CAN:SPOint**Syntax**

```
:BUS<n>:CAN:SPOint <spoint>
```

```
:BUS<n>:CAN:SPOint?
```

Description

Sets or queries the sample point position of CAN decoding on the specified bus (expressed in %).

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<spoint>	Integer	10 to 90	80

Remarks

For detailed information about sample point position, refer to [Sample Position](#).

Return Format

The query returns an integer ranging from 10 to 90.

Example

```
:BUS1:CAN:SPoint 70          /*Sets the sample point position of CAN
decoding to 70%.*/
:BUS1:CAN:SPoint?           /*The query returns 70.*/
```

3.4.14.5 :BUS<n>:CAN:FDBaud (Option)**Syntax**

```
:BUS<n>:CAN:FDBaud <baud>
```

```
:BUS<n>:CAN:FDBaud?
```

Description

Sets or queries the CAN-FD baud rate of CAN-FD decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<baud>	Integer	1 Mbps to 10 Mbps	1 Mbps

Remarks

If the baud rate is set to a value with "M", then "A" should be added at the end of the value. For example, if you send 5M, you need to send 5MA.

Return Format

The query returns an integer ranging from 1M to 10M.

Example

```
:BUS1:CAN:FDBaud 120000      /*Sets the CAN-FD baud rate to
120000bps.*/
:BUS1:CAN:FDBaud?           /*The query returns 120000.*/
```

3.4.14.6 :BUS<n>:CAN:FDSPoint**Syntax**

```
:BUS<n>:CAN:FDSPoint <spoint>
```

```
:BUS<n>:CAN:FDSPoint?
```

Description

Sets or queries the sample point position of CAN-FD decoding on the specified bus (expressed in %).

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<spoint>	Integer	10 to 90	80

Remarks

For detailed information about sample point position, refer to [Sample Position](#).

Return Format

The query returns an integer ranging from 10 to 90.

Example

```
:BUS1:CAN:FDSPoint 70          /*Sets the sample point position of
CAN-FD decoding to 70%.*/
:BUS1:CAN:FDSPoint?           /*The query returns 70.*/
```

3.4.15 :BUS<n>:FLEXray (Option)

The :BUS<n>:FLEXray commands are used to set the relevant parameters for FLEXray decoding.

FlexRay is a type of differential serial bus configured with three consecutive segments (i.e. packet header, payload, and packet trailer). The oscilloscope samples the FlexRay signal at the specified sample position and judges each data point as logic "1" or logic "0" according to the preset threshold level. The FlexRay decoding is required to specify the signal type and baud rate.

3.4.15.1 :BUS<n>:FLEXray:BAUD

Syntax

```
:BUS<n>:FLEXray:BAUD <baud>
```

```
:BUS<n>:FLEXray:BAUD?
```

Description

Sets or queries the signal rate of FlexRay decoding. The default unit is bps.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-

Name	Type	Range	Default
<baud>	Discrete	{2500000 5000000 10000000}	10000000

Remarks

N/A

Return Format

The query returns 2500000, 5000000, or 10000000.

Example

```
:BUS1:FLEXray:BAUD 2500000 /*Sets the signal rate of
FlexRay decoding to 2500000 bps.*/
:BUS1:FLEXray:BAUD? /*The query returns 2500000.*/
```

3.4.15.2 :BUS<n>:FLEXray:SOURce**Syntax**

```
:BUS<n>:FLEXray:SOURce <source>
```

```
:BUS<n>:FLEXray:SOURce?
```

Description

Sets or queries the source of FlexRay decoding.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:BUS1:FLEXray:SOURce CHANnel2 /*Sets the source channel of
FlexRay decoding to CHANnel2.*/
:BUS1:FLEXray:SOURce? /*The query returns CHAN2.*/
```

3.4.15.3 :BUS<n>:FLEXray:SPOint**Syntax**

```
:BUS<n>:FLEXray:SPOint <spoint>
```

```
:BUS<n>:FLEXray:SPOint?
```

Description

Sets or queries the sample point position of FlexRay decoding on the specified bus (expressed in %).

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<spoint>	Integer	10 to 90	50

Remarks

For detailed information about sample point position, refer to [Sample Position](#).

Return Format

The query returns an integer ranging from 10 to 90.

Example

```
:BUS1:FLEXray:SPOint 70      /*Sets the sample point position of
FlexRay decoding on Bus 1 to 70%.*/
:BUS1:FLEXray:SPOint?        /*The query returns 70.*/
```

3.4.15.4 :BUS<n>:FLEXray:STYPe**Syntax**

```
:BUS<n>:FLEXray:STYPe <stype>
```

```
:BUS<n>:FLEXray:STYPe?
```

Description

Sets or queries the signal type of FlexRay decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<stype>	Discrete	{BP BM RT}	BP

Remarks

N/A

Return Format

The query returns BP, BM, or RT.

Example

```
:BUS1:FLEXray:SType BM          /*Sets the signal type of FlexRay
decoding to BM.*/
:BUS1:FLEXray:SType?           /*The query returns BM.*/
```

3.4.15.5 :BUS<n>:FLEXray:CHANnel**Syntax**

```
:BUS<n>:FLEXray:CHANnel <ch>
```

```
:BUS<n>:FLEXray:CHANnel?
```

Description

Sets or queries the selected source channel of FlexRay decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<ch>	Discrete	{A B}	A

Remarks

N/A

Return Format

The query returns A or B.

Example

```
:BUS1:FLEXray:CHANnel B          /*Sets the source channel of
FlexRay decoding to B.*/
:BUS1:FLEXray:CHANnel?           /*The query returns B.*/
```

3.4.16 :BUS<n>:LIN (Option)

The :BUS<n>:LIN commands are used to set relevant parameters for LIN decoding.

The oscilloscope samples the LIN signal at the specified sample position (if the source is an analog channel, the oscilloscope will also judge each data point (logic "1" or

logic "0") according to the preset threshold level). You need to specify the LIN signal protocol version.

3.4.16.1 :BUS<n>:LIN:PARity

Syntax

```
:BUS<n>:LIN:PARity <bool>
```

```
:BUS<n>:LIN:PARity?
```

Description

Sets or queries whether the LIN decoding on the specified decoding bus includes the parity bit.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<bool>	Bool	{{1 ON}} {0 OFF}}	0 OFF

Remarks

- **1|ON:** includes the parity bit.
- **0|OFF:** does not include the parity bit.

Return Format

The query returns 0 or 1.

Example

```
:BUS1:LIN:PARity ON          /*Sets the parity bit to be
included in LIN decoding.*/
:BUS1:LIN:PARity?           /*The query returns 1.*/
```

3.4.16.2 :BUS<n>:LIN:SOURce

Syntax

```
:BUS<n>:LIN:SOURce <source>
```

```
:BUS<n>:LIN:SOURce?
```

Description

Sets or queries the source of LIN decoding on the specific bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:BUS1:LIN:SOURce CHANnel2 /*Sets the source of LIN decoding to
CHANnel2.*/
:BUS1:LIN:SOURce? /*The query returns CHAN2.*/
```

3.4.16.3 :BUS<n>:LIN:STANdard**Syntax**

```
:BUS<n>:LIN:STANdard <value>
```

```
:BUS<n>:LIN:STANdard?
```

Description

Sets or queries the version of LIN bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<value>	Discrete	{V1X V2X MIXed}	MIXed

Remarks

N/A

Return Format

The query returns V1X, V2X, or MIX.

Example

```
:BUS1:LIN:STANDARD V2X          /*Sets the LIN bus version to
V2X.*/
:BUS1:LIN:STANDARD?             /*The query returns V2X.*/
```

3.4.16.4 :BUS<n>:LIN:BAUD**Syntax**

```
:BUS<n>:LIN:BAUD <baud>
```

```
:BUS<n>:LIN:BAUD?
```

Description

Sets or queries the baud rate of LIN decoding on the specified bus. The default unit is bps.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<baud>	Integer	2.4 kbps to 20 Mbps	19200bps

Remarks

If the baud rate is set to a value with "M", then "A" should be added at the end of the value. For example, if you send 5M, you need to send 5MA.

Return Format

The query returns an integer ranging from 2.4k to 20M.

Example

```
:BUS1:LIN:BAUD 9600          /*Sets the signal baud rate of LIN decoding
on Bus1 to 9600 bps*/
:BUS1:LIN:BAUD?              /*The query returns 9600.*/
```

3.4.17 :BUS<n>:IIS (Option)

The :BUS<n>:IIS commands are used to set relevant parameters for I2S decoding.

The oscilloscope samples the I2S signal at the specified sample position (if the source is an analog channel, the oscilloscope will also judge each data point (logic "1" or logic "0") according to the preset threshold level). I2S decoding is required to specify the serial clock, channel signal, and the data's source channel. You need to set Alignment, WS Low, and other parameters.

3.4.17.1 :BUS<n>:IIS:SOURce:CLOCK

Syntax

```
:BUS<n> : IIS : SOURce : CLOCK <source>
```

```
:BUS<n> : IIS : SOURce : CLOCK?
```

Description

Sets or queries the clock source of the I2S decoding.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:BUS1:IIS:SOURce:CLOCK CHANnel2 /*Sets the clock source of
the I2S decoding to CHANnel2.*/
:BUS1:IIS:SOURce:CLOCK? /*The query returns CHAN2.*/
```

3.4.17.2 :BUS<n>:IIS:SOURce:DATA

Syntax

```
:BUS<n> : IIS : SOURce : DATA <source>
```

```
:BUS<n> : IIS : SOURce : DATA?
```

Description

Sets or queries the data source of the I2S decoding.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel3

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:BUS1:IIS:SOURce:DATA CHANnel2          /*Sets the data source of
the I2S decoding to CHANnel2.*/
:BUS1:IIS:SOURce:DATA?                  /*The query returns CHAN2.*/
```

3.4.17.3 :BUS<n>:IIS:SOURce:WSElect**Syntax**

```
:BUS<n>:IIS:SOURce:WSElect <source>
```

```
:BUS<n>:IIS:SOURce:WSElect?
```

Description

Sets or queries the audio channel of the I2S trigger.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel2

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:BUS1:IIS:SOURce:WSElect CHANnel2      /*Sets the audio channel to
CHANnel2.*/
:BUS1:IIS:SOURce:WSElect?              /*The query returns CHAN2.*/
```

3.4.17.4 :BUS<n>:IIS:ALIGNment

Syntax

```
:BUS<n>:IIS:ALIGNment <align>
```

```
:BUS<n>:IIS:ALIGNment?
```

Description

Sets or queries the the alignment mode of I2S decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<align>	Discrete	{IIS RJ LJ}	IIS

Remarks

- **IIS:** data transmission (MSB first) begins at the second edge of the WS transition.
- **RJ:** data transmission (MSB first) is right-justified to the WS transition.
- **LJ:** data transmission (MSB first) begins at the edge of the WS transition.

Return Format

The query returns IIS, RJ, or LJ.

Example

```
:BUS1:IIS:ALIGNment RJ      /*Sets the alignment mode of the
I2S decoding to RJ.*/
:BUS1:IIS:ALIGNment?        /*The query returns RJ.*/
```

3.4.17.5 :BUS<n>:IIS:CLOCK:SLOPe

Syntax

```
:BUS<n>:IIS:CLOCK:SLOPe <slope>
```

:BUS<n>:IIS:CLOCK:SLOPe?

Description

Sets or queries the clock edge type of the I2S decoding.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<slope>	Discrete	{NEGative POSitive}	POSitive

Remarks

N/A

Return Format

The query returns POS or NEG.

Example

```
:BUS1:IIS:CLOCK:SLOPe NEGative /*Sets the clock edge of I2S
decoding to NEGative.*/
:BUS1:IIS:CLOCK:SLOPe? /*The query returns NEG.*/
```

3.4.17.6 :BUS<n>:IIS:RWIDth

Syntax

:BUS<n>:IIS:RWIDth <val>

:BUS<n>:IIS:RWIDth?

Description

Sets or queries the word size of the I2S decoding.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<val>	Integer	4 to 32	4

Remarks

N/A

Return Format

The query returns an integer ranging from 4 to 32.

Example

```
:BUS1:IIS:RWIDth 5 /*Sets the word size of I2S
decoding to 5.*/
:BUS1:IIS:RWIDth? /*The query returns 5.*/
```

3.4.17.7 :BUS<n>:IIS:RECewidth**Syntax**

```
:BUS<n>:IIS:RECewidth <val>
:BUS<n>:IIS:RECewidth?
```

Description

Sets or queries the receive width of I2S decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<val>	Integer	4 to 32	4

Remarks

N/A

Return Format

The query returns an integer ranging from 4 to 32.

Example

```
:BUS1:IIS:RECewidth 5 /*Sets the receive width of I2S
decoding to 5.*/
:BUS1:IIS:RECewidth? /*The query returns 5.*/
```

3.4.17.8 :BUS<n>:IIS:WSLow**Syntax**

```
:BUS<n>:IIS:WSLow <val>
:BUS<n>:IIS:WSLow?
```

Description

Sets or queries the audio polarity of I2S decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-

Name	Type	Range	Default
<val>	Discrete	{LEFT RIGHT}	LEFT

Remarks

- **LEFT:** indicates that the WS Low is Left.
- **RIGHT:** indicates that the WS Low is Right.

Return Format

The query returns LEFT or RIGH.

Example

```
:BUS1:IIS:WSLow LEFT /*Sets the audio polarity of I2S decoding
to LEFT.*/
:BUS1:IIS:WSLow? /*The query returns LEFT.*/
```

3.4.17.9 :BUS<n>:IIS:ENDian**Syntax**

```
:BUS<n>:IIS:ENDian <endian>
```

```
:BUS<n>:IIS:ENDian?
```

Description

Sets or queries the endian of I2S decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<endian>	Discrete	{MSB LSB}	MSB

Remarks

- **MSB:** indicates Most Significant Bit transmission sequence, i.e. the highest bit of the data is transmitted first.
- **LSB:** indicates Least Significant Bit transmission sequence, i.e. the lowest bit of the data is transmitted first.

Return Format

The query returns MSB or LSB.

Example

```
:BUS1:IIS:ENDian LSB      /*Sets the endian of I2S decoding to
LSB.*/
:BUS1:IIS:ENDian?         /*The query returns LSB.*/
```

3.4.17.10 :BUS<n>:IIS:POLarity**Syntax**

```
:BUS<n>:IIS:POLarity <pol>
```

```
:BUS<n>:IIS:POLarity?
```

Description

Sets or queries the data polarity of I2S decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<pol>	Discrete	{POSitive NEGative}	POSitive

Remarks

- **POSitive:** indicates positive polarity.
- **NEGative:** indicates negative polarity.

Return Format

The query returns POS or NEG.

Example

```
:BUS1:IIS:POLarity NEGative /*Sets the data polarity of I2S
decoding to Negative.*/
:BUS1:IIS:POLarity?         /*The query returns NEG.*/
```

3.4.18 :BUS<n>:M1553 (Option)

The :BUS<n>:M1553 commands are used to set relevant parameters for M1553 decoding.

The oscilloscope samples the 1553B signal at the specified sample position (if the source is an analog channel, the oscilloscope will also judge each data point (logic "1" or logic "0") according to the preset threshold level). For M1553 decoding, you need to specify the data source and threshold.

3.4.18.1 :BUS<n>:M1553:SOURce**Syntax**

```
:BUS<n>:M1553:SOURce <source>
```

```
:BUS<n>:M1553:SOURce?
```

Description

Sets or queries the source of M1553 decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:BUS1:M1553:SOURce CHANnel2      /*Sets the source of the M1553
decoding to CHANnel2.*/
:BUS1:M1553:SOURce?              /*The query returns CHAN2.*/
```

3.4.19 :BUS<n>:SENT

The :BUS<n>:SENT commands are used to set relevant parameters for SENT decoding.

SENT (Single Edge Nibble Transmission) is the serial communication protocol used between the vehicle power-train sensors and the Electronic Control Units (ECUs). SENT transmits data in 4-bit nibbles, and the data contains the information about sensor measurements. This protocol is also known as SAE J2716 standards.

3.4.19.1 :BUS<n>:SENT:SOURce

Syntax

:BUS<n>:SENT:SOURce <source>

:BUS<n>:SENT:SOURce?

Description

Sets or queries the source channel of SENT decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:BUS1:SENT:SOURce CHANnel2 /*Sets the source channel of SENT
decoding to CHANnel2.*/
:BUS1:SENT:SOURce? /*The query returns CHAN2.*/
```

3.4.19.2 :BUS<n>:SENT:TICK

Syntax

:BUS<n>:SENT:TICK <time>

:BUS<n>:SENT:TICK?

Description

Sets or queries the clock period of SENT decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<time>	Real	0.5 μ s to 0.3 ms	3 μ s

Remarks

N/A

Return Format

The query returns the clock period in scientific notation. It is measured in ticks, and its unit is s.

Example

```
:BUS1:SENT:TICK 0.0001 /*Sets the clock period of SENT decoding
to 0.1 ms.*/
:BUS1:SENT:TICK? /*The query returns 1.000000E-4.*/
```

3.4.19.3 :BUS<n>:SENT:TOLerance**Syntax**

:BUS<n>:SENT:TOLerance <tolerance>

:BUS<n>:SENT:TOLerance?

Description

Sets or queries the tolerance of SENT decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<tolerance>	Integer	3 to 30	20

Remarks

N/A

Return Format

The query returns the tolerance value in scientific notation.

Example

```
:BUS1:SENT:TOLerance 10 /*Sets the tolerance value of SENT
decoding to 10.*/
:BUS1:SENT:TOLerance? /*The query returns 10.*/
```

3.4.19.4 :BUS<n>:SENT:NIBBnum

Syntax

:BUS<n>:SENT:NIBBnum <nibbnum>

:BUS<n>:SENT:NIBBnum?

Description

Sets or queries the number of nibbles of SENT decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<nibbnum>	Integer	1 to 6	6

Remarks

N/A

Return Format

The query returns the number of nibbles in integer.

Example

```
:BUS1:SENT:NIBBnum 2          /*Sets the number of nibbles of
SENT decoding to 2.*/
:BUS1:SENT:NIBBnum?           /*The query returns 2.*/
```

3.4.19.5 :BUS<n>:SENT:POLarity

Syntax

:BUS<n>:SENT:POLarity <pol>

:BUS<n>:SENT:POLarity?

Description

Sets or queries the data polarity of SENT decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<pol>	Discrete	{NEGative POSitive}	NEGative

Remarks

- **NEGative:** indicates the negative polarity.
- **POSitive:** indicates the positive polarity.

Return Format

The query returns NEG or POS.

Example

```
:BUS1:SENT:POLarity NEGative /*Sets the data polarity for SENT
decoding to negative.*/
:BUS1:SENT:POLarity? /*The query returns NEG.*/
```

3.4.19.6 :BUS<n>:SENT:CRC**Syntax**

```
:BUS<n>:SENT:CRC <crc>
```

```
:BUS<n>:SENT:CRC?
```

Description

Sets or queries the CRC format of SENT decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<crc>	Discrete	{2008 2010}	2010

Remarks

N/A

Return Format

The query returns 2008 or 2010.

Example

```
:BUS1:SENT:CRC 2010 /*Sets the CRC format of SENT decoding to
2010.*/
:BUS1:SENT:CRC? /*The query returns 2010.*/
```

3.4.19.7 :BUS<n>:SENT:PAUSE**Syntax**

```
:BUS<n>:SENT:PAUSE <source>
```

```
:BUS<n>:SENT:PAUSE?
```


Description

Sets or queries whether a pause pulse of SENT decoding on the specified bus occurs.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<source>	Discrete	{NO YES}	NO

Remarks

N/A

Return Format

The query returns NO or YES.

Example

```
:BUS1:SENT:PAUSE YES      /*Enables the pause pulse of SENT
decoding on Bus1.*/
:BUS1:SENT:PAUSE?         /*The query returns YES.*/
```

3.4.19.8 :BUS<n>:SENT:TYPE**Syntax**

```
:BUS<n>:SENT:TYPE <type>
```

```
:BUS<n>:SENT:TYPE?
```

Description

Sets or queries the signal type of SENT decoding on the specified bus.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<type>	Discrete	{FAST FAShort FAEnhanced SHORT ENHanced}	FAST

Remarks

- FAST: indicates "fast channel" messages.
- FAShort: indicates "fast channel" and "slow channel" messages.
- FAEnhanced: indicates "fast channel" and "enhanced serial" messages.
- SHORT: indicates "slow channel" messages.

- ENHanced: indicates "enhanced serial" messages.

Return Format

The query returns FAST, FASH, FAEN, SHOR, or ENH.

Example

```
:BUS1:SENT:TYPE SHORT /*Sets the signal type of SENT decoding
to SHORT.*/
:BUS1:SENT:TYPE? /*The query returns SHOR.*/
```

3.5 :BODEplot Commands

The **:BODEplot** commands are used to set the relevant parameters of the bode plot function.

Bode plot is a way of graphically displaying the frequency response of a system. The analysis on the system's gain and phase margins enables you to test the stability of the system.

With the built-in signal generator module, the series generates the sweep signal of a specified frequency range and outputs to the switching power supply circuit under test. Then, the oscilloscope draws a Bode plot displaying the variation of phase and gain with different frequencies.

3.5.1 :BODEplot:ENABLE

Syntax

```
:BODEplot:ENABLE <bool>
```

```
:BODEplot:ENABLE?
```

Description

Sets or queries the on/off status of the bode plot.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Examples

```
:BODEplot:ENABLE ON /*Enables the bode plot.*/
:BODEplot:ENABLE? /*The query returns 1.*/
```

3.5.2 :BODEplot:RUNStop**Syntax**

```
:BODEplot:RUNStop <bool>
:BODEplot:RUNStop?
```

Description

Sets or queries the run/stops status of the bode plot.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:BODEplot:RUNStop ON /*Starts the bode plot drawing.*/
:BODEplot:RUNStop? /*The query returns 1.*/
```

3.5.3 :BODEplot:ANALysis:MODE**Syntax**

```
:BODEplot:ANALysis:MODE <mode>
:BODEplot:ANALysis:MODE?
```

Description

Sets or queries the analysis mode of the bode plot.

Parameter

Name	Type	Range	Default
<mode>	Discrete	{SWEep FIXed}	SWEep

Remarks

N/A

Return Format

The query returns SWE or FIX.

Example

```
:BODEplot:ANALysis:MODE SWEep      /*Sets the analysis mode of the
bode plot to SWEep.*/
:BODEplot:ANALysis:MODE?           /*The query returns SWE.*/
```

3.5.4 :BODEplot:SWEEptype

Syntax

```
:BODEplot:SWEEptype <type>
```

```
:BODEplot:SWEEptype?
```

Description

Sets or queries the sweep type of the bode plot.

Parameter

Name	Type	Range	Default
<type>	Discrete	{LOG LINE}	LOG

Remarks

- **LOG:** logarithmic sweep, indicating that the frequency of the swept sine wave varies logarithmically with the time.
- **LINE:** linear sweep, indicating that the frequency of the swept sine wave varies linearly with the time.

Return Format

The query returns LOG or LINE.

Example

```
:BODEplot:SWEEptype LINE      /*Sets the sweep type of the bode plot
to Linear.*/
:BODEplot:SWEEptype?          /*The query returns LINE.*/
```

3.5.5 :BODEplot:REF:IN

Syntax

```
:BODEplot:REF:IN <source>
```

:BODEplot:REF:IN?

Description

Sets or queries the input source of the bode plot.

Parameter

Name	Type	Range	Default
<source>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4 NONE}	CHANnel1

Remarks

N/A

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4 or NONE.

Example

```
:BODEplot:REF:IN CHANnel1 /*Sets the input source of the bode plot  
to CHANnel1.*/  
:BODEplot:REF:IN? /*The query returns CHAN1.*/
```

3.5.6 :BODEplot:REF:OUT

Syntax

:BODEplot:REF:OUT <source>

:BODEplot:REF:OUT?

Description

Sets or queries the output source of the bode plot.

Parameter

Name	Type	Range	Default
<source>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4 NONE}	CHANnel1

Remarks

N/A

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4 or NONE.

Example

```
:BODEplot:REF:OUT CHANnel1 /*Sets the output source of the bode
plot to CHANnel1.*/
:BODEplot:REF:OUT? /*The query returns CHAN1.*/
```

3.5.7 :BODEplot:FREQUENCY:START**Syntax**

```
:BODEplot:FREQUENCY:START <freq>
:BODEplot:FREQUENCY:START?
```

Description

Sets or queries the start frequency of the sweep signal in the bode plot. The default unit is Hz.

Parameter

Name	Type	Range	Default
<freq>	Real	10 Hz to 5 MHz	100 Hz

Remarks

Start Frequency $\leq$ Stop Frequency/10

To set or query the stop frequency of the sweep signal, run the **:BODEplot:FREQUENCY:STOP** command.

Return Format

The query returns the start frequency value in scientific notation. The unit is Hz.

Example

```
:BODEplot:FREQUENCY:START 1000 /*Sets the start frequency of
the sweep signal to 1000 Hz.*/
:BODEplot:FREQUENCY:START? /*The query returns 1.000000E
+3.*/
```

3.5.8 :BODEplot:FREQUENCY:STOP**Syntax**

```
:BODEplot:FREQUENCY:STOP <freq>
:BODEplot:FREQUENCY:STOP?
```

Description

Sets or queries the stop frequency of the sweep signal in the bode plot. The default unit is Hz.

Parameter

Name	Type	Range	Default
<freq>	Real	100 Hz to 50 MHz	1 MHz

Remarks

Stop Frequency $\geq 10 \times$ Start Frequency

To set or query the start frequency of the sweep signal, run the `:BODEplot:FREQuency:START` command.

Return Format

The query returns the stop frequency in scientific notation. The unit is Hz.

Example

```
:BODEplot:FREQuency:STOP 5000      /*Sets the stop frequency of the
sweep signal to 5000 Hz.*/
:BODEplot:FREQuency:STOP?           /*The query returns 5.000000E+3.*/
```

3.5.9 :BODEplot:FREQuency:FIXed

Syntax

`:BODEplot:FREQuency:FIXed <freq>`

`:BODEplot:FREQuency:FIXed?`

Description

Sets or queries the fixed frequency of the sweep signal in the bode plot. The default unit is Hz.

Parameter

Name	Type	Range	Default
<freq>	Real	10 Hz to 50 MHz	1 kHz

Remarks

N/A

Return Format

The query returns the fixed frequency value in scientific notation. The unit is Hz.

Example

```
:BODEplot:FREQuency:FIXed 100      /*Sets the fixed frequency of
the sweep signal to 100 Hz.*/
:BODEplot:FREQuency:FIXed?         /*The query returns 1.000000E
+2.*/
```

3.5.10 :BODEplot:POINts

Syntax

```
:BODEplot:POINts <num>
```

```
:BODEplot:POINts?
```

Description

Sets or queries the number of sweep points per decade.

Parameter

Name	Type	Range	Default
<num>	Integer	10 to 100	10

Remarks

N/A

Return Format

The query returns the number of sweep points per decade in integer.

Example

```
:BODEplot:POINts 20      /*Sets the number of the sweep points per
decade to 20.*/
:BODEplot:POINts?        /*The query returns 20.*/
```

3.5.11 :BODEplot:VOLTage

Syntax

```
:BODEplot:VOLTage <range>,<amp>
```

```
:BODEplot:VOLTage? <range>
```

Description

Sets or queries the variable amplitude of the sweep signal in the specified frequency range in the bode plot. The default unit of voltage is V, and the default frequency unit is Hz.

Parameter

Name	Type	Range	Default
<amp>	Real	Refer to <i>Remarks</i>	200 mV
<range>	Discrete	{ALL 10 100 1K 10K 100K 1M 10M 25M 1000 10000 100000 1000000 10000000 25000000 }	-

Name	Type	Range	Default
		1e1 1e2 1e3 1e4 1e5 1e6 1e7 2.5e7}	

Remarks

- When <range> is set to ALL: sets a unified voltage amplitude for the sweep signal in all the frequency ranges, with the voltage amplitude invariable.
- When <range> is set to other values other than ALL: sets a voltage amplitude for the specified range, with the voltage amplitude variable.

Return Format

The query returns the voltage amplitude of the sweep signal for the specified output frequency range in scientific notation. The unit is V.

Example

```
:BODEplot:VOLTage 100,0.3 /*Sets the voltage amplitude of the
signal whose frequency range is greater than 100 Hz to 300 mV.*/
:BODEplot:VOLTage? 100 /*The query returns 3.000000E-1.*/
```

3.5.12 :BODEplot:VOLTage:VARiance

Syntax

```
:BODEplot:VOLTage:VARiance <bool>
```

```
:BODEplot:VOLTage:VARiance?
```

Description

Sets or queries whether the voltage range of the bode plot is variable.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:BODEplot:VOLTage:VARiance ON /* Sets the voltage range to
variable.*/
:BODEplot:VOLTage:VARiance? /*The query returns 1.*/
```

3.5.13 :BODEplot:OUTput:VOLTage**Syntax**

```
:BODEplot:OUTput:VOLTage <amp>
:BODEplot:OUTput:VOLTage?
```

Description

Sets or queries the output voltage amplitude in the bode plot. The default unit of voltage is V.

Parameter

Name	Type	Range	Default
<amp>	Real	Refer to <i>Remarks</i>	200 mV

Remarks**Return Format**

The query returns the output voltage amplitude in scientific notation. The unit is V.

Example

```
:BODEplot:OUTput:VOLTage 0.3 /*Sets the output voltage amplitude
to 300 mV.*/
:BODEplot:OUTput:VOLTage? /*The query returns
+3.000000000000E-01.*/
```

3.5.14 :BODEplot:AFG:SOURce**Syntax**

```
:BODEplot:AFG:SOURce <source>
:BODEplot:AFG:SOURce?
```

Description

Sets or queries the AFG output channel in the bode plot.

Parameter

Name	Type	Range	Default
<source>	Integer	1 to 2	1

Remarks

N/A

Return Format

The query returns the AFG output channel in integer.

Example

```
:BODEplot:AFG:SOURce 1      /*Sets the AFG output channel in the bode
plot to AFG1.*/
:BODEplot:AFG:SOURce?      /*The query returns 1.*/
```

3.5.15 :BODEplot:AFG:LOAD

Syntax

:BODEplot:AFG:LOAD <ohms>

:BODEplot:AFG:LOAD?

Description

Sets or queries the AFG output impedance in the bode plot.

Parameter

Name	Type	Range	Default
<ohms>	Discrete	{50 INFINITY}	INFINITY

Remarks

- 50: indicates that the AFG output impedance is 50 Ω .
- INFINITY: indicates that the AFG output impedance is HighZ (1 M Ω).

Return Format

The query returns 50 or INF.

Example

```
:BODEplot:AFG:LOAD 50      /*Sets the AFG output impedance in the
bode plot to 50 $\Omega$ .*/
:BODEplot:AFG:LOAD?      /*The query returns 50.*/
```

3.6 :CHANNEL<n> Commands

The :CHANNEL<n> commands are used to set or query the bandwidth limit, coupling, vertical scale, vertical offset, and other vertical system parameters of the analog channel.

- Setting the bandwidth limit can reduce the noises in the displayed waveforms. For example, the signal under test is a pulse with high frequency oscillation. When the bandwidth limit is turned off, the high frequency components of the signal under test can pass the channel. When the bandwidth limit is turned on, the high frequency components found in the signal under test that are greater than the limit are attenuated.
- You can remove unwanted signals by setting the coupling mode. For example, the signal under test is a square waveform with DC offset. AC coupling mode can block the DC components.
- When you use an oscilloscope to make actual measurements, a small offset that arises from the temperature drift of the component or external environment disturbance may occur on the zero-cross voltage of the channel, which will affect the measurement results of the vertical parameters. This series oscilloscope allows you to set an offset calibration voltage for calibrating the zero point of the corresponding channel so as to improve the accuracy of the measurement results.
- When the fine adjustment is enabled, you can further adjust the vertical scale within a relatively smaller range to improve vertical resolution, making it easier to view waveform details.

3.6.1 :CHANnel<n>:BWLimit

Syntax

```
:CHANnel<n>:BWLimit <val>
```

```
:CHANnel<n>:BWLimit?
```

Description

Sets or queries the bandwidth limit of the specified channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-

Name	Type	Range	Default
<val>	Discrete	Refer to <i>Remarks</i>	OFF

Remarks

- **1 MΩ:** {OFF|20M|200M}, with the unit Hz.
- **50 Ω:** The range of values for different models is as follows, with the unit Hz.
 - DS9202: {OFF|200M|500M|1G}
 - DS9204: {OFF|200M|500M|1G|2G}
 - MSO9402/DS9404: {OFF|200M|500M|1G|2G|3G}
 - DS9604: {OFF|200M|500M|1G|2G|3G|4G|5G}

When set to OFF, the bandwidth limit is disabled.

Return Format

The query returns 20M, 200M or OFF (@1 MΩ); the query returns 200M, 500M, 1G, 2G, 3G, 4G, 5G or OFF (@50 Ω).

Example

```
:CHANnel1:BWLimit 20M      /*Enables the 20MHz bandwidth limit.*/
:CHANnel1:BWLimit?         /*The query returns 20M.*/
```

3.6.2 :CHANnel<n>:COUpling

Syntax

```
:CHANnel<n>:COUpling <coupling>
```

```
:CHANnel<n>:COUpling?
```

Description

Sets or queries the coupling mode of the specified channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<coupling>	Discrete	{AC DC GND}	DC

Remarks

- **AC:** the DC components of the signal under test are blocked.

- **DC:** both DC and AC components of the signal under test can pass through the channel.
- **GND:** both DC and AC components of the signal under test are blocked.

Return Format

The query returns AC, DC, or GND.

Example

```
:CHANnel1:COUPling AC      /*Sets the coupling mode to AC.*/
:CHANnel1:COUPling?       /*The query returns AC.*/
```

3.6.3 :CHANnel<n>:DISPlay

Syntax

```
:CHANnel<n>:DISPlay <bool>
```

```
:CHANnel<n>:DISPlay?
```

Description

Enables or disables the specified channel; or queries the on/off status of the specified channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<bool>	Bool	{{1 ON}} {0 OFF}}	1 ON

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:CHANnel1:DISPlay ON      /*Enables CHANnel1.*/
:CHANnel1:DISPlay?       /*The query returns 1.*/
```

3.6.4 :CHANnel<n>:INVert

Syntax

```
:CHANnel<n>:INVert <bool>
```

```
:CHANnel<n>:INVert?
```

Description

Turns on or off the waveform invert for the specified channel; or queries the on/off status of the waveform invert for the specified channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<bool>	Bool	{{1 ON}} {0 OFF}}	0 OFF

Remarks

When the waveform invert is turned off, the waveform is displayed normally; when the waveform invert is turned on, the voltage values of the displayed waveform are inverted.

Return Format

The query returns 1 or 0.

Example

```
:CHANnel1:INVert ON      /*Enables the waveform invert for CH1.*/
:CHANnel1:INVert?        /*The query returns 1.*/
```

3.6.5 :CHANnel<n>:OFFSet

Syntax

```
:CHANnel<n>:OFFSet <offset>
```

```
:CHANnel<n>:OFFSet?
```

Description

Sets or queries the vertical offset of the specified channel. The default unit is V.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<offset>	Real	Refer to <i>Remarks</i>	0 V

Remarks

The range of the vertical offset of the specified channel is related to its current vertical scale and input impedance.

- When the input impedance is 1 MΩ:

- $\pm 0.8 \text{ V}$ ($\leq 80 \text{ mV/div}$)
- $\pm 4 \text{ V}$ ($> 80 \text{ mV/div}$, $\leq 320 \text{ mV/div}$)
- $\pm 18 \text{ V}$ ($> 320 \text{ mV/div}$, $\leq 3.2 \text{ V/div}$)
- $\pm 100 \text{ V}$ ($> 3.2 \text{ V/div}$, $\leq 10 \text{ V/div}$)
- When the input impedance is 50Ω :
 - $\pm 0.6 \text{ V}$ ($\leq 150 \text{ mV/div}$)
 - $\pm 2.2 \text{ V}$ ($> 150 \text{ mV/div}$, $\leq 370 \text{ mV/div}$)
 - $\pm 3.8 \text{ V}$ ($> 370 \text{ mV/div}$)

You can send the `:CHANnel<n>:SCALE` command to set or query the vertical scale of the specified channel.

You can send the `:CHANnel<n>:IMPedance` command to set or query the input impedance of the specified analog channel.

Return Format

The query returns the vertical offset in scientific notation.

Example

```
:CHANnel1:OFFSet 0.01 /*Sets the vertical offset of CH1 to 10
mV.*/
:CHANnel1:OFFSet? /*The query returns 1.000000E-02.*/
```

3.6.6 :CHANnel<n>:TCALibrate

Syntax

`:CHANnel<n>:TCALibrate <val>`

`:CHANnel<n>:TCALibrate?`

Description

Sets or queries the delay calibration time (used to calibrate the zero offset of the corresponding channel) of the specified channel. The unit is s.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<val>	Real	-100 ns to 100 ns	0 s

Remarks

N/A

Return Format

The query returns the delay calibration time in scientific notation.

Example

```
:CHANnel1:TCALibrate 0.00000002 /*Sets the delay calibration time
to 20 ns.*/
:CHANnel1:TCALibrate? /*The query returns 2.000000E-8.*/
```

3.6.7 :CHANnel<n>:SCALE

Syntax

:CHANnel<n>:SCALE <scale>

:CHANnel<n>:SCALE?

Description

Sets or queries the vertical scale of the specified channel. Its default unit is V/div.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<scale>	Real	Refer to <i>Remarks</i>	500 mV

Remarks

The range of the vertical scale of the channel is related to probe ratio, and attenuation ratio.

- When the input impedance is 1 M Ω , the probe ratio is 1X, and the attenuation ratio is 1X: the range of <scale> is from 1 mV/div to 10 V/div.
- When the input impedance is 50 Ω , the probe ratio is 1X, and the attenuation ratio is 1X: the range of <scale> is from 1 mV/div to 1 V/div.

You can send the *:CHANnel<n>:IMPedance* command to set or query the input impedance of the specified analog channel.

You can send the *:CHANnel<n>:PROBe* command to set or query the probe ratio of the specified analog channel.

You can send the *:CHANnel<n>:PROBe:EXTattenuation* command to set or query the probe attenuation ratio of the specified analog channel.

Return Format

The query returns the vertical scale in scientific notation. The unit is V/div.

Example

```
:CHANnel1:SCALe 0.1/*Sets the vertical scale of CH1 to 0.1 V/div.*/
:CHANnel1:SCALe? /*The query returns 1.000000E-01.*/
```

3.6.8 :CHANnel<n>:IMPedance

Syntax

```
:CHANnel<n>:IMPedance <impedance>
```

```
:CHANnel<n>:IMPedance?
```

Description

Sets or queries the input impedance of the specified analog channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<impedance>	Discrete	{OMEG FIFTy}	OMEG

Remarks

- **OMEG:** 1 MΩ. This indicates that the input impedance of the oscilloscope is rather high, and the current flowing from the circuit under test to the oscilloscope can be ignored.
- **FIFTy:** 50 Ω. The oscilloscope shall match a device whose output impedance is 50 Ω.

Return Format

The query returns OMEG or FIFT.

Example

```
:CHANnel1:IMPedance OMEG /*Sets the input impedance of CH1 to 1
MΩ.*/
:CHANnel1:IMPedance? /*The query returns OMEG.*/
```

3.6.9 :CHANnel<n>:BVOLtage

Syntax

```
:CHANnel<n>:BVOLtage <vol>
```

:CHANnel<n>:BVOLtage?

Description

Sets or queries the bias voltage of the probe being connected to the specified channel. The default unit is V.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<vol>	Real	Affected by the probe model.	0 V

Remarks

- This function is used to adjust the signal under test that exceeds the input dynamic range of the probe amplifier to an appropriate range to ensure the integrity of the signal under test.
- This command is only valid when an active probe is correctly connected.
- This command is compatible. It functions the same as the **:CHANnel<n>:PROBe:BIAS** command.

Return Format

The query returns the bias voltage of the probe being connected to the specified channel in scientific notation. The unit is V.

Example

```
:CHANnel1:BVOLtage 0 /*Sets the bias voltage of probe currently
connected to CH1 to 0*/
:CHANnel1:BVOLTage? /*The query returns +0.000000000000000E+00*/
```

3.6.10 :CHANnel<n>:CStArt

Syntax

:CHANnel<n>:CStArt

Description

Starts calibration for the active probe currently connected to the specified analog channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-

Remarks

This command is only valid when an active probe is correctly connected.

Return Format

N/A

Example

N/A

3.6.11 :CHANnel<n>:PROBe

Syntax

:CHANnel<n>:PROBe <atten>

:CHANnel<n>:PROBe?

Description

Sets or queries the probe ratio of the specified analog channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<atten>	Discrete	{0.001 0.002 0.005 0.01 0.02 0.05 0.1 0.2 0.5 1 2 5 10 15 20 50 100 150 200 500 1000 1500 2000 5000 10000 15000 20000 50000 User}	1

Remarks

- The range of the parameter <atten> is related to the channel amplitude unit. To set or query the amplitude unit of the specified channel, run the **:CHANnel<n>:UNITs** command.
When the amplitude unit is set to WATT, VOLTage, or UNKNown, the range of <atten> is from 0.001 to 50,000.
When the amplitude unit is set to AMPere, the range of <atten> is from 0.001 to 10, with the unit V/A.
- Display amplitude of the signal under test = Actual amplitude of the signal under test x Probe ratio (Probe ratio does not affect the actual amplitude of the signal)
- You can also self-define the probe ratio.

- The set probe ratio affects the value and settable range of the current vertical scale. To query the vertical scale, run the `:CHANnel<n>:SCALE` command.

Return Format

The query returns the probe ratio of the specified analog channel in scientific notation.

Example

```
:CHANnel1:PROBe 10 /*Sets the probe ratio of CH1 to 10X.*/
:CHANnel1:PROBe? /*The query returns +1.000000000000E
+01.*/
```

3.6.12 :CHANnel<n>:PROBe:DElay

Syntax

`:CHANnel<n>:PROBe:DElay <delay>`

`:CHANnel<n>:PROBe:DElay?`

Description

Sets or queries the probe delay time of the specified channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<delay>	Real	-100 ns to 100 ns	0 s

Remarks

- To avoid measurement result errors arising from the transmission delay of the probe cable, the oscilloscope provides the probe delay adjustment function for the active probe.
- This command is only valid when an active probe is correctly connected.

Return Format

The query returns the probe delay time in scientific notation.

Example

```
:CHANnel1:PROBe:DElay 0.00000001 /*Sets the probe delay time of
CH1 to 10 ns.*/
:CHANnel1:PROBe:DElay? /*The query returns +1.000000000000E-8.*/
```

3.6.13 :CHANnel<n>:PROBe:BIAS

Syntax

:CHANnel<n>:PROBe:BIAS <bias>

:CHANnel<n>:PROBe:BIAS?

Description

Sets or queries the probe bias voltage for the specified channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<bias>	Real	Affected by the probe model.	0 V

Remarks

- This function is used to adjust the signal under test that exceeds the input dynamic range of the probe amplifier to an appropriate range to ensure the signal integrity.
- This command is only valid when an active probe is correctly connected.

Return Format

The query returns the probe bias voltage in scientific notation.

Example

N/A

3.6.14 :CHANnel<n>:PROBe:CALibration

Syntax

:CHANnel<n>:PROBe:CALibration

Description

Performs the probe calibration.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-

Remarks

N/A

Return Format

N/A

Example

```
:CHANnel1:PROBe:CALibration /*Performs the probe calibration for
CH1.*/
```

3.6.15 :CHANnel<n>:PROBe:DEMag

Syntax

```
:CHANnel<n>:PROBe:DEMag
```

Description

Starts to demagnetize the current probe that is connected to the specified channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-

Remarks

This command is only valid when a current probe is correctly connected.

Return Format

N/A

Example

```
:CHANnel1:PROBe:DEMag /*Starts to demagnetize the current probe
that is connected to CH1.*/
```

3.6.16 :CHANnel<n>:PROBe:EXTattenuation

Syntax

```
:CHANnel<n>:PROBe:EXTattenuation <atten>
```

```
:CHANnel<n>:PROBe:EXTattenuation?
```

Description

Sets or queries the attenuation of the specified probe.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<atten>	Real	10.00E-06 to 1.00E+05	1

Remarks

- display amplitude of the signal under test = actual amplitude of the signal under test x probe ratio x attenuation ratio (not affect the actual amplitude of the signal)
- The setting of the probe attenuation ratio affects the value and settable range of the current vertical scale. You can send the `:CHANnel<n>:SCALE` command to query the vertical scale.

Return Format

The query returns the probe attenuation ratio in scientific notation.

Example

```
:CHANnel1:PROBe:EXTattenuation 20000 /*Sets the probe attenuation
ratio of CH1 to 20000.*/
:CHANnel1:PROBe:EXTattenuation? /*The query returns
+2.00000000000000E+04.*/
```

3.6.17 :CHANnel<n>:LABel:SHOW

Syntax

`:CHANnel<n>:LABel:SHOW <bool>`

`:CHANnel<n>:LABel:SHOW?`

Description

Sets or queries whether to display the label of the specified channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<bool>	Bool	{{1 ON}} {0 OFF}}	-

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:CHANnel1:LABel:SHOW ON          /*Displays the label of the
specified channel.*/
:CHANnel1:LABel:SHOW?            /*The query returns 1.*/
```

3.6.18 :CHANnel<n>:LABel:CONTent

Syntax

```
:CHANnel<n>:LABel:CONTent <str>
```

```
:CHANnel<n>:LABel:CONTent?
```

Description

Sets or queries the label of the specified channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<str>	ASCII String	The label can contain English letters and numbers, as well as some symbols.	-

Remarks

N/A

Return Format

The query returns the label of the specified channel in strings.

Example

```
:CHANnel1:LABel:CONTent ch1      /*Sets the label of Channel 1 to
ch1.*/
:CHANnel1:LABel:CONTent? /*The query returns ch1.*/
```

3.6.19 :CHANnel<n>:UNITs

Syntax

```
:CHANnel<n>:UNITs <units>
```

```
:CHANnel<n>:UNITs?
```

Description

Sets or queries the amplitude display unit of the specified analog channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<units>	Discrete	{WATT AMPere VOLTage UNKNow}	VOLTage

Remarks

N/A

Return Format

The query returns VOLT, WATT, AMP, or UNKN.

Example

```
:CHANnel1:UNITs VOLTage /*Sets the amplitude display unit of CH1
to VOLTage.*/
:CHANnel1:UNITs? /*The query returns VOLT.*/
```

3.6.20 :CHANnel<n>:VERNier

Syntax

```
:CHANnel<n>:VERNier <bool>
```

```
:CHANnel<n>:VERNier?
```

Description

Enables or disables the fine adjustment of the vertical scale of the specified channel; or queries the on/off status of the fine adjustment of the vertical scale of the specified channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:CHANnel1:VERNier ON /*Enables the fine adjustment of the
vertical scale of CH1.*/
:CHANnel1:VERNier? /*The query returns 1.*/
```

3.6.21 :CHANnel<n>:POSition**Syntax**

```
:CHANnel<n>:POSition <offset>
```

```
:CHANnel<n>:POSition?
```

Description

Sets or queries the bias voltage of the specified channel. The default unit is V.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<offset>	Real	Refer to <i>Remarks</i>	0 V

Remarks

The range of bias voltage is related to the the vertical scale.

- When the input impedance is 1 M Ω :
 - ± 0.8 V (≤ 80 mV/div)
 - ± 4 V (> 80 mV/div, ≤ 320 mV/div)
 - ± 18 V (> 320 mV/div, ≤ 3.2 V/div)
 - ± 100 V (> 3.2 V/div, ≤ 10 V/div)
- When the input impedance is 50 Ω :
 - ± 0.6 V (≤ 150 mV/div)
 - ± 2.2 V (> 150 mV/div, ≤ 370 mV/div)
 - ± 3.8 V (> 370 mV/div)

You can send the **:CHANnel<n>:SCALE** command to set or query the vertical scale of the specified channel.

You can send the **:CHANnel<n>:IMPedance** command to set or query the input impedance of the specified analog channel.

Return Format

The query returns the bias voltage of the specified channel in scientific notation. The unit is V.

Example

```
:CHANnel1:POSition 10      /*Sets the bias voltage of CH1 to 10 V.*/
:CHANnel1:POSition?        /*The query returns 1.000000E+01.*/
```

3.7 :COUNter Commands

:COUNter commands are used to set or query the measurement and statistic parameters for the frequency counter.

The frequency counter analysis function provides frequency, period, or edge event counter measurements on any analog channel.

3.7.1 :COUNter:CURRent?

Syntax

```
:COUNter:CURRent?
```

Description

Queries the measurement value of the frequency counter.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the current measurement value of the frequency counter in scientific notation.

Example

```
N/A
```

3.7.2 :COUNter:ENABLE

Syntax

```
:COUNter:ENABLE <bool>
```

```
:COUNter:ENABLE?
```

Description

Enables or disables the frequency counter; or queries the on/off status of the frequency counter.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:COUNter:ENABle ON      /*Enables the frequency counter.*/  
:COUNter:ENABle?       /*The query returns 1.*/*
```

3.7.3 :COUNter:SOURce

Syntax

```
:COUNter:SOURce <source>
```

```
:COUNter:SOURce?
```

Description

Sets or queries the source of the frequency counter.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4 EXT}	CHANnel1

Remarks

N/A

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, CHAN4 or EXT.

Example

```
:COUNter:SOURce CHANnel2      /*Sets the frequency counter source to
CHANnel2.*/
:COUNter:SOURce?              /*The query returns CHAN2.*/
```

3.7.4 :COUNter:MODE**Syntax**

```
:COUNter:MODE <mode>
```

```
:COUNter:MODE?
```

Description

Sets or queries the mode of the frequency counter.

Parameter

Name	Type	Range	Default
<mode>	Discrete	{FREQuency PERiod TOTalize}	FREQuency

Remarks

- **FREQuency:** indicates the Frequency measurement.
- **PERiod:** indicates the Period measurement.
- **TOTalize:** indicates the Totalize measurement.

Return Format

The query returns FREQ, PER, or TOT.

Example

```
:COUNter:MODE PERiod          /*Sets the mode of the frequency counter
to PERiod.*/
:COUNter:MODE?                /*The query returns PER.*/
```

3.7.5 :COUNter:NDIGits**Syntax**

```
:COUNter:NDIGits <val>
```

```
:COUNter:NDIGits?
```

Description

Sets or queries the resolution of the frequency counter.

Parameter

Name	Type	Range	Default
<val>	Integer	3 to 8	4

Remarks

When the measurement mode of the frequency counter is Period or Frequency, you need to set resolution. When the mode is Totalize, resolution is unavailable to set. You can run the `:COUNter:MODE` command to set or query the measurement mode of the frequency counter.

Return Format

The query returns an integer ranging from 3 to 8.

Example

```
:COUNter:NDIGits 4          /*Sets the resolution of the frequency  
counter to 4.*/  
:COUNter:NDIGits?          /*The query returns 4.*//
```

3.7.6 :COUNter:STATistic:ENABLE

Syntax

`:COUNter:STATistic:ENABle <bool>`

`:COUNter:STATistic:ENABle?`

Description

Enables or disables the statistical function of the frequency counter; or queries the on/off status of the statistical function of the frequency counter.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

The statistical function is only available for "Period" or "Frequency" measurement mode, but unavailable for "Totalize". To set or query the measurement mode of the frequency counter, run the `:COUNter:MODE` command.

Return Format

The query returns 1 or 0.

Example

```
:COUNter:STATistic:ENABle ON      /*Enables the statistical function  
of the frequency counter.*/  
:COUNter:STATistic:ENABle?        /*The query returns 1.*/
```

3.7.7 :COUNter:STATistic:CLEar

Syntax

```
:COUNter:STATistic:CLEar
```

Description

Clears the statistics results.

Parameter

N/A

Remarks

Available when "Totalize", "Frequency", or "Period" is selected under "Measure".

Return Format

N/A

Example

N/A

3.7.8 :COUNter:STATistic:MAXimum?

Syntax

```
:COUNter:STATistic:MAXimum?
```

Description

Queries the maximum value in the statistics results of the frequency counter.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the maximum value in the statistics results of the frequency counter in scientific notation.

Example

N/A

3.7.9 :COUNter:STATistic:MINimum?

Syntax

:COUNter:STATistic:MINimum?

Description

Queries the minimum value in the statistics results of the frequency counter.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the minimum value in the statistics results of the frequency counter in scientific notation.

Example

N/A

3.7.10 :COUNter:STATistic:AVERages?

Syntax

:COUNter:STATistic:AVERages?

Description

Queries the average value in the statistics results of the frequency counter.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the average value in the statistics results of the frequency counter in scientific notation.

Example

N/A

3.8 :CURSor Commands

The **Cursor** commands are used to measure the X axis values (e.g. Time) and Y axis values (e.g. Voltage) of the waveform on the screen.

Before making cursor measurements, connect the signal to the oscilloscope to acquire stable display. The cursor measurement function provides the following two cursors.

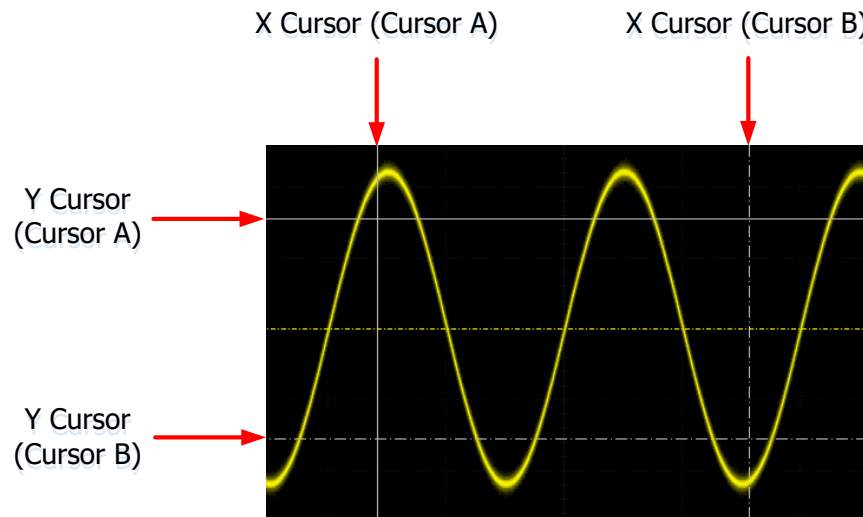 


Figure 3.6 Cursors

- **X Cursor**

X cursor is a vertical solid/dotted line that is used to make horizontal adjustments. It can be used to measure time (s) and frequency (Hz).

- Cursor A is a vertical solid line and Cursor B is a vertical dotted line.
- In the XY cursor mode, cursor X is used to measure the waveform amplitude of CH1.

- **Y Cursor**

Y cursor is a horizontal solid/dotted line that is used to make vertical adjustments. It can be used to measure amplitude (the unit is the same as that of the source channel amplitude).

- Cursor A is a horizontal solid line and Cursor B is a horizontal dotted line.
- In XY cursor mode, cursor Y is used to measure the waveform amplitude of CH2.

Cursor Measurement Results

- AX: indicates the X value at Cursor A.
- AY: indicates the Y value at Cursor A.
- BX: indicates the X value at Cursor B.
- BY: indicates the Y value at Cursor B.
- ΔX : indicates the horizontal spacing between Cursor A and Cursor B.
- ΔY : indicates the vertical spacing between Cursor A and Cursor B.
- $1/\Delta X$: indicates the reciprocal of the horizontal spacing between Cursor A and Cursor B.

Cursor Mode

- **Manual Mode**

In the manual cursor mode, you can adjust the cursor manually to measure the value of the waveforms of the specified source at the current cursor. If the settings for the parameter such as the cursor type and measurement source are different, the measurement results will be different for cursor measurement.

- **Track Mode**

In the Track mode, you can adjust the two pairs of cursors (Cursor A and Cursor B) to measure the X and Y values on two different sources respectively. When the cursors are moved horizontally/vertically, the markers will position on the waveform automatically. When the waveform is expanded or compressed horizontally/vertically, the markers will track the points being marked at the last adjustment of the cursors.

- **XY Mode**

By default, XY mode is unavailable. It is available only when the horizontal time base mode is "XY".

3.8.1 :CURSor:MODE

Syntax

`:CURSor:MODE <mode>`

`:CURSor:MODE?`

Description

Sets or queries the mode of the cursor measurement.

Parameter

Name	Type	Range	Default
<mode>	Discrete	{OFF MANual TRACk XY}	OFF

Remarks

- **OFF**: disables the cursor measurement function.
- **MANual**: the manual mode of cursor measurement.
- **TRACk**: the track mode of cursor measurement.
- **XY**: the XY mode of cursor measurement. It is only valid when you select "XY" mode. You can use *:TIMebase:MODE* to query or set the mode.

For functions of different cursor measurement modes, refer to *Cursor Mode*.

Return Format

The query returns OFF, MAN, TRAC, or XY.

Example

```
:CURSor:MODE MANual /*Selects the manual mode of cursor  
measurement.*/  
:CURSor:MODE? /*The query returns MAN.*/*
```

3.8.2 :CURSor:MANual:HREF

Syntax

:CURSor:MANual:HREF

Description

Sets the ratio reference position of Cursor A at X Cursor to 0% and sets the ratio reference position of Cursor B at X Cursor to 100% when the horizontal unit is set to Percent(%).

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.8.3 :CURSor:MANual:VREF

Syntax

:CURSor:MANual:VREF

Description

Sets the ratio reference position of Cursor A at Y Cursor to 0% and sets the ratio reference position of Cursor B at Y Cursor to 100% when the vertical unit is Percent(%).

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.8.4 :CURSor:MANual:TYPE

Syntax

:CURSor:MANual:TYPE <type>

:CURSor:MANual:TYPE?

Description

Sets or queries the cursor type in the manual mode of cursor measurement.

Parameter

Name	Type	Range	Default
<type>	Discrete	{TIME AMPLitude}	TIME

Remarks

- **TIME:** indicates X cursor, which is often used to measure the time parameters.
- **AMPLitude:** indicates Y cursor, which is often used to measure the voltage parameters.

Return Format

The query returns TIME or AMPL.

Example

```
:CURSor:MANual:TYPE AMPLitude /*Sets the cursor type to
AMPLitude.*/
:CURSor:MANual:TYPE? /*The query returns AMPL.*/
```

3.8.5 :CURSor:MANual:MODE**Syntax**

```
:CURSor:MANual:MODE <type>
```

```
:CURSor:MANual:MODE?
```

Description

Sets or queries the hold mode of the manual cursor.

Parameter

Name	Type	Range	Default
<type>	Discrete	{VAL POS}	VAL

Remarks

- **VAL:** indicates the value.
- **POS:** indicates the location.

Return Format

The query returns VAL or POS.

Example

```
:CURSor:MANual:MODE POS /* Sets the hold mode for the manual
cursor to POS.*/
:CURSor:MANual:MODE? /* The query returns POS.*/
```

3.8.6 :CURSor:MANual:SOURce1**Syntax**

```
:CURSor:MANual:SOURce1 <source>
```

```
:CURSor:MANual:SOURce1?
```

Description

Sets or queries Source A of the manual mode of cursor measurement.

Parameter

Name	Type	Range	Default
<source>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4 MATH1 MATH2 MATH3 MATH4 NONE}	CHANnel1

Remarks

None.

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4, MATH1, MATH2, MATH3, MATH4, or NONE.

Example

```
:CURSor:MANual:SOURce1 CHANnel2 /*Sets Source A of the manual  
mode of cursor measurement to CHANnel2.*/  
:CURSor:MANual:SOURce1? /*The query returns CHAN2.*/
```

3.8.7 :CURSor:MANual:SOURce2

Syntax

```
:CURSor:MANual:SOURce2 <source>
```

```
:CURSor:MANual:SOURce2?
```

Description

Sets or queries Source B of the manual mode of cursor measurement.

Parameter

Name	Type	Range	Default
<source>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4 MATH1 MATH2 MATH3 MATH4 NONE}	CHANnel1

Remarks

None.

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4, MATH1, MATH2, MATH3, MATH4, or NONE.

Example

```
:CURSor:MANual:SOURce2 CHANnel2 /*Sets Source B of the manual
mode of cursor measurement to CHANnel2.*/
:CURSor:MANual:SOURce2? /*The query returns CHAN2.*/
```

3.8.8 :CURSor:MANual:TUNit**Syntax**

```
:CURSor:MANual:TUNit <tunit>
:CURSor:MANual:TUNit?
```

Description

Sets or queries the horizontal unit in the manual mode of cursor measurement.

Parameter

Name	Type	Range	Default
<tunit>	Discrete	{SECond}	SECond

Remarks

SECond: in the measurement results, AX, BX, and ΔX are expressed in "s"; $1/\Delta X$ in "Hz".

Return Format

The query returns SEC.

Example

```
:CURSor:MANual:TUNit SECond /*Sets the horizontal unit to
SECond.*/
:CURSor:MANual:TUNit? /*The query returns SEC.*/
```

3.8.9 :CURSor:MANual:VUNit**Syntax**

```
:CURSor:MANual:VUNit <vunit>
:CURSor:MANual:VUNit?
```

Description

Sets or queries the vertical unit in the manual mode of cursor measurement.

Parameter

Name	Type	Range	Default
<vunit>	Discrete	{SOURce}	SOURce

Remarks

SOURCE: in the measurement results, the units of AY, BY, and ΔY are automatically set to the unit of the current source.

Return Format

The query returns SOUR .

Example

```
:CURSor:MANual:VUNit SOURce /*Sets the units of AY, BY, and  $\Delta Y$  to
be the unit of the current source.*/
:CURSor:MANual:VUNit? /*The query returns SOUR.*/
```

3.8.10 :CURSor:MANual:CAX

Syntax

```
:CURSor:MANual:CAX <ax>
```

```
:CURSor:MANual:CAX?
```

Description

Sets or queries the horizontal position of Cursor A in the manual mode of cursor measurement.

Parameter

Name	Type	Range	Default
<ax>	Real	Refer to <i>Remarks</i>	-

Remarks

The range of the horizontal position of Cursor A is determined by the current horizontal scale and position.

Return Format

The query returns the horizontal position of Cursor A in scientific notation. The unit is s.

Example

```
:CURSor:MANual:CAX 0.00000001 /*Sets the horizontal position of
Cursor A to 10 ns.**/
:CURSor:MANual:CAX? /*The query returns 1.000000E-8.*/
```

3.8.11 :CURSor:MANual:CAY

Syntax

```
:CURSor:MANual:CAY <ay>
```

```
:CURSor:MANual:CAY?
```

Description

Sets or queries the vertical position of Cursor A in the manual mode of cursor measurement.

Parameter

Name	Type	Range	Default
<ay>	Real	Refer to <i>Remarks</i>	-

Remarks

The range of the vertical position of Cursor A is determined by the current vertical scale and position.

Return Format

The query returns the vertical position of Cursor A in scientific notation. The unit is V.

Example

```
:CURSor:MANual:CAY 0.1 /*Sets the vertical position of Cursor A
to 0.1 V.*/
:CURSor:MANual:CAY? /*The query returns 1.000000E-1.*/
```

3.8.12 :CURSor:MANual:CBX

Syntax

```
:CURSor:MANual:CBX <bx>
```

```
:CURSor:MANual:CBX?
```

Description

Sets or queries the horizontal position of Cursor B in the manual mode of cursor measurement.

Parameter

Name	Type	Range	Default
<bx>	Real	Refer to <i>Remarks</i>	-

Remarks

The range of the horizontal position of Cursor B is determined by the current horizontal scale and position.

Return Format

The query returns the horizontal position of Cursor B in scientific notation. The unit is S.

Example

```
:CURSor:MANual:CBX 0.00000001 /*Sets the horizontal position of
Cursor B to 10 ns.*/
:CURSor:MANual:CBX? /*The query returns 1.000000E-8.*/
```

3.8.13 :CURSor:MANual:CBY**Syntax**

```
:CURSor:MANual:CBY <by>
```

```
:CURSor:MANual:CBY?
```

Description

Sets or queries the vertical position of Cursor B in the manual mode of cursor measurement.

Parameter

Name	Type	Range	Default
<by>	Real	Refer to <i>Remarks</i>	-

Remarks

The range of the vertical position of Cursor B is determined by the current vertical scale and position.

Return Format

The query returns the vertical position of Cursor B in scientific notation. The unit is V.

Example

```
:CURSor:MANual:CBY 0.1 /*Sets the vertical position of Cursor B
to 0.1 V.*/
:CURSor:MANual:CBY? /*The query returns 1.000000E-1.*/
```

3.8.14 :CURSor:MANual:AXValue?**Syntax**

```
:CURSor:MANual:AXValue?
```

Description

Queries the X value at Cursor A in the manual mode of cursor measurement. The unit is determined by the horizontal unit selected for the currently corresponding channel.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the X value at Cursor A in scientific notation.

Example

N/A

3.8.15 :CURSor:MANual:AYValue?

Syntax`:CURSor:MANual:AYValue?`**Description**

Queries the Y value at Cursor A in the manual mode of cursor measurement. The unit is determined by the currently selected vertical unit.

Parameter

N/A

Remarks

- The returned value is the same as the measurement value in the Cursor interface. Therefore, the unit is related to the vertical unit. When the vertical unit of cursor is set to Source, the unit of the returned value is the same as vertical unit of the channel.
- No value is returned when the cursor measurement value is invalid.

Return Format

The query returns the Y value at Cursor A in scientific notation.

Example

N/A

3.8.16 :CURSor:MANual:BXValue?

Syntax`:CURSor:MANual:BXValue?`

Description

Queries the X value at Cursor B in the manual mode of cursor measurement. The unit is determined by the currently selected horizontal unit.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the X value at Cursor B in scientific notation.

Example

N/A

3.8.17 :CURSor:MANual:BYValue?

Syntax

:CURSor:MANual:BYValue?

Description

Queries the Y value at Cursor B in the manual mode of cursor measurement. The unit is determined by the currently selected vertical unit.

Parameter

N/A

Remarks

- The returned value is the same as the measurement value in the Cursor interface. Therefore, the unit is related to the vertical unit. When the vertical unit of cursor is set to Source, the unit of the returned value is the same as vertical unit of the channel.
- No value is returned when the cursor measurement value is invalid.

Return Format

The query returns the Y value at Cursor B in scientific notation.

Example

N/A

3.8.18 :CURSor:MANual:XDELta?

Syntax

:CURSor:MANual:XDELta?

Description

Queries the difference (ΔX) between the X value at Cursor A and the X value at Cursor B in the manual mode of cursor measurement. The unit is determined by the currently selected horizontal unit.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the current difference in scientific notation.

Example

N/A

3.8.19 :CURSor:MANual:IXDelta?

Syntax

:CURSor:MANual:IXDelta?

Description

Queries the reciprocal ($1/\Delta X$) of the absolute difference between the X value at Cursor A and the X value at Cursor B in the manual mode of cursor measurement. The unit is determined by the currently selected horizontal unit.

Parameter

N/A

Remarks

N/A

Return Format

The query returns $1/\Delta X$ in scientific notation.

Example

N/A

3.8.20 :CURSor:MANual:YDELta?

Syntax

:CURSor:MANual:YDELta?

Description

Queries the difference (ΔY) between the Y value at Cursor A and the Y value at Cursor B in the manual mode of cursor measurement. The unit is determined by the currently selected vertical unit.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the current difference in scientific notation.

Example

N/A

3.8.21 :CURSor:TRACk:SOURce1

Syntax

:CURSor:TRACk:SOURce1 <source>

:CURSor:TRACk:SOURce1?

Description

Sets or queries the channel source of Cursor A in the track mode of cursor measurement.

Parameter

Name	Type	Range	Default
<source>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4 MATH1 MATH2 MATH3 MATH4 NONE}	CHANnel1

Remarks

When no channel is enabled, sending this command will enable the corresponding channel.

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4, MATH1, MATH2, MATH3, MATH4, or NONE.

Example

```
:CURSor:TRACk:SOURce1 CHANnel2    /*Sets the channel source to
CHANnel2.*/
:CURSor:TRACk:SOURce1?              /*The query returns CHAN2.*/
```

3.8.22 :CURSor:TRACk:SOURce2**Syntax**

:CURSor:TRACk:SOURce2 <source>

:CURSor:TRACk:SOURce2?

Description

Sets or queries the channel source of Cursor B in the track mode of cursor measurement.

Parameter

Name	Type	Range	Default
<source>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4 MATH1 MATH2 MATH3 MATH4 NONE}	CHANnel1

Remarks

When no channel is enabled, sending this command will enable the corresponding channel.

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4, MATH1, MATH2, MATH3, MATH4, or NONE.

Example

```
:CURSor:TRACk:SOURce2 CHANnel2    /*Sets the channel source to
CHANnel2.*/
:CURSor:TRACk:SOURce2?              /*The query returns CHAN2.*/
```

3.8.23 :CURSor:TRACk:TYPE**Syntax**

:CURSor:TRACk:TYPE <type>

:CURSor:TRACk:TYPE?

Description

Sets or queries the cursor type in the track mode of cursor measurement.

Parameter

Name	Type	Range	Default
<type>	Discrete	{TIME AMPLitude}	TIME

Remarks

- **TIME:** indicates X cursor, which is often used to measure the time parameters.
- **AMPLitude:** indicates Y cursor, which is often used to measure the voltage parameters.

Return Format

The query returns TIME or AMPL.

Example

```
:CURSor:TRACk:TYPE AMPLitude      /*Sets the cursor type to
AMPLitude.*/
:CURSor:TRACk:TYPE?                /*The query returns AMPL.*/
```

3.8.24 :CURSor:TRACk:CAX

Syntax

```
:CURSor:TRACk:CAX <ax>
```

```
:CURSor:TRACk:CAX?
```

Description

Sets or queries the horizontal position of Cursor A in the track mode of cursor measurement.

Parameter

Name	Type	Range	Default
<ax>	Real	Refer to <i>Remarks</i>	-

Remarks

The range of the horizontal position of Cursor A is determined by the current horizontal scale and position.

Return Format

The query returns the horizontal position of Cursor A in scientific notation. The unit is s.

Example

```
:CURSOR:TRACK:CAX 1.000000E-8 /*Sets the horizontal position of
Cursor A to 10 ns.*/
:CURSOR:TRACK:CAX? /*The query returns 1.000000E-8.*/
```

3.8.25 :CURSOR:TRACK:CBX**Syntax**

:CURSOR:TRACK:CBX <bx>

:CURSOR:TRACK:CBX?

Description

Sets or queries the horizontal position of Cursor B in the track mode of cursor measurement.

Parameter

Name	Type	Range	Default
<bx>	Real	Refer to <i>Remarks</i>	-

Remarks

The range of the horizontal position of Cursor B is determined by the current horizontal scale and position.

Return Format

The query returns the horizontal position of Cursor B in scientific notation. The unit is s.

Example

```
:CURSOR:TRACK:CBX 1.000000E-8 /*Sets the horizontal position of
Cursor B to 10 ns.*/
:CURSOR:TRACK:CBX? /*The query returns 1.000000E-8.*/
```

3.8.26 :CURSOR:TRACK:CAY**Syntax**

:CURSOR:TRACK:CAY <ay>

:CURSOR:TRACK:CAY?

Description

Sets or queries the vertical position of Cursor A in the track mode of cursor measurement.

Parameter

Name	Type	Range	Default
<ay>	Real	Refer to <i>Remarks</i>	-

Remarks

The range of the vertical position of Cursor A is determined by the current vertical scale and position.

Return Format

The query returns the vertical position of Cursor A in scientific notation. The unit is V.

Example

```
:CURSor:TRACk:CAY 0.1 /*Sets the vertical position of Cursor A
to 0.1 V.*/
:CURSor:TRACk:CAY? /*The query returns 1.000000E-1.*/
```

3.8.27 :CURSor:TRACk:CBY

Syntax

```
:CURSor:TRACk:CBY <by>
```

```
:CURSor:TRACk:CBY?
```

Description

Sets or queries the vertical position of Cursor B in the track mode of cursor measurement.

Parameter

Name	Type	Range	Default
<by>	Real	Refer to <i>Remarks</i>	-

Remarks

The range of the vertical position of Cursor B is determined by the current vertical scale and position.

Return Format

The query returns the vertical position of Cursor B in scientific notation. The unit is V.

Example

```
:CURSor:TRACk:CBY 0.1 /*Sets the vertical position of Cursor B  
to 0.1 V.*/  
:CURSor:TRACk:CBY? /*The query returns 1.000000E-1.*/
```

3.8.28 :CURSor:TRACk:AXValue?

Syntax

```
:CURSor:TRACk:AXValue?
```

Description

Queries the X value at Cursor A in the track mode of cursor measurement. The unit is determined by the amplitude unit selected for the currently corresponding channel.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the X value at Cursor A in scientific notation.

Example

N/A

3.8.29 :CURSor:TRACk:AYValue?

Syntax

```
:CURSor:TRACk:AYValue?
```

Description

Queries the Y value at Cursor A in the track mode of cursor measurement. The unit is the same as that selected for the current channel.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the Y value at Cursor A in scientific notation.

Example

N/A

3.8.30 :CURSor:TRACk:BXValue?**Syntax**`:CURSor:TRACk:BXValue?`**Description**

Queries the X value at Cursor B in the track mode of cursor measurement. The unit is determined by the amplitude unit selected for the currently corresponding channel.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the X value at Cursor B in scientific notation.

Example

N/A

3.8.31 :CURSor:TRACk:BYValue?**Syntax**`:CURSor:TRACk:BYValue?`**Description**

Queries the Y value at Cursor B in the track mode of cursor measurement. The unit is the same as that selected for the current channel.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the Y value at Cursor B in scientific notation.

Example

N/A

3.8.32 :CURSor:TRACk:XDELta?

Syntax

:CURSor:TRACk:XDELta?

Description

Queries the difference (ΔX) between the X value at Cursor A and the X value at Cursor B in the track mode of cursor measurement.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the current difference in scientific notation.

Example

N/A

3.8.33 :CURSor:TRACk:YDELta?

Syntax

:CURSor:TRACk:YDELta?

Description

Queries the difference (ΔY) between the Y value at Cursor A and the Y value at Cursor B in the track mode of cursor measurement. The unit is the same as that selected for the current channel.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the current difference in scientific notation.

Example

N/A

3.8.34 :CURSor:TRACk:IXDelta?

Syntax

:CURSor:TRACk:IXDelta?

Description

Queries the reciprocal ($1/\Delta X$) of the absolute difference between the X value at Cursor A and the X value at Cursor B in the track mode of cursor measurement. The default unit is Hz.

Parameter

N/A

Remarks

N/A

Return Format

The query returns $1/\Delta X$ in scientific notation.

Example

N/A

3.8.35 :CURSor:TRACk:MODE

Syntax

:CURSor:TRACk:MODE <mode>

:CURSor:TRACk:MODE?

Description

Sets or queries the axis in the track mode of cursor measurement.

Parameter

Name	Type	Range	Default
<mode>	Discrete	{Y X}	-

Remarks

N/A

Return Format

The query returns Y or X.

Example

```
:CURSor:TRACk:MODE X /*Sets the axis in the track mode of cursor
measurement to X-axis.*/
:CURSor:TRACk:MODE? /*The query returns X.*/
```

3.8.36 :CURSor:XY:AX**Syntax**

```
:CURSor:XY:AX <X>
```

```
:CURSor:XY:AX?
```

Description

Sets or queries the horizontal position of Cursor A in the XY cursor measurement mode.

Parameter

Name	Type	Range	Default
<X>	Real	Refer to <i>Remarks</i>	-

Remarks

Related to the current vertical scale and vertical offset.

Return Format

The query returns the horizontal position of Cursor A in scientific notation. The unit is V.

Example

```
:CURSor:XY:AX 0.1 /*Sets the horizontal position of Cursor A to
100 mV.*/
:CURSor:XY:AX? /*The query returns 1.000000E-1.*/
```

3.8.37 :CURSor:XY:BX**Syntax**

```
:CURSor:XY:BX <X>
```

```
:CURSor:XY:BX?
```

Description

Sets or queries the horizontal position of Cursor B in the XY cursor measurement mode.

Parameter

Name	Type	Range	Default
<x>	Real	Refer to <i>Remarks</i>	-

Remarks

Related to the current vertical scale and vertical offset.

Return Format

The query returns the horizontal position of Cursor B in scientific notation.

Example

```
:CURSor:XY:BX 0.1 /*Sets the horizontal position of Cursor B to
100 mV.*/
:CURSor:XY:BX? /*The query returns 1.000000E-1.*/
```

3.8.38 :CURSor:XY:AY**Syntax**

```
:CURSor:XY:AY <y>
```

```
:CURSor:XY:AY?
```

Description

Sets or queries the vertical position of Cursor A in the XY cursor measurement mode.

Parameter

Name	Type	Range	Default
<y>	Real	Refer to <i>Remarks</i>	-

Remarks

Related to the current vertical scale and vertical offset.

Return Format

The query returns the vertical position of Cursor A in scientific notation.

Example

```
:CURSor:XY:AY 0.1 /*Sets the vertical position of Cursor A to
100 mV.*/
:CURSor:XY:AY? /*The query returns 1.000000E-1.*/
```

3.8.39 :CURSor:XY:BY**Syntax**

```
:CURSor:XY:BY <y>
```

:CURSor:XY:BY?

Description

Sets or queries the vertical position of Cursor B in the XY cursor measurement mode.

Parameter

Name	Type	Range	Default
<y>	Real	Refer to <i>Remarks</i>	-

Remarks

Related to the current vertical scale and vertical offset.

Return Format

The query returns the vertical position of Cursor B in scientific notation.

Example

```
:CURSor:XY:BY 0.1 /*Sets the vertical position of Cursor B to
100 mV.*/
:CURSor:XY:BY? /*The query returns 1.000000E-1.*/
```

3.8.40 :CURSor:XY:AXValue?

Syntax

:CURSor:XY:AXValue?

Description

Queries the X value at Cursor A in the XY cursor measurement mode.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the X value at Cursor A in scientific notation.

Example

N/A

3.8.41 :CURSor:XY:AYValue?

Syntax

:CURSor:XY:AYValue?

Description

Queries the Y value at Cursor A in the XY cursor measurement mode.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the Y value at Cursor A in scientific notation.

Example

N/A

3.8.42 :CURSor:XY:BXValue?

Syntax

:CURSor:XY:BXValue?

Description

Queries the X value at Cursor B in the XY cursor measurement mode.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the X value at Cursor B in scientific notation.

Example

N/A

3.8.43 :CURSor:XY:BYValue?

Syntax

:CURSor:XY:BYValue?

Description

Queries the Y value at Cursor B in the XY cursor measurement mode.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the Y value at Cursor B in scientific notation.

Example

N/A

3.8.44 :CURSor:XY:XDELta?

Syntax`:CURSor:XY:XDELta?`**Description**

Queries the difference (ΔX) between the X value at Cursor A and the X value at Cursor B in the XY cursor measurement.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the current difference in scientific notation.

Example

N/A

3.8.45 :CURSor:XY:YDELta?

Syntax`:CURSor:XY:YDELta?`**Description**

Queries the difference (ΔY) between the Y value at Cursor A and the Y value at Cursor B in the XY cursor measurement. The unit is the same as that selected for the current channel.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the current difference in scientific notation.

Example

N/A

3.9 :DISPlay Commands

The **:DISPlay** commands can be used to set the displayed type of the waveform, persistence time, intensity, grid type, grid brightness, etc.

3.9.1 :DISPlay:CLEar

Syntax**:DISPlay:CLEar****Description**

Clears all the waveforms on the screen.

Parameter

N/A

Remarks

- If the oscilloscope is in the "RUN" state, new waveforms will continue being displayed after being cleared.
- You can also send the **:CLEar** command to clear all the waveforms on the screen.

Return Format

N/A

Example

N/A

3.9.2 :DISPlay:TYPE

Syntax

`:DISPlay:TYPE <type>`

`:DISPlay:TYPE?`

Description

Sets or queries the display type of the waveforms on the screen.

Parameter

Name	Type	Range	Default
<type>	Discrete	{VECTors}	VECTors

Remarks

VECTors: The sample points are connected by lines and displayed. Normally, this mode can provide the most vivid waveform to view the steep edge of the waveform (such as square waveforms).

Return Format

The query returns VECT.

Example

```
:DISPlay:TYPE VECTors    /*Sets the display type to VECTors.*/
:DISPlay:TYPE?           /*The query returns VECT.*/
```

3.9.3 :DISPlay:GRADIng:TIME

Syntax

`:DISPlay:GRADIng:TIME <time>`

`:DISPlay:GRADIng:TIME?`

Description

Sets or queries the persistence time. The default unit is s.

Parameter

Name	Type	Range	Default
<time>	Discrete	{MIN 0.1 0.2 0.5 1 2 5 10 INFinite}	MIN

Remarks

- **MIN:** sets the persistence time to its minimum value to view how the waveform changes at a high refresh rate.
- **specified value (e.g. 0.1, 0.2, 0.5, 1, 2, 5, 10):** sets the persistence time to any of the above specific value to observe glitches that change relatively slowly or glitches with low occurrence probability.
- **INFinite:** In this mode, the oscilloscope displays the waveform newly acquired without clearing the waveforms acquired formerly. It can be used to measure noise and jitter and to capture incidental events.

Return Format

The query returns MIN, 0.1, 0.2, 0.5, 1, 2, 5, 10, or INF.

Example

```
:DISPlay:GRADing:TIME 0.1 /*Sets the persistence time to 100 ms.*/
:DISPlay:GRADing:TIME? /*The query returns 0.1.*/
```

3.9.4 :DISPlay:WBRightness

Syntax

:DISPlay:WBRightness <*brightness*>

:DISPlay:WBRightness?

Description

Sets or queries the brightness of the waveform on the screen, expressed in percentage.

Parameter

Name	Type	Range	Default
<brightness>	Integer	1 to 100	50

Remarks

N/A

Return Format

The query returns an integer ranging from 1 to 100.

Example

```
:DISPlay:WBRightness 50      /*Sets the waveform brightness to 50%.*/
:DISPlay:WBRightness?        /*The query returns 50%.*/
```

3.9.5 :DISPlay:GRID

Syntax

```
:DISPlay:GRID <grid>
```

```
:DISPlay:GRID?
```

Description

Sets or queries the display type of the screen grid.

Parameter

Name	Type	Range	Default
<grid>	Discrete	{FULL HALF NONE}	FULL

Remarks

- **FULL:** turns the background grid and coordinates on.
- **HALF:** turns the background grid off and turns the coordinate on.
- **NONE:** turns the background grid and coordinate off.

Return Format

The query returns FULL, HALF, or NONE.

Example

```
:DISPlay:GRID NONE      /*Turns the background grid and coordinates
off.*/
:DISPlay:GRID?          /*The query returns NONE.*/
```

3.9.6 :DISPlay:GBRightness

Syntax

```
:DISPlay:GBRightness <brightness>
```

```
:DISPlay:GBRightness?
```

Description

Sets or queries the brightness of the screen grid, expressed in percentage.

Parameter

Name	Type	Range	Default
<brightness>	Integer	0 to 100	50

Remarks

N/A

Return Format

The query returns an integer ranging from 0 to 100.

Example

```
:DISPlay:GBrightness 60      /*Sets the screen grid brightness to  
60%.*/  
:DISPlay:GBrightness?        /*The query returns 60.*/
```

3.9.7 :DISPlay:CBrightness

Syntax

:DISPlay:CBrightness <*brightness*>

:DISPlay:CBrightness?

Description

Sets or queries the brightness of the cursor, expressed in percentage.

Parameter

Name	Type	Range	Default
<brightness>	Integer	0 to 100	80

Remarks

N/A

Return Format

The query returns an integer ranging from 0 to 100.

Example

```
:DISPlay:CBrightness 60      /*Sets the cursor brightness to 60%.*/  
:DISPlay:CBrightness?        /*The query returns 60.*/
```

3.9.8 :DISPlay:DATA?

Syntax

:DISPlay:DATA? [<*type*>]

Description

Queries the bitmap data stream of the currently displayed image.

Parameter

Name	Type	Range	Default
<type>	Discrete	{BMP PNG JPG}	BMP

Remarks

The read data format is TMC header + binary data stream of the screenshot + terminator. The TMC header is in #NXXXXXX format; wherein, # is the TMC header identifier; N following # represents the number of digits (in the decimal integer) that follow; the length of the binary data stream of the screenshot is expressed in ASCII strings, and the terminator represents the ending of communication. For example, the data read for one time is #9000387356. 9 indicates the number of digits (in the decimal integer) that follow, and "000387356" indicates the length of the binary data stream, that is, the number of bytes to be transmitted.

Return Format

The query returns the binary data stream of the screenshot in a specified format.

Example

N/A

3.9.9 :DISPlay:RULers

Syntax

:DISPlay:RULers <bool>

:DISPlay:RULers?

Description

Enables or disables the display of the scale ruler; or queries the on/off status of the scale ruler.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {{0 OFF}}	1 ON

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:DISPlay:RULers ON /*Enables the display of the scale ruler.*/
:DISPlay:RULers? /*The query returns 1.*/
```

3.9.10 :DISPlay:COLor**Syntax**

```
:DISPlay:COLor <bool>
```

```
:DISPlay:COLor?
```

Description

Enables or disables the color grade display; or queries the on/off status of the color grade display.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

When it is enabled, different colors are displayed on the screen to indicate the times of data acquisition or acquisition probability.

Return Format

The query returns 1 or 0.

Examples

```
:DISPlay:COLor ON /*Enables the color grade display.*/
:DISPlay:COLor? /*The query returns 1.*/
```

3.9.11 :DISPlay:WHOLD**Syntax**

```
:DISPlay:WHOLD <bool>
```

```
:DISPlay:WHOLD?
```

Description

Sets to enable or disable the waveform freezing function; queries whether to enable or disable the waveform freezing function.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:DISPlay:WHOLd ON      /*Enables the Waveform Freeze.*/  
:DISPlay:WHOLd?        /*The query returns 1.*/>
```

3.10 :DVM Commands

:DVM commands are used to set or query the DVM parameters.

The built-in DVM of this oscilloscope provides 4-digit voltage measurements on any analog channel. DVM measurements are asynchronous from the oscilloscope's acquisition system and are always acquiring.

3.10.1 :DVM:CURRent?

Syntax

```
:DVM:CURRent?
```

Description

Queries the current voltage value under test.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.10.2 :DVM:ENABLE

Syntax

```
:DVM:ENABLE <bool>
```

```
:DVM:ENABLE?
```

Description

Enables or disables the digital voltmeter; or queries the on/off status of the digital voltmeter.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:DVM:ENABLE ON      /*Enables the digital voltmeter.*/
:DVM:ENABLE?        /*The query returns 1.*/
```

3.10.3 :DVM:SOURce

Syntax

```
:DVM:SOURce <source>
```

```
:DVM:SOURce?
```

Description

Sets or queries the source of the digital voltmeter.

Parameter

Name	Type	Range	Default
<source>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

N/A

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4.

Example

```
:DVM:SOURce CHANnel1 /*Sets the source of DVM to CHANnel1.*/
:DVM:SOURce?         /*The query returns CHAN1.*/
```

3.10.4 :DVM:MODE

Syntax

:DVM:MODE <mode>

:DVM:MODE?

Description

Sets or queries the mode of digital voltmeter.

Parameter

Name	Type	Range	Default
<mode>	Discrete	{ACRMs DC DCRMs}	ACRMs

Remarks

- **ACRMs:** displays the root-mean-square value of the acquired data, with the DC component removed.
- **DC:** displays the root- average-square value of the acquired data.
- **DCRMs:** displays the root-mean-square value of the acquired data.

Return Format

The query returns ACRM, DC, or DCRM.

Example

```
:DVM:MODE DC      /*Sets the mode of the digital voltmeter to DC.*/
:DVM:MODE?        /*The query returns DC.*/
```

3.11 :HISTogram Commands

This series oscilloscope supports the histogram analysis function, which provides you a statistical view of the waveforms or measurement results, enabling you to judge the trend of waveforms, and quickly locate the potential problems of the signal.

Histogram Analysis Results

The statistical results of the histogram analysis include the following items.

- **Sum:** indicates the sum of all bins (buckets) in the histogram.
- **Peaks:** indicates the maximum number of hits in any single bin.
- **Max:** indicates the maximum value.
- **Min:** indicates the minimum value.

- Pk_Pk: indicates the Delta (Max-Min) between the max. value and the min. value.
- Mean: indicates the average value of the histogram.
- Median: indicates the median value of the histogram.
- Mode: indicates the mode value of the histogram.
- Bin width: indicates the width of each bin (bucket) in the histogram.
- Sigma: indicates the standard deviation of the histogram.
- XScale: indicates the horizontal scale of the histogram. It is 100 times the value of Bin width.
- $\mu \pm \sigma$: indicates the proportion of the number of frequencies or counts of the histogram hits that lie within one standard deviation of the mean to the total number of histogram hits. μ indicates the mean value in normal distribution. σ indicates the standard deviation in the normal distribution.
- $\mu \pm 2\sigma$: indicates the proportion of the number of frequencies or counts of the histogram hits that lie within two standard deviations of the mean to the total number of histogram hits. μ indicates the mean value in normal distribution. σ indicates the standard deviation in the normal distribution.
- $\mu \pm 3\sigma$: indicates the proportion of the number of frequencies or counts of the histogram hits that lie within three standard deviations of the mean to the total number of histogram hits. μ indicates the mean value in normal distribution. σ indicates the standard deviation in the normal distribution.

3.11.1 :HISTogram:ENABle

Syntax

:HISTogram:ENABle <bool>

:HISTogram:ENABle?

Description

Enables or disables the histogram function; or queries the on/off status of the histogram.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Examples

```
:HISTogram:ENABle ON /*Enables the histogram function.*/
:HISTogram:ENABle? /*The query returns 1.*/
```

3.11.2 :HISTogram:TYPE**Syntax**

```
:HISTogram:TYPE <type>
```

```
:HISTogram:TYPE?
```

Description

Sets or queries the type of the histogram.

Parameter

Name	Type	Range	Default
<type>	Discrete	{HORizontal VERTical}	HORizontal

Remarks

- **HORizontal:** horizontal histogram.
- **VERTical:** vertical histogram.

Return Format

The query returns HOR or VERT.

Example

```
:HISTogram:TYPE VERTical /*Sets the histogram type to Vertical.*/
:HISTogram:TYPE? /*The query returns VERT.*/
```

3.11.3 :HISTogram:SOURce**Syntax**

```
:HISTogram:SOURce <source>
```

```
:HISTogram:SOURce?
```

Description

Sets or queries the source of the histogram.

Parameter

Name	Type	Range	Default
<source>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks**Return Format**

The query returns CHAN1, CHAN2, CHAN3, CHAN4.

Example

```
:HISTogram:SOURce CHANnel2      /*Sets the source of the histogram
to CH2.*/
:HISTogram:SOURce?               /*The query returns CHAN2.*/
```

3.11.4 :HISTogram:HEIGht

Syntax

:HISTogram:HEIGht <height>

:HISTogram:HEIGht?

Description

Sets or queries the height of the histogram.

Parameter

Name	Type	Range	Default
<height>	Integer	1div to 4div	2div

Remarks

N/A

Return Format

The query returns an integer ranging from 1 to 4.

Example

```
:HISTogram:HEIGht 2      /*Sets the histogram height to 2.*/
:HISTogram:HEIGht?       /*The query returns 2.*/
```

3.11.5 :HISTogram:RANGe:LEFT

Syntax

:HISTogram:RANGe:LEFT <number>

:HISTogram:RANGe:LEFT?

Description

Sets or queries the left limit of the histogram.

Parameter

Name	Type	Range	Default
<number>	Real	(-5 x Horizontal Time Base + Horizontal Offset) to (5 x Horizontal Time Base + Horizontal Offset)	-

Remarks

- The left limit should be smaller than the right limit. You can use `:HISTogram:RANGe:RIGHT` to set or query the right limit of the histogram.
- You can use `:TIMEbase[:MAIN]:SCALE` to set or query the horizontal time base.
- You can use `:TIMEbase[:MAIN]:OFFSet` to set or query the horizontal offset.

Return Format

The query returns the left limit in scientific notation.

Example

```
:HISTogram:RANGe:LEFT -2 /*Sets the left limit of the histogram
to -2 s.*/
:HISTogram:RANGe:LEFT? /*The query returns -2.0000000000000000E
+00*/
```

3.11.6 :HISTogram:RANGe:RIGHT

Syntax

`:HISTogram:RANGe:RIGHT <number>`

`:HISTogram:RANGe:RIGHT?`

Description

Sets or queries the right limit of the histogram.

Parameter

Name	Type	Range	Default
<number>	Real	(-5 x Horizontal Time Base + Horizontal Offset) to (5 x Horizontal Time Base + Horizontal Offset)	-

Remarks

- The right limit should be greater than the left limit. You can use `:HISTogram:RANGe:LEFT` to set or query the left limit of the histogram.
- You can use `:TIMEbase[:MAIN]:SCALE` to set or query the horizontal time base.
- You can use `:TIMEbase[:MAIN]:OFFSet` to set or query the horizontal offset.

Return Format

The query returns the right limit in scientific notation.

Example

```
:HISTogram:RANGe:RIGHT 2 /*Sets the right limit of the histogram
to 2 s.*/
:HISTogram:RANGe:RIGHT? /*The query returns +2.000000000000000E
+00*/
```

3.11.7 :HISTogram:RANGe:TOP

Syntax

`:HISTogram:RANGe:TOP <number>`

`:HISTogram:RANGe:TOP?`

Description

Sets or queries the top limit of the histogram.

Parameter

Name	Type	Range	Default
<number>	Real	(-4 x VerticalScale - OFFSet) to (4 x VerticalScale - OFFSet)	-

Remarks

- The top limit should be greater than the bottom limit. You can use `:HISTogram:RANGe:BOTTom` to set or query the bottom limit of the histogram.
- You can use `:CHANnel<n>:SCALE` to set or query the vertical scale for the specified channel.
- You can use `:CHANnel<n>:OFFSet` to set or query the vertical offset for the specified channel.

Return Format

The query returns the top limit in scientific notation.

Example

```
:HISTogram:RANge:TOP -2      /*Sets the top limit of the histogram to
-2 V.*/
:HISTogram:RANge:TOP?        /*The query returns -2.000000000000E+00*/
```

3.11.8 :HISTogram:RANge:BOTTom

Syntax

```
:HISTogram:RANge:BOTTom <number>
```

```
:HISTogram:RANge:BOTTom?
```

Description

Sets or queries the bottom limit of the histogram.

Parameter

Name	Type	Range	Default
<number>	Real	(-4 x VerticalScale - OFFSet) to (4 x VerticalScale - OFFSet)	-

Remarks

- The bottom limit should be smaller than the top limit. You can use **:HISTogram:RANge:TOP** to set or query the top limit of the histogram.
- You can use **:CHANnel<n>:SCALE** to set or query the vertical scale for the specified channel.
- You can use **:CHANnel<n>:OFFSet** to set or query the vertical offset for the specified channel.

Return Format

The query returns the bottom limit in scientific notation.

Example

```
:HISTogram:RANge:BOTTom -2    /*Sets the bottom limit of the
histogram to -2 V.*/
:HISTogram:RANge:BOTTom?      /*The query returns -2.000000000000E
+00*/
```

3.11.9 :HISTogram:STATistics:RESult?

Syntax

`:HISTogram:STATistics:RESult?`

Description

Queries the statistics of the histogram results.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the statistics of the histogram results in strings.

```
[Sum:5.6khits,Peaks:14hits,Max:3.9us,Min:-4us,Pk_Pk:7.98us,Mean:-20ns,Median:-20ns,Mode:-4us,Binwidth:20ns,Sigma:2.303us,meanPlusSigma:0.577500,meanPlus2Sigma:1.000000,meanPlus3Sigma:1.000000]
```

For details about the returned results, refer to descriptions in [Histogram Analysis Results](#).

Example

N/A

3.11.10 :HISTogram:RESet

Syntax

`:HISTogram:RESet`

Description

Resets the statistics data of histogram.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.12 :EYE Commands (Option)

The **:EYE** commands are used to set and query the measurement parameters of the eye diagram.

This series oscilloscope provides the real-time eye plot and measurement with the clock recovery function. If you have purchased and activated the specified option, the oscilloscope also supports the real-time eye diagram function.

An eye diagram is a view of a signal. A real-time eye accomplishes this by acquiring data, performing clock recovery, then superimposing (folding) successive unit intervals within a single plot. It is a statistical information view with color grading. With the eye analysis, you can observe the signal waveforms and analyze the impact of the Inter-Symbol Interference (ISI) and noise on the system performance.

The clock recovery provides an ideal clock for comparison to actual signal edges. This series oscilloscope provides clock recovery methods such as Constant, PLL, and Explicit. For clock recovery commands of Eye Diagram and Jitter Analysis, refer to *Eye Diagram/Jitter Analysis Clock Recovery Commands* for more information.

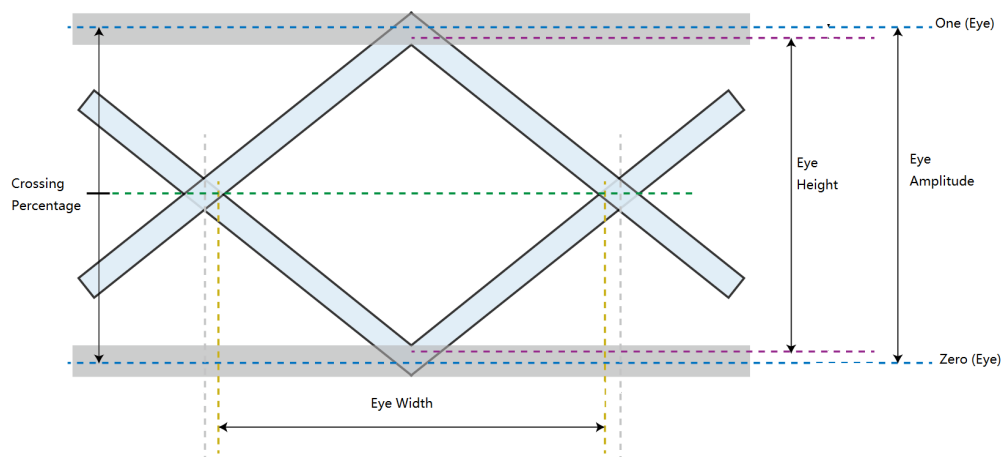 
Eye Measurement

Figure 3.7 Diagram of Eye Measurement Parameters

The measurement items of an eye diagram includes:

- **One**: indicates "1" level; voltage of logic 1.
- **Zero**: indicates "0" level; voltage of logic 0.

- **Width:** indicates the width of an eye diagram. The horizontal distance between two eye crossing points. It reflects the total jitter of the signal.
- **Height:** indicates the distance on the vertical axis of the blank area on the eye diagram.
- **Amp:** indicates the eye amplitude. The vertical distance between logic 1 and logic 0.
- **Cross:** is the location of the eye crossing levels as a percentage of the eye amplitude. The crossing percentage is generally 50%, indicating that location of the eye crossing level (logic 1) and (logic 0) as 50% of the eye amplitude.
- **Q Factor:** indicates Q factor, also quality factor. It is used to measure the signal-to-noise ratio of the eye diagram and provides an overall indication of eye quality.
- **BR:** bit rate, the number of binary data bits transmitted per unit time.
- **RISE:** rise time, the time required for the signal to rise from the "0" level to the "1" level.
- **FALL:** fall time, the time required for the signal to fall from the "1" level to the "0" level.
- **LEFT:** left cross time, the center time point of the intersection area between the rising edge and falling edge on the left side of the eye diagram center.
- **RIGHT:** right cross time, the center time point of the intersection area between the rising edge and falling edge on the right side of the eye diagram center.
- **DCDT:** duty cycle distortion (time), the duty cycle deviation expressed as a time value.
- **DCDP:** duty cycle distortion (percent), the duty cycle deviation expressed as a percentage.

3.12.1 :EYE:ENABLE

Syntax

:EYE:ENABLE <bool>

:EYE:ENABle?

Description

Enables or disables the eye analysis function; or queries the on/off status of the eye analysis function.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:EYE:ENABle ON      /*Enables the eye analysis function.*/  
:EYE:ENABle?       /*The query returns 1.*/>
```

3.12.2 :EYE:RST

Syntax

:EYE:RST

Description

Resets the eye diagram color grade.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.12.3 :EYE:SOURce

Syntax

:EYE:SOURce <source>

:EYE:SOURce?

Description

Sets or queries the source of the eye diagram.

Parameter

Name	Type	Range	Default
<source>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4 MATH1 MATH2 MATH3 MATH4}	CHANnel1

Remarks

N/A

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4, MATH1, MATH2, MATH3 or MATH4.

Example

```
:EYE:SOURce CHANnel3 /*Sets the source of eye diagram to
CHANnel3.*/
:EYE:SOURce? /*The query returns CHAN3.*/
```

3.12.4 :EYE:MEASure:ENABLE

Syntax

:EYE:MEASure:ENABLE <bool>

:EYE:MEASure:ENABLE?

Description

Enables or disables the eye measurement result; or queries the on/off status of the eye measurement result.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:EYE:MEASure:ENABle ON /*Enables the eye measurement result.*/
:EYE:MEASure:ENABle? /*The query returns 1.*/
```

3.12.5 :EYE:MEASure:ITEM?

Syntax

:EYE:MEASure:ITEM? <item>

Description

Queries an eye measurement value.

Parameter

Name	Type	Range	Default
<item>	Discrete	{ONE ZERO WIDTH HEIGth AMP CROSSs QFACTOR BR RISE FALL LEFT RIGHT DCDT DCDP}	-

Remarks

Before querying, you need to enable the eye measurement results using *:EYE:MEASure:ENABle*.

- **ONE:** level "1".
- **ZERO:** level "0".
- **WIDTH:** eye width.
- **HEIGth:** eye height.
- **AMP:** eye amplitude.
- **CROSSs:** eye crossing ratio.
- **QFACTOR:** Q factor.
- **BR:** bit rate.
- **RISE:** rise time.
- **FALL:** fall time.

- **LEFT:** left crossing time.
- **RIGHT:** right crossing time.
- **DCDT:** duty cycle distortion (time).
- **DCDP:** duty cycle distortion (percentage).

For more information, refer to [Eye Measurement](#).

Return Format

The query returns the eye measurement value in scientific notation.

Example

```
:EYE:MEASure:ITEM? ONE /*Queries the eye 1 level and returns  
9.824234e-01.*/
```

3.12.6 :EYE:OVERlap

Syntax

:EYE:OVERlap <bool>

:EYE:OVERlap?

Description

Sets or queries the on/off status of the eye diagram overlap display.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	1 ON

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:EYE:OVERlap ON /*Enables the overlap of the eye diagram.*/  
:EYE:OVERlap? /*The query returns 1.*/
```

3.12.7 :EYE:GRID

Syntax

:EYE:GRID <grid>

:EYE:GRID?

Description

Sets or queries the display type of the eye diagram screen grid.

Parameter

Name	Type	Range	Default
<grid>	Discrete	{FULL HALF NONE}	FULL

Remarks

- **FULL:** turns the background grid and coordinates on.
- **HALF:** turns the background grid off and turns the coordinate on.
- **NONE:** turns the background grid and coordinate off.

Return Format

The query returns FULL, HALF, or NONE.

Example

```
:EYE:GRID NONE      /*Turns off the eye diagram background grid and
coordinates.*/
:EYE:GRID?          /*The query returns NONE.*/
```

3.12.8 :EYE:HIGH

Syntax

```
:EYE:HIGH <val>
```

```
:EYE:HIGH?
```

Description

Sets or queries the high threshold for eye measurements, expressed as a percentage.

Parameter

Name	Type	Range	Default
<val>	Integer	2 to 100	90

Remarks

The high threshold must be greater than the low threshold.

If the high threshold is decreased below the configured low threshold, the oscilloscope automatically adjusts the high threshold to make it higher than the low threshold.

Return Format

The query returns an integer ranging from 2 to 100.

Example

```
:EYE:HIGH 80 /*Sets the high threshold for eye measurements to 80%.*/
:EYE:HIGH? /*The query returns 80.*/
```

3.12.9 :EYE:LOW

Syntax

:EYE:LOW <val>

:EYE:LOW?

Description

Sets or queries the low measurement threshold, expressed as a percentage.

Parameter

Name	Type	Range	Default
<val>	Integer	1 to 99	10

Remarks

The high threshold must be greater than the low threshold.

If the high threshold is decreased below the configured low threshold, the oscilloscope automatically adjusts the high threshold to make it higher than the low threshold.

Return Format

The query returns an integer ranging from 1 to 99.

Example

```
:EYE:LOW 80 /*Sets the low measurement threshold to 80%.*/
:EYE:LOW? /*The query returns 80.*/
```

3.12.10 :EYE:HISTogram

3.12.10.1 :EYE:HISTogram:ENABle

Syntax

:EYE:HISTogram:ENABle <bool>

:EYE:HISTogram:ENABle?

Description

Enables or disables the eye histogram function, or queries the on/off status of the eye histogram function.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:EYE:HISTogram:ENABle ON /*Enables the eye histogram function.*/
:EYE:HISTogram:ENABle? /*The query returns 1.*/
```

3.12.10.2 :EYE:HISTogram:PIXel:LEFT**Syntax**

```
:EYE:HISTogram:PIXel:LEFT <number>
```

```
:EYE:HISTogram:PIXel:LEFT?
```

Description

Sets or queries the left boundary of the eye histogram.

Parameter

Name	Type	Range	Default
<number>	Integer	0 to 1000	300

Remarks

N/A

Return Format

The query returns an integer ranging from 0 to 1000.

Example

```
:EYE:HISTogram:PIXel:LEFT 80 /*Sets the left boundary of the eye
histogram to 80.*/
:EYE:HISTogram:PIXel:LEFT? /*The query returns 80.*/
```

3.12.10.3 :EYE:HISTogram:PIXel:RIGHT

Syntax

`:EYE:HISTogram:PIXel:RIGHT <number>`

`:EYE:HISTogram:PIXel:RIGHT?`

Description

Sets or queries the right boundary of the eye histogram.

Parameter

Name	Type	Range	Default
<number>	Integer	0 to 1000	700

Remarks

N/A

Return Format

The query returns an integer ranging from 0 to 1000.

Example

```
:EYE:HISTogram:PIXel:RIGHT 80 /*Sets the right boundary of the eye  
histogram to 80.*/  
:EYE:HISTogram:PIXel:RIGHT? /*The query returns 80.*/
```

3.12.10.4 :EYE:HISTogram:PIXel:HIGH

Syntax

`:EYE:HISTogram:PIXel:HIGH <number>`

`:EYE:HISTogram:PIXel:HIGH?`

Description

Sets or queries the upper boundary of the eye histogram.

Parameter

Name	Type	Range	Default
<number>	Integer	0 to 1000	700

Remarks

N/A

Return Format

The query returns an integer ranging from 0 to 1000.

Example

```
:EYE:HISTogram:PIXel:HIGH 80 /*Sets the upper boundary of the eye
histogram to 80.*/
:EYE:HISTogram:PIXel:HIGH? /*The query returns 80.*/
```

3.12.10.5 :EYE:HISTogram:PIXel:LOW**Syntax**

```
:EYE:HISTogram:PIXel:LOW <number>
```

```
:EYE:HISTogram:PIXel:LOW?
```

Description

Sets or queries the lower boundary of the eye histogram.

Parameter

Name	Type	Range	Default
<number>	Integer	0 to 1000	300

Remarks

N/A

Return Format

The query returns an integer ranging from 0 to 1000.

Example

```
:EYE:HISTogram:PIXel:LOW 80 /*Sets the lower boundary of the eye
histogram to 80.*/
:EYE:HISTogram:PIXel:LOW? /*The query returns 80.*/
```

3.12.10.6 :EYE:HISTogram:TYPE**Syntax**

```
:EYE:HISTogram:TYPE <type>
```

```
:EYE:HISTogram:TYPE?
```

Description

Sets or queries the eye histogram type.

Parameter

Name	Type	Range	Default
<type>	Discrete	{HOR VERT}	HOR

Remarks

N/A

Return Format

The query returns HOR or VERT.

Example

```
:EYE:HISTogram:TYPE VERT /*Sets the eye histogram type to VERT.*/
:EYE:HISTogram:TYPE? /*The query returns VERT.*/
```

3.12.11 :EYE:CURSOr**3.12.11.1 :EYE:CURSOr:ENABLE****Syntax**

```
:EYE:CURSOr:ENABLE <bool>
```

```
:EYE:CURSOr:ENABLE?
```

Description

Sets or queries the on/off status of the eye cursor measurement.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:EYE:CURSOr:ENABLE ON /*Enables the eye cursor measurement.*/
:EYE:CURSOr:ENABLE? /*The query returns 1.*/
```

3.12.11.2 :EYE:CURSOr:CAX**Syntax**

```
:EYE:CURSOr:CAX <ax>
```

```
:EYE:CURSOr:CAX?
```

Description

Sets or queries the horizontal position of Cursor A in the eye cursor measurement.

Parameter

Name	Type	Range	Default
<ax>	Real	-100 s to 100 s	-

Remarks

N/A

Return Format

The query returns the horizontal position of Cursor A in scientific notation. The unit is s.

Example

```
:EYE:CUSor:CAX 0.00000001 /*Sets the horizontal position of
Cursor A to 10 ns.*/
:EYE:CUSor:CAX? /*The query returns +1.000000000000E-08.*/
```

3.12.11.3 :EYE:CUSor:CBX**Syntax**

```
:EYE:CUSor:CBX <bx>
```

```
:EYE:CUSor:CBX?
```

Description

Sets or queries the horizontal position of Cursor B in the eye cursor measurement.

Parameter

Name	Type	Range	Default
<bx>	Real	-100 s to 100 s	-

Remarks

N/A

Return Format

The query returns the horizontal position of Cursor B in scientific notation. The unit is s.

Example

```
:EYE:CUSor:CBX 0.00000001 /*Sets the horizontal position of
Cursor B to 10 ns.*/
:EYE:CUSor:CBX? /*The query returns +1.000000000000E-08.*/
```

3.12.11.4 :EYE:CURSOr:CAY

Syntax

```
:EYE:CURSOr:CAY <ay>
```

```
:EYE:CURSOr:CAY?
```

Description

Sets or queries the vertical position of Cursor A in the eye cursor measurement.

Parameter

Name	Type	Range	Default
<ay>	Real	-1000 V to 1000 V	-

Remarks

N/A

Return Format

The query returns the vertical position of Cursor A in scientific notation. The unit is the same as the vertical channel unit.

Example

```
:EYE:CURSOr:CAY 0.1 /*Sets the vertical position of Cursor A to
0.1 V.*/
:EYE:CURSOr:CAY? /*The query returns +1.000000000000E-01*/
```

3.12.11.5 :EYE:CURSOr:CBY

Syntax

```
:EYE:CURSOr:CBY <by>
```

```
:EYE:CURSOr:CBY?
```

Description

Sets or queries the vertical position of Cursor B in the eye cursor measurement.

Parameter

Name	Type	Range	Default
<by>	Real	-1000 V to 1000 V	-

Remarks

N/A

Return Format

The query returns the vertical position of Cursor B in scientific notation. The unit is the same as the vertical channel unit.

Example

```
:EYE:CURSOr:CBY 200      /*Sets the vertical position of Cursor B to
200.*/*
:EYE:CURSOr:CBY?         /*The query returns +2.000000000000E+02*/
```

3.12.11.6 :EYE:CURSOr:LINK**Syntax**

```
:EYE:CURSOr:LINK <bool>
```

```
:EYE:CURSOr:LINK?
```

Description

Sets or queries the enable state of eye cursor linking.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {0 OFF}}	0 OFF

Remarks

After the link function is enabled, the distance between cursors A and B (X or Y cursor) remains unchanged.

Return Format

The query returns 1 or 0.

Example

```
:EYE:CURSOr:LINK ON      /*Enables the eye cursor LINK function.*/*
:EYE:CURSOr:LINK?        /*The query returns 1.*/*
```

3.12.12 :EYE:MTEST

An eye template is created based on the specifications for the eye diagram. By observing whether the eye diagram contacts the eye template, you can determine whether the eye diagram measurement results meet the requirements.

- If the eye diagram does not contact the eye template, it indicates that the eye diagram parameters comply with the specifications.
- If the eye diagram violates the eye template (i.e., intersects with the mask), improvements can be made based on the contact position.

The eye diagram mask function eliminates the need to measure each eye diagram parameter one by one, making the process more intuitive and convenient.

3.12.12.1 :EYE:MTEST:ENABLE

Syntax

```
:EYE:MTEST:ENABLE <bool>
```

```
:EYE:MTEST:ENABLE?
```

Description

Sets or queries the on/off status of the eye template test.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:EYE:MTEST:ENABLE ON      /*Enables the eye template function.*/  
:EYE:MTEST:ENABLE?        /*The query returns 1.*/
```

3.12.12.2 :EYE:MTEST:START

Syntax

```
:EYE:MTEST:START <bool>
```

```
:EYE:MTEST:START?
```

Description

Starts or stops eye diagram template testing, or queries whether the eye diagram template test is running.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:EYE:MTESt:StARt ON      /*Enables to start analyzing the eye
template.*/
:EYE:MTESt:StARt?       /*The query returns 1.*/
```

3.12.12.3 :EYE:MTESt:STOP**Syntax**

```
:EYE:MTESt:StOP
```

Description

Stops eye diagram template testing.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.12.12.4 :EYE:MTESt:SAVE**Syntax**

```
:EYE:MTESt:StAVE <path>
```

Description

Saves the edited eye template file with the specified filename to the specified path.

Parameter

Name	Type	Range	Default
<path>	ASCII String	Refer to <i>Remarks</i>	-

Remarks

<path> includes the file storage location and the filename with a suffix.

- The path of the local disk is C:/ and the path of the external storage device can be D:/.
- The filename to be saved is suffixed with "*.mskx".
- If the specified storage location already contains a file with the same filename, by default, the original file will not be overwritten, and it will be saved as a file with the suffix in sequential order starting with 1 and increasing by 1.

Return Format

N/A

Example

```
:EYE:MTEST:SAVE C:/123.mskx /*Saves the eye template file named  
"123.mskx" to the internal memory Disk C.*/
```

3.12.12.5 :EYE:MTEST:LOAD**Syntax**

```
:EYE:MTEST:LOAD <path>
```

Description

Loads the eye template.

Parameter

Name	Type	Range	Default
<path>	ASCII String	Refer to <i>Remarks</i>	-

Remarks

<path> includes the file storage location and the filename with a suffix.

- The path of the local disk is C:/ and the path of the external storage device can be D:/.
- The filename to be loaded is suffixed with "*.mskx".

Return Format

N/A

Example

```
:EYE:MTEST:LOAD C:/123.mskx /*Loads the eye template file named  
"123.mskx" from the internal memory Disk C.*/
```

3.12.12.6 :EYE:MTEST:OFailure:STOP

Syntax

```
:EYE:MTEST:OFailure:STOP <bool>
```

```
:EYE:MTEST:OFailure:STOP?
```

Description

Sets or queries the on/off status of Stop on Fail when the eye template test fails.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:EYE:MTEST:OFailure:STOP ON /*Enables the stop on fail of the  
eye template test.*/  
:EYE:MTEST:OFailure:STOP? /*The query returns 1.*/
```

3.12.12.7 :EYE:MTEST:OFailure:SCreen

Syntax

```
:EYE:MTEST:OFailure:SCreen <bool>
```

```
:EYE:MTEST:OFailure:SCreen?
```

Description

Sets or queries the on/off status for screen capturing when the eye template test fails.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

When Screenshot is enabled, the Stop on Failure is enabled by default.

Return Format

The query returns 1 or 0.

Example

```
:EYE:MTESt:Ofailure:SCreen ON /*Enables the screenshot function
on fail of the eye template test.*/
:EYE:MTESt:Ofailure:SCreen? /*The query returns 1.*/
```

3.12.12.8 :EYE:MTESt:Ofailure:BEEPer**Syntax**

```
:EYE:MTESt:Ofailure:BEEPer <bool>
```

```
:EYE:MTESt:Ofailure:BEEPer?
```

Description

Sets or queries the on/off status for beeper warning when the eye template test fails.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:EYE:MTESt:Ofailure:BEEPer ON /*Enables the beeper warning on
fail of the eye template test.*/
:EYE:MTESt:Ofailure:BEEPer? /*The query returns 1.*/
```

3.12.12.9 :EYE:MTESt:Ofailure:FRAMESave**Syntax**

```
:EYE:MTESt:Ofailure:FRAMESave <bool>
```

```
:EYE:MTESt:Ofailure:FRAMESave?
```

Description

Sets or queries the on/off status for saving waveforms when the eye template test fails.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:EYE:MTESt:Ofailure:FRAMESave ON /*Enables waveform saving when
eye template test fails.*/
:EYE:MTESt:Ofailure:FRAMESave? /*The query returns 1.*/
```

3.12.12.10 :EYE:MTESt:STANdand:LOAD**Syntax**

```
:EYE:MTESt:STANdand:LOAD <type>
```

```
:EYE:MTESt:STANdand:LOAD?
```

Description

Sets or queries the standard template to load.

Parameter

Name	Type	Range	Default
<type>	Discrete	{USBNear USBfar CANHL4M CANHL5M CANHL6M CANHL8M CANHL10M CANLH4M CANLH5M CANLH6M CANLH8M CANLH10M FC1063 FC1063PI ETH1G ETH2G}	USBNear

Remarks

N/A

Return Format

The query returns one of USBNear, USBfar, CANHL4M, CANHL5M, CANHL6M, CANHL8M, CANHL10M, CANLH4M, CANLH5M, CANLH6M, CANLH8M, CANLH10M, FC1063, FC1063PI, ETH1G, or ETH2G.

Example

```
:EYE:MTESt:STANdand:LOAD CANHL4M /*Sets the standard template to
CANHL4M.*/
:EYE:MTESt:STANdand:LOAD? /*The query returns CANHL4M.*/
```

3.13 :CLOCKrecovery Commands (Option)

Clock recovery is used to extract or reconstruct the sampling clock corresponding to the data rate from the signal under test, providing a unified time reference for eye diagram analysis and jitter analysis.

**NOTE**

The commands in this chapter are valid only when the eye diagram or jitter analysis option is activated on the instrument.

3.13.1 :CLOCKrecovery:SOURce

Syntax

```
:CLOCKrecovery:SOURce <source>
```

```
:CLOCKrecovery:SOURce?
```

Description

Sets or queries the source of clock recovery.

Parameter

Name	Type	Range	Default
<source>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4 MATH1 MATH2 MATH3 MATH4}	CHANnel1

Remarks

N/A

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4, MATH1, MATH2, MATH3, or MATH4.

Example

```
:CLOCKrecovery:SOURce CHANnel3 /*Sets the source of clock
recovery to CH3.*/
:CLOCKrecovery:SOURce? /*The query returns CHAN3.*/
```

3.13.2 :CLOCKrecovery<n>:PRESet

Syntax

```
:CLOCKrecovery<n>:PRESet <type>
```

```
:CLOCKrecovery<n>:PRESet?
```

Description

Sets or queries the clock recovery preset.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<type>	Discrete	{DEFA 80BJ 80BS CE30 CE31 HBR HBR2 HBR3 RBR UH10 UH13 UH20 HD10 HD20 MHL G1NS G1S G2NS G2S G3 G4C P52C P52S P55C P55S P58C P516 P65C P65S P68C P616 GEN1 GEN2 GEN3 U2LS U2FS U20 U3G1 U3G2 U41G U413 U42 U426 T31 T313 T32 T326}	-

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns one of DEFA, 80BJ, 80BS, CE30, CE31, HBR, HBR2, HBR3, RBR, UH10, UH13, UH20, HD10, HD20, MHL, G1NS, G1S, G2NS, G2S, G3, G4C, P52C, P52S, P55C, P55S, P58C, P516, P65C, P65S, P68C, P616, GEN1, GEN2, GEN3, U2LS, U2FS, U20, U3G1, U3G2, U41G, U413, U42, U426, T31, T313, T32, or T326.

Example

```
:CLOCKrecovery1:PRESet 80BS /*Sets the clock recovery preset of
source channel 1 to 80BS.*/
:CLOCKrecovery1:PRESet? /*The query returns 80BS.*/
```

3.13.3 :CLOCKrecovery<n>:METHod

Syntax

```
:CLOCKrecovery<n>:METHod <method>
```

```
:CLOCKrecovery<n>:METHod?
```

Description

Sets or queries the clock recovery method.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<method>	Discrete	{CONST FPLL SPLL TPLL EXCLock EXFPll EXSPll EXTPlI}	CONST

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

- **CONST:** constant clock
- **FPLL:** first-order phase-locked loop
- **SPLL:** second-order phase-locked loop
- **TPLL:** third-order phase-locked loop
- **EXCLock:** explicit clock recovery
- **EXFPll:** explicit first-order phase-locked loop
- **EXSPll:** explicit second-order phase-locked loop
- **EXTPlI:** explicit third-order phase-locked loop

Return Format

The query returns CONS, FPLL, SPLL, TPLL, EXCL, EXFP, EXSP, or EXTP.

Example

```
:CLOCKrecovery1:METHod FPLL /*Sets the clock recovery method of
source channel 1 to FPLL.*/
:CLOCKrecovery1:METHod? /*The query returns FPLL.*/
```

3.13.4 :CLOCKrecovery<n>:DARate:SETup

Syntax

```
:CLOCKrecovery<n>:DARate:SETup <val>
```

```
:CLOCKrecovery<n>:DARate:SETup?
```

Description

Sets or queries the clock recovery data rate. The default unit is b/s.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<val>	Real	100 kb/s to 4 Gb/s	2.5 Gb/s

Remarks

- Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.
- The clock rate can be set only when automatic/semi-automatic clock recovery and first/second/third-order PLL clock recovery are selected.

Return Format

The query returns the clock recovery data rate in scientific notation.

Example

```
:CLOCKrecovery1:DARate:SETup 200000 /*Sets the clock recovery
data rate of source channel 1 to 200000 b/s.*/
:CLOCKrecovery1:DARate:SETup? /*The query returns
+2.00000000000000E+05.*/
```

3.13.5 :CLOCKrecovery<n>:DARate:METHod

Syntax

```
:CLOCKrecovery<n>:DARate:METHod <method>
```

```
:CLOCKrecovery<n>:DARate:METHod?
```

Description

Sets or queries the data rate method for constant clock recovery.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<method>	Discrete	{AUT SEM MAN}	AUT

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

- AUT:** automatic

- **SEM:** semi-automatic
- **MAN:** manual

Return Format

The query returns AUT, SEM, or MAN.

Example

```
:CLOCKrecovery1:DARate:MEthod SEM /*Sets the clock recovery rate
method of source channel 1 to SEM.*/
:CLOCKrecovery1:DARate:MEthod? /*The query returns SEM.*/
```

3.13.6 :CLOCKrecovery<n>:DARate:MEASURE

Syntax

:CLOCKrecovery<n>:DARate:MEASURE

Description

Measures the data rate.

Remarks

N/A

Return Format

N/A

Example

N/A

3.13.7 :CLOCKrecovery<n>:RELATION

Syntax

:CLOCKrecovery<n>:RELATION <type>

:CLOCKrecovery<n>:RELATION?

Description

Sets or queries the clock recovery transfer function.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<type>	Discrete	{JTF OJTF}	OJTF

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

- **JTF:** jitter transfer function
- **OJTF:** open-loop jitter transfer function

Return Format

The query returns JTF or OJTF.

Example

```
:CLOCKrecovery1:RELAtion JTF /*Sets the clock recovery transfer
function of source channel 1 to JTF.*/
:CLOCKrecovery1:RELAtion? /*The query returns JTF.*/
```

3.13.8 :CLOCKrecovery<n>:EDGE

Syntax

:CLOCKrecovery<n>:EDGE <type>

:CLOCKrecovery<n>:EDGE?

Description

Sets or queries the edge direction for clock recovery.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<type>	Discrete	{RISE DOWN BOTH}	BOTH

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns RISE, DOWN, or BOTH.

Example

```
:CLOCKrecovery1:EDGE RISE /*Sets the edge direction for clock
recovery of source channel 1 to RISE.*/
:CLOCKrecovery1:EDGE? /*The query returns RISE.*/
```


3.13.9 :CLOCKrecovery<n>:JTF:BANDwidth

Syntax

```
:CLOCKrecovery<n>:JTF:BANDwidth <val>
```

```
:CLOCKrecovery<n>:JTF:BANDwidth?
```

Description

Sets or queries the JTF loop bandwidth. The default unit is Hz.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<val>	Real	1 Hz to 750 MHz	1.5 MHz

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns the JTF loop bandwidth in scientific notation.

Example

```
:CLOCKrecovery1:JTF:BANDwidth 50 /*Sets the JTF loop bandwidth of
source channel 1 to 50 Hz.*/
:CLOCKrecovery1:JTF:BANDwidth? /*The query returns
+5.000000000000E+01.*/
```

3.13.10 :CLOCKrecovery<n>:JTF:DIVisor

Syntax

```
:CLOCKrecovery<n>:JTF:DIVisor <val>
```

```
:CLOCKrecovery<n>:JTF:DIVisor?
```

Description

Sets or queries the divisor of the JTF loop bandwidth.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<val>	Real	0 to 5000000000	1666.67

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns the divisor of the JTF loop bandwidth in scientific notation.

Example

```
:CLOCKrecovery1:JTF:DIVisor 50 /*Sets the divisor of the JTF loop
bandwidth for source channel 1 to 50.*/
:CLOCKrecovery1:JTF:DIVisor? /*The query returns
+5.000000000000E+01.*/
```

3.13.11 :CLOCKrecovery<n>:OJTF:BANDwidth

Syntax

```
:CLOCKrecovery<n>:OJTF:BANDwidth <val>
```

```
:CLOCKrecovery<n>:OJTF:BANDwidth?
```

Description

Sets or queries the OJTF loop bandwidth. The default unit is Hz.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<val>	Real	1 Hz to 750 MHz	1.5 MHz

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns the OJTF loop bandwidth in scientific notation.

Example

```
:CLOCKrecovery1:OJTF:BANDwidth 50 /* Sets the OJTF loop bandwidth
of source channel 1 to 50 Hz */
:CLOCKrecovery1:OJTF:BANDwidth? /* The query returns
+5.000000000000E+01 */
```

3.13.12 :CLOCKrecovery<n>:OJTF:DIVisor

Syntax

```
:CLOCKrecovery<n>:OJTF:DIVisor <val>
```

:CLOCKrecovery<n>:OJTF:DIVisor?

Description

Sets or queries the divisor of the OJTF loop bandwidth.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<val>	Real	0 to 50000000000	1666.67

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns the divisor of the OJTF loop bandwidth in scientific notation.

Example

```
:CLOCKrecovery1:OJTF:DIVisor 50 /*Sets the divisor of the OJTF
loop bandwidth for source channel 1 to 50.*/
:CLOCKrecovery1:OJTF:DIVisor? /*The query returns
+5.000000000000E+01.*/
```

3.13.13 :CLOCKrecovery<n>:OJTF:DAMPing

Syntax

:CLOCKrecovery<n>:OJTF:DAMPing <val>

:CLOCKrecovery<n>:OJTF:DAMPing?

Description

Sets or queries the OJTF damping factor.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<val>	Real	0 to 50	0.707

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns the OJTF damping factor in scientific notation.

Example

```
:CLOCKrecovery1:OJTF:DAMPing 30 /*Sets the OJTF damping factor of
source channel 1 to 30.*/
:CLOCKrecovery1:OJTF:DAMPing? /*The query returns
+3.000000000000E+01.*/
```

3.13.14 :CLOCKrecovery<n>:TRANSition**Syntax**

:CLOCKrecovery<n>:TRANSition <bool>

:CLOCKrecovery<n>:TRANSition?

Description

Sets or queries the on/off status of transition density dependency.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<bool>	Bool	{{1 ON} {0 OFF}}	0 OFF

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns 0 or 1.

Example

```
:CLOCKrecovery1:TRANSition ON /*Enables transition density
dependency for source channel 1.*/
:CLOCKrecovery1:TRANSition? /*The query returns 1.*/
```

3.13.15 :CLOCKrecovery<n>:SETTling**Syntax**

:CLOCKrecovery<n>:SETTling <val>

:CLOCKrecovery<n>:SETTling?

Description

Sets or queries the settling time of the phase-locked loop. The default unit is T.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<val>	Real	0.01 T to 10 T	5 T

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns the settling time of the phase-locked loop in scientific notation.

Example

```
:CLOCKrecovery1:SETTling 1 /*Sets the settling time of the phase-
locked loop for source channel 1 to 1 T.*/
:CLOCKrecovery1:SETTling? /*The query returns
+1.000000000000000E+00.*/
```

3.13.16 :CLOCKrecovery<n>:IDLE

Syntax

:CLOCKrecovery<n>:IDLE <val>

:CLOCKrecovery<n>:IDLE?

Description

Sets or queries the idle clock of the phase-locked loop.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<val>	Integer	6 to 1000	80

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns an integer ranging from 6 to 1000.

Example

```
:CLOCKrecovery1:IDLE 10 /*Sets the idle clock of the phase-locked
loop for source channel 1 to 10.*/
:CLOCKrecovery1:IDLE? /*The query returns 10.*/
```

3.13.17 :CLOCKrecovery<n>:JTF:PEAK**Syntax**

```
:CLOCKrecovery<n>:JTF:PEAK <val>
```

```
:CLOCKrecovery<n>:JTF:PEAK?
```

Description

Sets or queries the JTF peak factor.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<val>	Real	0 to 3.33	2.02

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns the peak factor in scientific notation.

Example

```
:CLOCKrecovery1:JTF:PEAK 2 /*Sets the JTF peak factor of source
channel 1 to 2.*/
:CLOCKrecovery1:JTF:PEAK? /*The query returns +2.0000000000000E
+00.*/
```

3.13.18 :CLOCKrecovery<n>:DAMPing**Syntax**

```
:CLOCKrecovery<n>:DAMPing <val>
```

```
:CLOCKrecovery<n>:DAMPing?
```

Description

Sets or queries the damping factor of a third-order phase-locked loop.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<val>	Real	0 to 50	0.707

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns the damping factor in scientific notation.

Example

```
:CLOCKrecovery1:DAMPing 20    /*Sets the damping factor of source
channel 1 to 20.*/
:CLOCKrecovery1:DAMPing?      /*The query returns +2.000000000000E
+01.*/
```

3.13.19 :CLOCKrecovery<n>:NAFRe

Syntax

:CLOCKrecovery<n>:NAFRe <val>

:CLOCKrecovery<n>:NAFRe?

Description

Sets or queries the natural frequency of a third-order phase-locked loop. The default unit is rad/s.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<val>	Real	150 krad/s to 13 Grad/s	9423 krad/s

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns the natural frequency of the third-order phase-locked loop in scientific notation.

Example

```
:CLOCKrecovery1:NAFRe 200000 /*Sets the natural frequency of the
third-order phase-locked loop for source channel 1 to 200000
rad/s.*/
:CLOCKrecovery1:NAFRe? /*The query returns +2.0000000000000E
+05.*/
```

3.13.20 :CLOCKrecovery<n>:POFRe**Syntax**

```
:CLOCKrecovery<n>:POFRe <val>
```

```
:CLOCKrecovery<n>:POFRe?
```

Description

Sets or queries the pole frequency of a third-order phase-locked loop. The default unit is rad/s.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<val>	Real	0 to 13 Grad/s	4.71 Mrad/s

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns the pole frequency of the third-order phase-locked loop in scientific notation.

Example

```
:CLOCKrecovery1:POFRe 200000 /*Sets the pole frequency of the
third-order phase-locked loop for source channel 1 to 200000
rad/s.*/
:CLOCKrecovery1:POFRe? /*The query returns +2.0000000000000E
+05.*/
```

3.13.21 :CLOCKrecovery<n>:MULTi**Syntax**

```
:CLOCKrecovery<n>:MULTi <val>
```

```
:CLOCKrecovery<n>:MULTi?
```


Description

Sets or queries the clock multiplier.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<val>	Integer	1 to 1200	1

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns an integer ranging from 1 to 1200.

Example

```
:CLOCKrecovery1:MULTi 60 /*Sets the clock multiplier of source
channel 1 to 60.*/
:CLOCKrecovery1:MULTi? /*The query returns 60.*/
```

3.13.22 :CLOCKrecovery<n>:EXTChan

Syntax

:CLOCKrecovery<n>:EXTChan <type>

:CLOCKrecovery<n>:EXTChan?

Description

Sets or queries the external clock source.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<source>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4 MATH1 MATH2 MATH3 MATH4}	CHANnel2

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4, MATH1, MATH2, MATH3, or MATH4.

Example

```
:CLOCKrecovery1:EXTChan CHANnel2 /*Sets the external clock source
of source channel 1 to CHANnel2.*/
:CLOCKrecovery1:EXTChan? /*The query returns CHAN2.*/
```

3.13.23 :CLOCKrecovery<n>:ALIGN**Syntax**

:CLOCKrecovery<n>:ALIGN <bool>

:CLOCKrecovery<n>:ALIGN?

Description

Sets or queries the clock/data alignment mode.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<bool>	Bool	{{1 ON} {0 OFF}}	1 ON

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

- **1|ON:** center-aligned
- **0|OFF:** edge-aligned

Return Format

The query returns 0 or 1.

Example

```
:CLOCKrecovery1:ALIGN ON /*Sets the clock/data alignment mode of
source channel 1 to center-aligned.*/
:CLOCKrecovery1:ALIGN? /*The query returns 1.*/
```

3.13.24 :CLOCKrecovery<n>:FREQuency**Syntax**

:CLOCKrecovery<n>:FREQuency <val>

:CLOCKrecovery<n>:FREQuency?

Description

Sets or queries the clock frequency. The default unit is Hz.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<val>	Real	25 kHz to 4 GHz	1.25 GHz

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns the clock frequency in scientific notation.

Example

```
:CLOCKrecovery1:FREQuency 30000 /*Sets the clock frequency of
source channel 1 to 30000 Hz.*/
:CLOCKrecovery1:FREQuency? /*The query returns
+3.000000000000E+04.*/
```

3.14 :THReshold Commands (Option)

Threshold settings are used to define the decision levels for determining the logic state and edge position of a signal, and serve as an essential basic configuration for eye diagram analysis, jitter analysis, and related parameter measurements.



NOTE

The commands in this chapter are only valid when the eye diagram analysis or jitter analysis option is activated on the instrument.

3.14.1 :THReshold:GENeral:SOURce

Syntax

:THReshold:GENeral:SOURce <source>

:THReshold:GENeral:SOURce?

Description

Sets or queries the general threshold source.

Parameter

Name	Type	Range	Default
<source>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4 MATH1 MATH2 MATH3 MATH4}	CHANnel1

Remarks

N/A

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4, MATH1, MATH2, MATH3, or MATH4.

Example

```
:THReshold:GENeral:SOURce CHANnel3 /*Sets the general threshold
source to CH3.*/
:THReshold:GENeral:SOURce? /*The query returns CHAN3.*/
```

3.14.2 :THReshold<n>:GENeral:METHod

Syntax

```
:THReshold<n>:GENeral:METHod <type>
:THReshold<n>:GENeral:METHod?
```

Description

Sets or queries the general threshold type.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<type>	Discrete	{PERCent ABSolute HYSTeresis TB159 TB258}	TB159

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

- **PERCent:** % of top, base
- **ABSolute:** thresholds (low/mid/high)
- **HYSTeresis:** threshold +/- hysteresis

- **TB159:** 10%, 50%, and 90% of top, base
- **TB258:** 20%, 50%, and 80% of top, base

Return Format

The query returns PERC, ABS, HYST, TB159, or TB258.

Example

```
:THReshold1:GENeral:METHod ABSolute /*Sets the general threshold
type of source channel 1 to ABSolute.*/
:THReshold1:GENeral:METHod? /*The query returns ABS.*/
```

3.14.3 :THReshold<n>:GENeral:LEVel

Syntax

```
:THReshold<n>:GENeral:LEVel <type>
```

```
:THReshold<n>:GENeral:LEVel?
```

Description

Sets or queries the general threshold level type.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<type>	Discrete	{DEFault HISTogram MINMax CUSTom}	DEFault

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns DEF, HIST, MINM, or CUST.

Example

```
:THReshold1:GENeral:LEVel HISTogram /*Sets the general threshold
level type to HISTogram.*/
:THReshold1:GENeral:LEVel? /*The query returns HIST.*/
```

3.14.4 :THReshold<n>:GENeral:PHIGH

Syntax

```
:THReshold<n>:GENeral:PHIGH <val>
```

:THReshold< n>:GENeral:PHIGH?

Description

Sets or queries the general high threshold percentage, expressed as a percentage.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<val>	Integer	3 to 100	90

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns an integer ranging from 3 to 100.

Example

```
:THReshold1:GENeral:PHIGH 60 /*Sets the general high threshold
percentage to 60.*/
:THReshold1:GENeral:PHIGH? /*The query returns 60.*/
```

3.14.5 :THReshold<n>:GENeral:PMID

Syntax

:THReshold< n>:GENeral:PMID <val>

:THReshold< n>:GENeral:PMID?

Description

Sets or queries the general middle threshold percentage, expressed as a percentage.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<val>	Integer	2 to 99	50

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns an integer ranging from 2 to 99.

Example

```
:THReshold1:GENeral:PMID 60 /*Sets the general middle threshold
percentage to 60.*/
:THReshold1:GENeral:PMID? /*The query returns 60.*/
```

3.14.6 :THReshold<n>:GENeral:PLOW

Syntax

```
:THReshold<n>:GENeral:PLOW <val>
```

```
:THReshold<n>:GENeral:PLOW?
```

Description

Sets or queries the general low threshold percentage, expressed as a percentage.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<val>	Integer	0 to 98	10

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns an integer ranging from 0 to 98.

Example

```
:THReshold1:GENeral:PLOW 20 /*Sets the general low threshold
percentage to 20.*/
:THReshold1:GENeral:PLOW? /*The query returns 20.*/
```

3.14.7 :THReshold<n>:GENeral:LHIGH

Syntax

```
:THReshold<n>:GENeral:LHIGH <val>
```

```
:THReshold<n>:GENeral:LHIGH?
```

Description

Sets or queries the general high threshold voltage. The default unit is V.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<val>	Real	-10 V to 10 V	1 V

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns the general high threshold voltage in scientific notation.

Example

```
:THReshold1:GENeral:LHIGH 5 /*Sets the general high threshold
voltage to 5.*/
:THReshold1:GENeral:LHIGH? /*The query returns +5.000000000000E
+00.*/
```

3.14.8 :THReshold<n>:GENeral:LMID

Syntax

```
:THReshold<n>:GENeral:LMID <val>
```

```
:THReshold<n>:GENeral:LMID?
```

Description

Sets or queries the general middle threshold voltage. The default unit is V.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<val>	Real	-10 V to 10 V	0 V

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns the general middle threshold voltage in scientific notation.

Example

```
:THReshold1:GENeral:LMID 5 /*Sets the general middle threshold
voltage to 5.*/
```



```
:THReshold1:GENeral:LMID? /*The query returns +5.000000000000E+00.*/
```

3.14.9 :THReshold<n>:GENeral:LLOW

Syntax

```
:THReshold<n>:GENeral:LLOW <val>
```

```
:THReshold<n>:GENeral:LLOW?
```

Description

Sets or queries the general low threshold voltage. The default unit is V.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<val>	Real	-10 V to 10 V	-1 V

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns the general low threshold voltage in scientific notation.

Example

```
:THReshold1:GENeral:LLOW 5 /*Sets the general low threshold voltage to 5.*/
:THReshold1:GENeral:LLOW? /*The query returns +5.000000000000E+00.*/
```

3.14.10 :THReshold<n>:GENeral:HYSTeresis

Syntax

```
:THReshold<n>:GENeral:HYSTeresis <val>
```

```
:THReshold<n>:GENeral:HYSTeresis?
```

Description

Sets or queries the general hysteresis voltage. The default unit is V.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1

Name	Type	Range	Default
<val>	Real	0 V to 10 V	100 mV

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns the general hysteresis voltage in scientific notation.

Example

```
:THReshold1:GENeral:HYSTeresis 5 /*Sets the general hysteresis
voltage to 5.*/
:THReshold1:GENeral:HYSTeresis? /*The query returns
+5.000000000000E+00.*/
```

3.14.11 :THReshold<n>:GENeral:ALIGnzero

Syntax

```
:THReshold<n>:GENeral:ALIGnzero <bool>
```

```
:THReshold<n>:GENeral:ALIGnzero?
```

Description

Sets or queries the on/off status for aligning the middle threshold to zero.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<bool>	Bool	{{1 ON}} {0 OFF}}	0 OFF

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns 0 or 1.

Example

```
:THReshold1:GENeral:ALIGnzero ON /*Enables aligning the middle
threshold to zero for source channel 1.*/
:THReshold1:GENeral:ALIGnzero? /*The query returns 1.*/
```

3.14.12 :THReshold<n>:GENeral:TAUTo

Syntax

```
:THReshold<n>:GENeral:TAUTo
```

Description

Automatically sets the general thresholds.

Remarks

This command is only valid when Threshold +/- Hysteresis is selected for *:THReshold<n>:GENeral:METHod*.

Return Format

N/A

Example

N/A

3.14.13 :THReshold<n>:GENeral:HCUStomer

Syntax

```
:THReshold<n>:GENeral:HCUStomer <val>
```

```
:THReshold<n>:GENeral:HCUStomer?
```

Description

Sets or queries the general custom high voltage. The default unit is V.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<val>	Real	-10 V to 10 V	1 V

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns the general custom high voltage in scientific notation.

Example

```
:THReshold1:GENeral:HCUStomer 5 /*Sets the general custom high voltage to 5.*/
```

```
:THReshold1:GENeral:HCUStomer? /*The query returns
+5.000000000000E+00.*/
```

3.14.14 :THReshold<n>:GENeral:LCUStomer

Syntax

```
:THReshold<n>:GENeral:LCUStomer <val>
```

```
:THReshold<n>:GENeral:LCUStomer?
```

Description

Sets or queries the general custom low voltage. The default unit is V.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<val>	Real	-10 V to 10 V	-1 V

Remarks

Channels 1, 2, 3, and 4 are analog channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns the general custom low voltage in scientific notation.

Example

```
:THReshold1:GENeral:LCUStomer 5 /*Sets the general custom low
voltage to 5.*/
:THReshold1:GENeral:LCUStomer? /*The query returns
+5.000000000000E+00.*/
```

3.15 :SIGNaltype Commands (Option)

The signal type is used to specify the category or application characteristics of the signal under test, enabling the instrument to apply the corresponding analysis method, parameter constraints, and default configuration. Before sending the command to enable eye diagram or jitter analysis, you must first use the commands in this chapter to specify the signal type, so that the oscilloscope can correctly perform subsequent edge capture and clock recovery algorithms.

NOTE

The commands in this chapter are only valid when the eye diagram analysis or jitter analysis option is activated.



3.15.1 :SIGNaltype:SOURce

Syntax

:SIGNaltype:SOURce <source>

:SIGNaltype:SOURce?

Description

Sets or queries the source of the signal type.

Parameter

Name	Type	Range	Default
<source>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4 MATH1 MATH2 MATH3 MATH4}	CHANnel1

Remarks

N/A

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4, MATH1, MATH2, MATH3 or MATH4.

Example

```
:SIGNaltype:SOURce CHANnel2 /*Sets the source of the signal type
to CH2.*/
:SIGNaltype:SOURce? /*The query returns CHAN2.*/
```

3.15.2 :SIGNaltype<n>:TYPE

Syntax

:SIGNaltype<n>:TYPE <type>

:SIGNaltype<n>:TYPE?

Description

Sets or queries the signal type.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4 5 6 7 8}	1
<type>	Discrete	{NRZ}	NRZ

Remarks

Channels 1, 2, 3, 4 are analog channels and channels 5, 6, 7, 8 are MATH channels.

Return Format

The query returns NRZ.

Example

```
:SIGNALtype1:TYPE NRZ /*Sets the signal type to NRZ.*/
:SIGNALtype1:TYPE? /*The query returns NRZ.*/
```

3.16 Jitter Analysis Commands (option)

The jitter analysis function is mainly used for signal integrity analysis of high-speed serial signals by analyzing how the measurement variance changes over time. After purchasing and activating the option, the instrument supports basic jitter (:TIE) measurements.

3.16.1 :TIE

 
Basic jitter analysis measurements

The measurements include TIE, Cycle-Cycle, Pos-Pos, Neg-Neg, and Duty. TIE refers to the time interval error.

TIE measurement compares the edges of a data or clock signal with the edges of an ideal data or clock signal determined by the clock recovery function, and generates error statistics.


- TIE**

Compares the edges of the measured signal with the edges of the ideal signal determined by the clock recovery function, then measures all signal intervals at the ideal data rate and calculates error statistics.

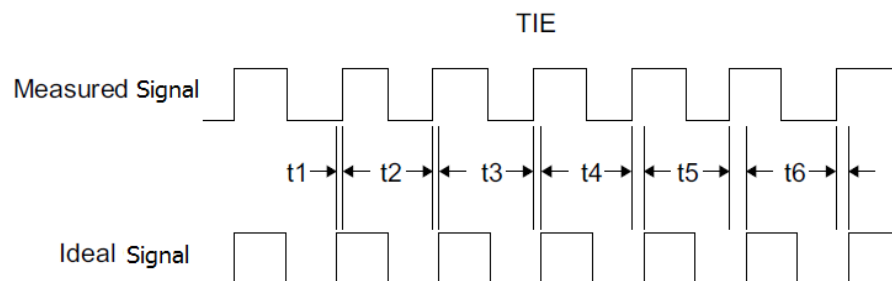


- Cycle-Cycle**

 Measures the first period, then subtracts the first period from the second period as the first result, and so on for subsequent periods.

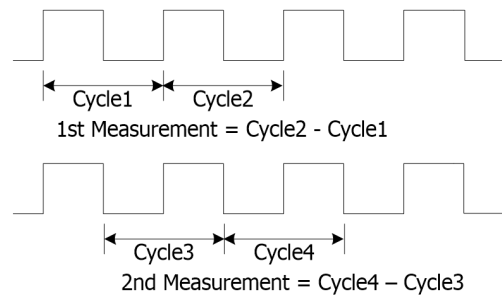


- **Pos-Pos**

 Subtracts the positive pulse width of the first period from that of the second period as the first result, then subtracts the positive pulse width of the second period from that of the third period as the second result, and so on until all periods in the waveform are measured.

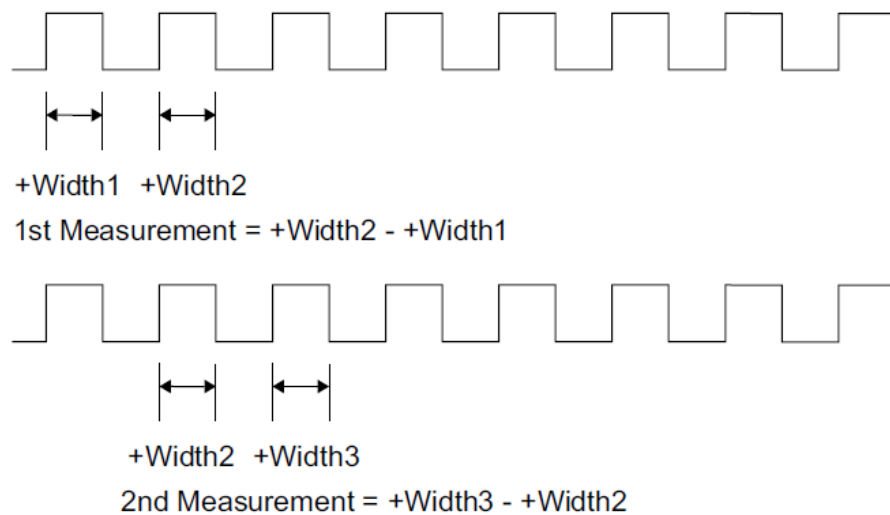


- **Neg-Neg**

 Subtracts the negative pulse width of the first period from that of the second period as the first result, then subtracts the negative pulse width of the second period from that of the third period as the second result, and so on until all periods in the waveform are measured.

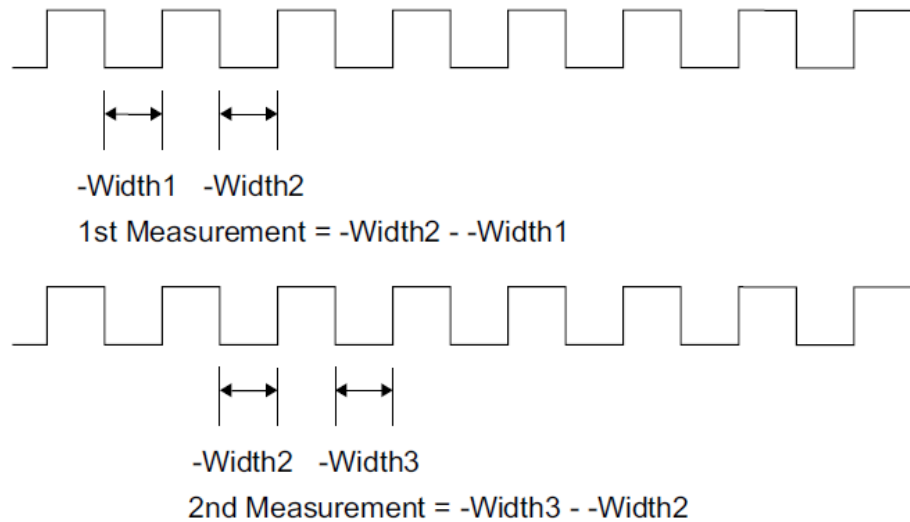

- **Duty**

 Duty is defined as follows: (Positive Pulse Width / Period) × 100%.



3.16.1.1 :TIE:ENABle

Syntax

```
:TIE:ENABle <bool>  
  
:TIE:ENABle?
```

Description

Sets or queries the on/off status of the basic jitter measurement.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:TIE:ENABLE ON /*Enables the basic jitter measurement function.*/
:TIE:ENABLE? /*The query returns 1.*/
```

3.16.1.2 :TIE:SOURce**Syntax**

```
:TIE:SOURce <source>
```

```
:TIE:SOURce?
```

Description

Sets or queries the TIE source.

Parameter

Name	Type	Range	Default
<source>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

N/A

Return Format

The query returns CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TIE:SOURce CHANnel2 /*Sets the TIE source to CH2.*/
:TIE:SOURce? /*The query returns CHAN2.*/
```

3.16.1.3 :TIE:TYPE**Syntax**

```
:TIE:TYPE <type>
```

```
:TIE:TYPE?
```

Description

Sets or queries the type of TIE measurement.

Parameter

Name	Type	Range	Default
<type>	Discrete	{CLOCK DATA}	CLOCK

Remarks

N/A

Return Format

The query returns CLOC or DATA.

Example

```
:TIE:TYPE DATA /*Sets the TIE type to DATA.*/
:TIE:TYPE? /*The query returns DATA.*/
```

3.16.1.4 :TIE:EDGE**Syntax****:TIE:EDGE** <type>**:TIE:EDGE?****Description**

Sets or queries the edge direction for TIE measurement.

Parameter

Name	Type	Range	Default
<type>	Discrete	{RISE DOWN BOTH}	BOTH

Remarks

N/A

Return Format

The query returns RISE, DOWN, or BOTH.

Example

```
:TIE:EDGE RISE /*Sets the TIE edge direction to RISE.*/
:TIE:EDGE? /*The query returns RISE.*/
```

3.16.1.5 :TIE:UNIT**Syntax****:TIE:UNIT** <type>**:TIE:UNIT?****Description**

Sets or queries the unit for TIE measurement.

Parameter

Name	Type	Range	Default
<type>	Discrete	{SECond UI}	SECond

Remarks

N/A

Return Format

The query returns SEC or UI.

Example

```
:TIE:UNIT UI /*Sets the TIE unit to UI.*/
:TIE:UNIT? /*The query returns UI.*/
```

3.16.1.6 :TIE:TREND:ENABLE**Syntax**

```
:TIE:TREND:ENABLE <bool>
```

```
:TIE:TREND:ENABLE?
```

Description

Sets or queries the on/off status of the TIE trend.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON} {0 OFF}}	0 OFF

Remarks

This command is available only when basic jitter measurement is enabled. You can enable basic jitter measurement with the *:TIE:ENABLE ON* command.

Return Format

The query returns 1 or 0.

Example

```
:TIE:TREND:ENABLE ON /*Enables the TIE trend.*/
:TIE:TREND:ENABLE? /*The query returns 1.*/
```

3.16.1.7 :TIE:TREND:SMOOTH:ENABLE**Syntax**

```
:TIE:TREND:SMOOTH:ENABLE <bool>
```

:TIE:TREnd:SMOoth:ENABle?

Description

Sets or queries the on/off status of smoothing for the TIE trend.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:TIE:TREnd:SMOoth:ENABle ON /*Enables smoothing for the TIE
trend.*/
:TIE:TREnd:SMOoth:ENABle? /*The query returns 1.*/
```

3.16.1.8 :TIE:TREnd:SMOoth:FACTOR

Syntax

:TIE:TREnd:SMOoth:FACTOR <val>

:TIE:TREnd:SMOoth:FACTOR?

Description

Sets or queries the smoothing factor for the TIE trend.

Parameter

Name	Type	Range	Default
<val>	Integer	3 to 1000	5

Remarks

Channels 1, 2, 3, and 4 are signal source channels, and channels 5, 6, 7, and 8 are MATH channels.

Return Format

The query returns an integer ranging from 3 to 1000.

Example

```
:TIE:TREnd:SMOoth:FACTOR 10 /*Sets the smoothing factor of the
TIE trend for source channel 1 to 10.*/
:TIE:TREnd:SMOoth:FACTOR? /*The query returns 10.*/
```

3.16.1.9 :TIE:SPECTrum:ENABLE

Syntax

```
:TIE:SPECTrum:ENABLE <bool>
```

```
:TIE:SPECTrum:ENABLE?
```

Description

Sets or queries the on/off status of the TIE spectrum.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {0 OFF}}	0 OFF

Remarks

This command is available only when basic jitter measurement is enabled. You can enable basic jitter measurement with the *:TIE:ENABLE ON* command.

Return Format

The query returns 1 or 0.

Example

```
:TIE:SPECTrum:ENABLE ON /*Enables the TIE spectrum.*/  
:TIE:SPECTrum:ENABLE? /*The query returns 1.*/
```

3.16.1.10 :TIE:HISTogram:ENABLE

Syntax

```
:TIE:HISTogram:ENABLE <bool>
```

```
:TIE:HISTogram:ENABLE?
```

Description

Sets or queries the on/off status of the TIE histogram.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {0 OFF}}	0 OFF

Remarks

This command is available only when basic jitter measurement is enabled. You can enable basic jitter measurement with the *:TIE:ENABLE ON* command.

Return Format

The query returns 1 or 0.

Example

```
:TIE:HISTogram:ENABle ON /*Enables the TIE histogram.*/  
:TIE:HISTogram:ENABle? /*The query returns 1.*/
```

3.16.1.11 :TIE:RESult:ENABle**Syntax**

```
:TIE:RESult:ENABle <bool>
```

```
:TIE:RESult:ENABle?
```

Description

Sets or queries the on/off status of the TIE measurement results.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

Note that if you disables the basic jitter measurement result display, the basic jitter measurement function will also be disabled.

Return Format

The query returns 1 or 0.

Example

```
:TIE:RESult:ENABle ON /*Enables the TIE measurement results.*/  
:TIE:RESult:ENABle? /*The query returns 1.*/
```

3.16.1.12 :TIE:RESult:TIE**Syntax**

```
:TIE:RESult:TIE <bool>
```

```
:TIE:RESult:TIE?
```

Description

Sets or queries the on/off status of the TIE result for TIE measurement.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:TIE:RESult:TIE ON /*Enables the TIE result for TIE
measurement.*/
:TIE:RESult:TIE? /*The query returns 1.*/
```

3.16.1.13 :TIE:RESult:CYCY**Syntax**

```
:TIE:RESult:CYCY <bool>
```

```
:TIE:RESult:CYCY?
```

Description

Sets or queries the on/off status of the cycle-to-cycle result for TIE measurement.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {0 OFF}}	0 OFF

Remarks

The cycle-to-cycle measurement can be enabled only when the basic jitter measurement type *:TIE:TYPE* is set to Clock.

Return Format

The query returns 1 or 0.

Example

```
:TIE:RESult:CYCY ON /*Enables the cycle-to-cycle result for TIE
measurement.*/
:TIE:RESult:CYCY? /*The query returns 1.*/
```

3.16.1.14 :TIE:RESult:POSPos

Syntax

```
:TIE:RESult:POSPos <bool>
```

```
:TIE:RESult:POSPos?
```

Description

Sets or queries the on/off status of the positive-to-positive pulse width result for TIE measurement.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

The positive-to-positive pulse width measurement can be enabled only when the basic jitter measurement type *:TIE:TYPE* is set to Clock.

Return Format

The query returns 1 or 0.

Example

```
:TIE:RESult:POSPos ON /*Enables the positive-to-positive pulse  
width result for TIE measurement.*/  
:TIE:RESult:POSPos? /*The query returns 1.*/
```

3.16.1.15 :TIE:RESult:NEGNeg

Syntax

```
:TIE:RESult:NEGNeg <bool>
```

```
:TIE:RESult:NEGNeg?
```

Description

Sets or queries the on/off status of the negative-to-negative pulse width result for TIE measurement.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

The negative-to-negative pulse width measurement can be enabled only when the basic jitter measurement type *:TIE:TYPE* is set to Clock.

Return Format

The query returns 1 or 0.

Example

```
:TIE:RESult:NEGNeg ON /*Enables the negative-to-negative pulse
width result for TIE measurement.*/
:TIE:RESult:NEGNeg? /*The query returns 1.*/
```

3.16.1.16 :TIE:RESult:DUTY**Syntax**

```
:TIE:RESult:DUTY <bool>
```

```
:TIE:RESult:DUTY?
```

Description

Sets or queries the on/off status of the duty cycle result for TIE measurement.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {0 OFF}}	0 OFF

Remarks

The duty cycle measurement can be enabled only when the basic jitter measurement type *:TIE:TYPE* is set to Clock.

Return Format

The query returns 1 or 0.

Example

```
:TIE:RESult:DUTY ON /*Enables the duty cycle result for TIE
measurement.*/
:TIE:RESult:DUTY? /*The query returns 1.*/
```

3.16.1.17 :TIE:RESult:DTIE**Syntax**

```
:TIE:RESult:DTIE?
```

Description

Queries the result data of the TIE measurement.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.16.1.18 :TIE:RESult:DHISt**Syntax**`:TIE:RESult:DHISt?`**Description**

Queries the result data of the TIE histogram measurement.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.16.1.19 :TIE:RESet**Syntax**`:TIE:RESet`**Description**

Resets the TIE analysis.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.17 IEEE488.2 Common Commands

The IEEE488.2 common commands are used to query the basic information of the instrument or executing basic operations. These commands usually start with "*", and the command keywords contain 3 characters and are related with status registers.

The standard event status register (SESR) and status byte register (SBR) record the event of a certain type happened during the use of the instrument. IEEE488.2 defines to record one specific type of event for each bit in the status register.

Table 3.256 Table of the Bit Definition of Standard Event Status Register

Bit No.	Bit Name	Decimal Value	Description
0	Operation Complete (OPC)	1	"Operation complete" indicates that all pending operations were completed following the execution of the command.
1	Not Used	2	-
2	Query Error (QYE)	4	The instrument tries to read the output buffer but it was empty. Or, a new command line was received before a previous query has been read. Or, both the input buffer and output buffer are full.
3	Device-Specific Error (DDE)	8	Indicates that an error has occurred that is neither a Command Error, a Query Error, nor an Execution Error. A Device-Specific Error is any executed device operation that did not properly complete due to some condition, such as self-check error, calibration error, or other device-specific errors.

Bit No.	Bit Name	Decimal Value	Description
4	Execution Error (E)	16	An execution error occurred.
5	Command Error (CME)	32	A command error (command syntax error) has occurred.
6	Not Used	64	-
7	Power On (PON)	128	Indicates that an off-to-on transition has occurred in the device's power supply since last reading or the event register was cleared.

Table 3.257 Table of the Bit Definition of Status Byte Register

Bit No.	Bit Name	Decimal Value	Description
0	Not Used	1	-
1	Not Used	2	-
2	Error Queue	4	1 or multiple errors in the error queue
3	Questionable Data Summary	8	Sets 1 or multiple bits (must be the enabled bit) in the questionable data register.
4	Message Available (MAV)	16	Indicates the available data in the output buffer.
5	Standard Event Summary	32	Sets 1 or multiple bits (must be the enabled bit) in the standard event register.
6	Master Summary Status (MSS)	64	Sets 1 or multiple bits (must be the enabled bit) in the Status Byte Register and generate the service request.
7	Operation Status Register	128	Sets 1 or multiple bits (must be the enabled bit) in the Operation Status Register.

3.17.1 *IDN?

Syntax

*IDN?

Description

Queries the ID string of the instrument.

Parameter

N/A

Remarks

N/A

Return Format

The query returns RIGOL TECHNOLOGIES,<model>,<serial number>,<software version>.

- **<model>**: indicates the model number of the instrument.
- **<serial number>**: indicates the serial number of the instrument.
- **<software version>**: indicates the software version of the instrument.

Example

N/A

3.17.2 *RST

Syntax

*RST

Description

Restores the instrument to its factory default settings.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.17.3 *CLS

Syntax

*CLS

Description

Clears all the event registers, and also clears the error queue.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.17.4 *ESE

Syntax

*ESE <maskargument>

*ESE?

Description

Sets or queries the enable register of the standard event register set.

Parameter

Name	Type	Range	Default
<maskargument>	Integer	0 to 255	0

Remarks

For the definitions of the bits in the standard event register, refer to [Table 3.256 Table of the Bit Definition of Standard Event Status Register](#) . The value of <maskargument> is the sum of the decimal values of all bits set in the standard event register. For example, to enable Bit 2 (4 in decimal), Bit 3 (8 in decimal), and Bit 7 (128 in decimal), set the <maskargument> to 140 (4+8+128).

Return Format

The query returns an integer. The integer equals to the decimal-weighted sum of all the bits set in the register.

Example

```
*ESE 16 /*Enables Bit 4 (16 in decimal) in the register.*/
*ESE? /*The query returns the enable value of the register 16.*/
```

3.17.5 *ESR?**Syntax**

***ESR?**

Description

Queries and clears the event register of the standard event status register.

Parameter

N/A

Remarks

Bit 1 and Bit 6 in the standard event status register (*Table 3.256 Table of the Bit Definition of Standard Event Status Register*) are not used and are always treated as 0; therefore, the range of the returned value is a decimal number corresponding to a binary number X0XXXX0X (X is 1 or 0).

Return Format

The query returns an integer. The integer equals to the binary-weighted sum of all the bits set in the register.

Example

N/A

3.17.6 *OPC**Syntax**

***OPC**

***OPC?**

Description

The *OPC command sets bit 0 (Operation Complete, OPC) in the standard event register to 1 after the current operation is finished.

The *OPC? command queries whether the current operation is finished.

Parameter

N/A

Remarks

For the definitions of the bits in the standard event register, refer to *Table 3.256 Table of the Bit Definition of Standard Event Status Register*.

Return Format

The query returns 1 after the current operation is finished; otherwise, the query returns 0.

Example

N/A

3.17.7 *RCL

Syntax

***RCL**

Description

Recalls instrument settings from the specified non-volatile memory. The previous saved settings through the **SAV* command will be overwritten.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.17.8 *SAV

Syntax

***SAV** <value>

Description

Saves the current instrument state to the selected register.

Parameter

Name	Type	Range	Default
<value>	Integer	0 to 49	0

Remarks

N/A

Return Format

N/A

Example

```
*SAV 1 /*Saves the current instrument state to Register 1.*/
```

3.17.9 *SRE

Syntax

***SRE** <maskargument>

***SRE?**

Description

Sets or queries the enable register of the status byte register set.

Parameter

Name	Type	Range	Default
<maskargument>	Integer	0 to 255	0

Remarks

For the definitions of the bits in the status byte register, refer to [Table 3.257 Table of the Bit Definition of Status Byte Register](#). The value of <maskargument> is the sum of the decimal values of all bits set in the status byte register. For example, to enable Bit 2 (4 in decimal), Bit 3 (8 in decimal), and Bit 7 (128 in decimal), set the <maskargument> to 140 (4+8+128).

Return Format

The query returns an integer. The integer equals to the decimal-weighted sum of all the bits set in the register.

Example

```
*SRE 16 /*Enables Bit 4 (16 in decimal) in the register.*/  
*SRE? /*The query returns the enable value of the register 16.*/
```

3.17.10 *STB?

Syntax

*STB?

Description

Queries the event register for the status byte register. After executing the command, the value in the status byte register is cleared.

Parameter

N/A

Remarks

Bit 0 and Bit 1 in the status byte register (*Table 3.257 Table of the Bit Definition of Status Byte Register*) are not used and are always treated as 0; therefore, the range of the returned value is a decimal number corresponding to a binary number XXXXXX00 (X is 1 or 0).

Return Format

The query returns an integer. The integer equals to the decimal-weighted sum of all the bits set in the register.

Example

N/A

3.17.11 *WAI

Syntax

*WAI

Description

Waits for all the pending operations to complete before executing any additional commands.

Parameter

N/A

Remarks

This operation command does not have any functions, only to be compatible with other devices.

Return Format

N/A

Example

N/A

3.17.12 *TST?**Syntax*****TST?****Description**

Performs a self-test and returns the self-test result.

Parameter

N/A

Remarks

This command executes a self-test. If the test fails, one or more error messages will be displayed, providing more information. You can use **:SYSTem:ERRor[:NEXT]?** to read the error queue.

Return Format

The query returns 0 or 1.

- **0:** it passes.
- **1:** one or more tests fail.

Example

N/A

3.18 :LA Commands

The **:LA** commands are used to perform relevant operations on the digital channels.

The oscilloscope compares the voltages acquired in each sample with the preset logic threshold. If the voltage of the sample point is greater than the threshold, it will be stored as logic 1; otherwise, it will be stored as logic 0. The oscilloscope displays logic levels ("1" and "0") in the form of a graph for you to easily detect and analyze the errors in circuit design (hardware design and software design).

3.18.1 :LA:ENABLe**Syntax****:LA:ENABLe** <bool>**:LA:ENABLe?**

Description

Sets to enable or disable the LA function; queries whether the LA function is enabled.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks**Return Format**

The query returns 1 or 0.

Example

```
:LA:ENABLe ON      /*Enables the LA function.*/
:LA:ENABLe?       /*The query returns 1.*/
```

3.18.2 :LA:ACTive

Syntax

:LA:ACTive <digital>

:LA:ACTive?

Description

Sets or queries the current activate channel.

Parameter

Name	Type	Range	Default
<digital>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15}	-

Remarks

- The parameter <digital> can be any of the digital channels (D0-D15). The channel label and waveform of the selected channel are displayed in red.
- Only the currently enabled digital channel can be set to the activated channel. To open the specified channel, run the *:LA:DiGital:ENABle* command. To enable the desired channel group, run the *:LA:POD<n>:DiSPlay* command.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, or D15.

Example

```
:LA:ACTive D3      /*Sets the current activated channel to D3.*/
:LA:ACTive?        /*The query returns D3.*/
```

3.18.3 :LA:POSition**Syntax**

```
:LA:POSition <digital>
```

```
:LA:POSition?
```

Description

Switches the position of the specified digital channel and that of the currently activated channel in the waveform view.

Queries the specified digital channel that switches its position with the activated channel.

Parameter

Name	Type	Range	Default
<digital>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15}	D0

Remarks

This command is only available for the digital channel that has been enabled. To set or query the on/off status of the specified digital channel, run the *:LA:DIGital:ENABLE* command.

To set or query the currently activated channel, run the *:LA:ACTive* command.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, or D15.

Example

```
:LA:POSition D3      /*Sets to switch the position of D3 and that of
the currently activated channel.*/
:LA:POSition?        /*The query returns D3.*/
```

3.18.4 :LA:AUTosort**Syntax**

```
:LA:AUTosort <val>
```

```
:LA:AUTosort?
```

Description

Sets the auto sorting mode for the waveforms of the enabled channels.

Parameter

Name	Type	Range	Default
<val>	Discrete	{D0D15 D15D0}	D15D0

Remarks

- **D0D15:** the waveforms on the display are D0-D15 in sequence from top to bottom.
- **D15D0:** the waveforms on the display are D15-D0 in sequence from top to bottom.

Return Format

The query returns D0D15 or D15D0.

Example

```
:LA:AUTosort D0D15 /*Sets the auto sorting mode to D0D15.*/
:LA:AUTosort? /*The query returns D0D15.*/
```

3.18.5 :LA:DIGital:ENABLE

Syntax

```
:LA:DIGital:ENABle <digital>,<bool>
```

```
:LA:DIGital:ENABle? <digital>
```

Description

Turns on or off the specified digital channel; or queries the on/off status of the specified digital channel.

Parameter

Name	Type	Range	Default
<digital>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15}	-
<bool>	Bool	{{1 ON} {0 OFF}}	0 OFF

Remarks

The currently enabled channel can be selected as the active channel by sending the **:LA:ACTive** command.

Return Format

The query returns 1 or 0.

Example

```
:LA:DIGital:ENABle D3, ON /*Enables D3.*/
:LA:DIGital:ENABle? D3 /*The query returns 1.*/
```

3.18.6 :LA:DIGital:LABel

Syntax

```
:LA:DIGital:LABel <digital>,<label>
```

```
:LA:DIGital:LABel? <digital>
```

Description

Sets or queries the label of the specified digital channel.

Parameter

Name	Type	Range	Default
<digital>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15}	-
<label>	ASCII String	It can contain English letters and numbers, and also some symbols.	-

Remarks

N/A

Return Format

The query returns the label of the specified digital channel in ASCII strings.

Example

```
:LA:DIGital:LABel D0,ACK /*Sets the label of D0 to ACK.*/
:LA:DIGital:LABel? D0 /*The query returns ACK.*/
```

3.18.7 :LA:POD<n>:DISPlay

Syntax

```
:LA:POD<n>:DISPlay <bool>
```

```
:LA:POD<n>:DISPlay?
```

Description

Enables or disables the specified default channel group, or queries the on/off status of the specified default channel group.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<bool>	Bool	{{1 ON} {0 OFF}}	0 OFF

Remarks

- 4 default channel groups: POD1 (D0 to D3), POD2 (D4 to D7), POD3 (D8 to D11), and POD4 (D12 to D15).
- Only when the channel group that has been inserted with a logic analyzer probe, can it be enabled. To query whether the logic analyzer probe has been inserted, run the `:LA:POD<n>:INSert?` command.
- If the channel group is enabled, all of the channels in this group will be all enabled. Only when all of the channels in the specified channel group are enabled, can this channel group be enabled.

Return Format

The query returns 1 or 0.

Example

```
:LA:POD1:DISPlay ON          /*Enables POD1.*/
:LA:POD1:DISPlay?           /*The query returns 1.*/
```

3.18.8 :LA:POD<n>:THReshold

Syntax

```
:LA:POD<n>:THReshold <thre>
:LA:POD<n>:THReshold?
```

Description

Sets or queries the threshold of the specified default channel group. The default unit is V.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<thre>	Real	-15.0 V to +15.0 V	1.40V

Remarks

4 default channel groups: POD1 (D0 to D3), POD2 (D4 to D7), POD3 (D8 to D11), and POD4 (D12 to D15).

Return Format

The query returns the current threshold of the specified channel group in scientific notation.

Example

```
:LA:POD1:THReshold 3.3 /*Sets the threshold of the channel group
POD1 (D0 to D3) to 3.3 V.*/
:LA:POD1:THReshold? /*The query returns 3.3E+00.*/
```

3.18.9 :LA:POD<n>:LABel:ENABle

Syntax

```
:LA:POD<n>:LABel:ENABle <bool>
```

```
:LA:POD<n>:LABel:ENABle?
```

Description

Sets or queries the on/off status of the label display of the specified digital channel group.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

4 default channel groups: POD1 (D0 to D3), POD2 (D4 to D7), POD3 (D8 to D11), and POD4 (D12 to D15).

When <bool> is set to ON, the labels of the digital channels in the specified channel group are displayed in the waveform view. When set to OFF, the labels are not displayed.

Return Format

The query returns 1 or 0.

Example

```
:LA:POD3:LABel:ENABle ON /*Enables the label display of
the digital channels in the POD3 channel group.*/
:LA:POD3:LABel:ENABle? /*The query returns 1.*/
```

3.18.10 :LA:POD<n>:INSert?**Syntax**

:LA:POD<n>:INSert?

Description

Queries whether the digital channel group has inserted the logic analyzer probe.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

4 default channel groups: POD1 (D0 to D3), POD2 (D4 to D7), POD3 (D8 to D11), and POD4 (D12 to D15).

Return Format

The query returns 1 or 0.

Example

```
:LA:POD1:INSert? /*The query returns 1, indicating that digital
channel group 1 has inserted the logic analyzer probe.*/
```

3.18.11 :LA:SIZE**Syntax**

:LA:SIZE <size>

:LA:SIZE?

Description

Sets or queries the size of the waveforms of the enabled channel on the screen.

Parameter

Name	Type	Range	Default
<size>	Discrete	{SMAL LARGe MEDium}	MEDium

Remarks

L (large) can only be used when the number of the currently enabled channels is no more than 8.

Return Format

The query returns SMAL, LARG, or MED.

Example

```
:LA:SIZE SMALL /*Sets the waveform display size to SMALL.*/
:LA:SIZE? /*The query returns SMAL.*/
```

3.18.12 :LA:PROBecal:DElay

Syntax

```
:LA:PROBecal:DElay <time>
```

```
:LA:PROBecal:DElay?
```

Description

Sets or queries the delay time of the logic analyzer probe. The unit is s.

Parameter

Name	Type	Range	Default
<time>	Real	-200 ns to 200 ns	0

Remarks

N/A

Return Format

The query returns the delay time for the logic analyzer probe in scientific notation. The unit is s.

Example

```
:LA:PROBecal:DElay 1.0E-07 /*Sets the probe delay of the logic
analyzer probe to 100 ns.*/
:LA:PROBecal:DElay? /*The query returns + 1.000000000000E-07.*/
```

3.18.13 :LA:LAYer:ACTive

Syntax

`:LA:LAYer:ACTive <bool>`

`:LA:LAYer:ACTive?`

Description

Sets or queries whether to set the waveform of the digital channel as the sticky display.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {0 OFF}}	0 OFF

Remarks

When the waveform of the analog channel overlap with that of the digital channel, setting <bool> to ON indicates that the waveform of the digital channel is set as sticky display, whereas setting <bool> to OFF indicates that the waveform of the analog channel is set as sticky display.

Return Format

The query returns 1 or 0.

Example

```
:LA:LAYer:ACTive ON      /*Sets the waveform of the digital channel
as sticky display.*/
:LA:LAYer:ACTive?        /*The query returns 1.*/
```

3.19 :LAN Commands

The **:LAN** commands are used to set or query the LAN-related parameters.



NOTE

After configuring all the other **:LAN** commands, you need to send **:LAN:APPLY** to make all the LAN configurations take effect.

3.19.1 :LAN:DHCP

Syntax

`:LAN:DHCP <bool>`

`:LAN:DHCP?`

Description

Turns on or off the DHCP configuration mode; or queries the on/off status of the current DHCP configuration mode.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	1 ON

Remarks

- When the three IP configuration types (DHCP, Auto IP, and Static IP) are all turned on, the priority of the parameter configuration from high to low is "DHCP", "Auto IP", and "Static IP". The three IP configuration types cannot be all turned off at the same time.
- When DHCP is valid, the DHCP server in the current network will assign the network parameters (such as the IP address) for the instrument.
- After the *:LAN:APPLY* command is executed, the configuration type can take effect immediately.

Return Format

The query returns 1 or 0.

Example

```
:LAN:DHCP OFF      /*Disables DHCP configuration mode.*/
:LAN:DHCP?         /*The query returns 0.*/
```

3.19.2 :LAN:AUTOip

Syntax

:LAN:AUTOip <bool>

:LAN:AUTOip?

Description

Turns on or off the Auto IP configuration mode; or queries the on/off status of the current Auto IP configuration mode.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	1 ON

Remarks

When the auto IP mode is valid, disable DHCP manually. In auto IP mode, the instrument will get the IP address (ranging from 169.254.0.1 to 169.254.255.254) and the subnet mask (255.255.0.0) automatically according to the current network configuration.

Return Format

The query returns 1 or 0.

Example

```
:LAN:AutoIp OFF          /*Disables the Auto IP configuration
mode.*/*
:LAN:AutoIp?             /*The query returns 0.*/*
```

3.19.3 :LAN:GATeway

Syntax

:LAN:GATeway <string>

:LAN:GATeway?

Description

Sets or queries the default gateway.

Parameter

Name	Type	Range	Default
<string>	ASCII String	Refer to <i>Remarks</i>	-

Remarks

- The format of <string> is nnn.nnn.nnn.nnn. The range of the first section of "nnn" is from 0 to 223 (except 127), and the ranges of the other three sections of "nnn" are from 0 to 255.
- Only when the IP configuration mode is set to Static IP mode, and both DHCP and Auto IP are disabled, can you use the set default gateway.

Return Format

The query returns the current gateway in strings.

Example

```
:LAN:GATeway 192.168.1.1    /*Sets the default gateway to
192.168.1.1.*/*
:LAN:GATeway?               /*The query returns 192.168.1.1.*/*
```

3.19.4 :LAN:DNS

Syntax

:LAN:DNS <string>

:LAN:DNS?

Description

Sets or queries the DNS address.

Parameter

Name	Type	Range	Default
<string>	ASCII String	Refer to <i>Remarks</i>	-

Remarks

- The format of <string> is nnn.nnn.nnn.nnn. The range of the first section of "nnn" is from 0 to 223 (except 127), and the ranges of the other three sections of "nnn" are from 0 to 255.
- Only when the IP configuration mode is set to Static IP mode, and both DHCP and Auto IP are disabled, can you use the set DNS address.

Return Format

The query returns the current DNS address in strings.

Example

```
:LAN:DNS 192.168.1.1      /*Sets the DNS address to  
192.168.1.1.*/  
:LAN:DNS?                 /*The query returns 192.168.1.1.*/
```

3.19.5 :LAN:MAC?

Syntax

:LAN:MAC?

Description

Queries the MAC address of the instrument.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the MAC address in strings. For example, 00:19:AF:00:11:22.

Example

N/A

3.19.6 :LAN:DSERver?

Syntax

:LAN:DSERver?

Description

Queries the address of the DHCP server.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the address of the DHCP server in strings.

Example

N/A

3.19.7 :LAN:MANual

Syntax

:LAN:MANual <bool>

:LAN:MANual?

Description

Turns on or off the static IP configuration mode; or queries the on/off status of the static IP configuration mode.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {{0 OFF}}	0 OFF

Remarks

When the static IP mode is valid, disable DHCP and Auto IP manually. You can self-define the network parameters of the instrument, such as IP address, subnet mask,

gateway, and DNS address. For the setting of the IP address, refer to the `:LAN:IPAdDress` command. For the setting of the subnet mask, refer to the `:LAN:SMASk` command. For the setting of the gateway, refer to the `:LAN:GATeway` command. For the setting of DNS, refer to the `:LAN:DNS` command.

Return Format

The query returns 1 or 0.

Example

```
:LAN:MANual ON          /*Enables the static IP configuration mode.*/  
:LAN:MANual?           /*The query returns 1.*/
```

3.19.8 :LAN:IPAdDress

Syntax

`:LAN:IPAdDress <string>`

`:LAN:IPAdDress?`

Description

Sets or queries the IP address of the instrument.

Parameter

Name	Type	Range	Default
<string>	ASCII String	Refer to <i>Remarks</i>	-

Remarks

- The format of <string> is nnn.nnn.nnn.nnn. The range of the first section of "nnn" is from 0 to 223 (except 127), and the ranges of the other three sections of "nnn" are from 0 to 255.
- Only when the IP configuration mode is set to Static IP mode, and both DHCP and Auto IP are disabled, can you use the set IP address.

Return Format

The query returns the current IP address in strings.

Example

```
:LAN:IPAdDress 192.168.1.10 /*Sets the IP address to  
192.168.1.10.*/  
:LAN:IPAdDress?           /*The query returns 192.168.1.10.*/
```

3.19.9 :LAN:SMASk

Syntax

:LAN:SMASk <string>

:LAN:SMASk?

Description

Sets or queries the subnet mask.

Parameter

Name	Type	Range	Default
<string>	ASCII String	Refer to <i>Remarks</i>	-

Remarks

- The format of <string> is nnn.nnn.nnn.nnn. The range of the section "nnn" is from 0 to 255.
- Only when the IP configuration mode is set to Static IP mode, and both DHCP and Auto IP are disabled, can you use the set subnet mask.

Return Format

The query returns the current subnet mask in strings.

Example

```
:LAN:SMASk 255.255.255.0 /*Sets the subnet mask to
255.255.255.0.*/
:LAN:SMASk? /*The query returns 255.255.255.0.*/
```

3.19.10 :LAN:STATUs?

Syntax

:LAN:STATUs?

Description

Queries the current network configuration status.

Parameter

N/A

Remarks

- UNLINK:** not connected.

- **CONNECTED:** the network is successfully connected.
- **INIT:** the instrument is acquiring an IP address.
- **IPCONFLICT:** there is an IP address conflict.
- **BUSY:** please wait...
- **CONFIGURED:** the network configuration has been successfully configured.
- **DHCPFAILED:** the DHCP configuration has failed.
- **INVALIDIP:** invalid IP.
- **IPLOSE:** IP lost.

Return Format

The query returns UNLINK, CONNECTED, INIT, IPCONFLICT, BUSY, CONFIGURED, DHCPFAILED, INVALIDIP, or IPLOSE.

Example

N/A

3.19.11 :LAN:VISA?

Syntax

:**LAN:VISA?** [<type>]

Description

Queries the VISA address of the instrument.

Parameter

Name	Type	Range	Default
<type>	Discrete	{USB LXI SOCKEt}	LXI

Remarks

This command contains a parameter "type" and it is used to set the address type of queried. By default, it returns the LXI address.

Return Format

The query returns the VISA address in strings.

Example

N/A

3.19.12 :LAN:MDNS

Syntax

:LAN:MDNS <bool>

:LAN:MDNS?

Description

Enables or disables mDNS; or queries the mDNS status.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:LAN:MDNS ON           /*Enables mDNS.*/  
:LAN:MDNS?             /*The query returns 1.*/
```

3.19.13 :LAN:HOST:NAME

Syntax

:LAN:HOST:NAME <name>

:LAN:HOST:NAME?

Description

Sets or queries the host name.

Parameter

Name	Type	Range	Default
<name>	ASCII String	The label can contain English letters and numbers, as well as some symbols.	-

Remarks

N/A

Return Format

The query returns the host name in ASCII strings.

Example

N/A

3.19.14 :LAN:DESCription

Syntax

:LAN:DESCription <name>

:LAN:DESCription?

Description

Sets or queries the description.

Parameter

Name	Type	Range	Default
<name>	ASCII String	The label can contain English letters and numbers, as well as some symbols.	-

Remarks

N/A

Return Format

The query returns the description in ASCII strings.

Example

N/A

3.19.15 :LAN:APPLy

Syntax

:LAN:APPLy

Description

Applies the network configuration.

Parameter

N/A

Remarks

After configuring all the LAN-related parameters with the :LAN commands, you need to send this command to make all the LAN configurations take effect.

Return Format

N/A

Example

N/A

3.20 :MASK Commands

:MASK commands are used to set or query the pass/fail test related parameters.

During the product design and manufacturing process, you usually need to monitor the variations of the signal or judge whether the product is up to standard. The standard pass/fail test function of this series oscilloscope can accomplish this task perfectly. You can use this function to set the test rules based on standard waveforms and define the mask. It compares the signal under test with the mask and displays the test results.

3.20.1 :MASK:ENABLE

Syntax

:MASK:ENABLE <bool>

:MASK:ENABLE?

Description

Enables or disables the pass/fail test function; or queries the on/off status of the pass/fail test function.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {{0 OFF}}	0 OFF

Remarks

The pass/fail test is disabled in the following conditions:

- When the horizontal time base is in ROLL mode; (to set or query the horizontal time base mode, run :TIMebase:MODE.)
- When the delayed sweep mode (Zoom) is enabled; (to set or query the on/off status of the delayed sweep, run :TIMebase:DElay:ENABLE.)

- When performing the waveform recording and playing.

Return Format

The query returns 1 or 0.

Example

```
:MASK:ENABle ON      /*Enables the pass/fail test function.*/
:MASK:ENABle?        /*The query returns 1.*/
```

3.20.2 :MASK:SOURce

Syntax

:MASK:SOURce <source>

:MASK:SOURce?

Description

Sets or queries the source of the pass/fail test.

Parameter

Name	Type	Range	Default
<source>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

When you use the command to set the disabled channel, the disabled channel will be enabled automatically.

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4.

Example

```
:MASK:SOURce CHANnel2 /*Sets the source of the pass/fail test to
CHANnel2.*/
:MASK:SOURce?          /*The query returns CHAN2.*/
```

3.20.3 :MASK:OPERate

Syntax

:MASK:OPERate <oper>

:MASK:OPERate?

Description

Starts or stops the pass/fail test; or queries the operating status of the pass/fail test.

Parameter

Name	Type	Range	Default
<oper>	Discrete	{RUN STOP}	STOP

Remarks

Before running this command, send the **:MASK:ENABLE** command to enable the pass/fail test function.

Return Format

The query returns RUN or STOP.

Example

```
:MASK:OPERate RUN /*Starts the pass/fail test.*/
:MASK:OPERate? /*The query returns RUN.*/
```

3.20.4 :MASK:X**Syntax**

:MASK:X <X>

:MASK:X?

Description

Sets or queries the horizontal adjustment parameter of the pass/fail test mask. The default unit is div.

Parameter

Name	Type	Range	Default
<X>	Real	0.01 div to 2 div	0.24 div

Remarks

N/A

Return Format

The query returns the current horizontal adjustment parameter in scientific notation.

Example

```
:MASK:X 0.28 /*Sets the horizontal adjustment parameter to 0.28
div.*/
:MASK:X? /*The query returns 2.800000E-1.*/
```


3.20.5 :MASK:Y

Syntax

:MASK:Y <y>

:MASK:Y?

Description

Sets or queries the vertical adjustment parameter of the pass/fail test mask. The default unit is div.

Parameter

Name	Type	Range	Default
<y>	Real	0.04 div to 2 div	0.48 div

Remarks

N/A

Return Format

The query returns the current vertical adjustment parameter in scientific notation.

Example

```
:MASK:Y 0.36 /*Sets the vertical adjustment parameter to 0.36
div.*/
:MASK:Y? /*The query returns 3.600000E-1.*/
```

3.20.6 :MASK:CREate

Syntax

:MASK:CREate

Description

Creates the pass/fail test mask with the currently set horizontal and vertical adjustment parameters.

Parameter

N/A

Remarks

- This command is only valid when the pass/fail test function is enabled and not in the running state. You can use **:MASK:ENABle** to query or set the status of the

pass/fail test function. You can use *:MASK:OPERate* to query or set the running status.

- You can use *:MASK:X* and *:MASK:Y* to query or set the horizontal and vertical adjustment parameters.

Return Format

N/A

Example

N/A

3.20.7 :MASK:RESet

Syntax

:MASK:RESet

Description

Resets the number of frames that passed and failed the pass/fail test, as well as the total number of frames.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.20.8 :MASK:FAILed?

Syntax

:MASK:FAILed?

Description

Queries the total number of failed frames in the pass/fail test results.

Parameter

N/A

Remarks

N/A

Return Format

The query returns an integer.

Example

N/A

3.20.9 :MASK:PASSed?

Syntax

:MASK:PASSed?

Description

Queries the total number of passed frames in the pass/fail test results.

Parameter

N/A

Remarks

N/A

Return Format

The query returns an integer.

Example

N/A

3.20.10 :MASK:TOTal?

Syntax

:MASK:TOTal?

Description

Queries the total number of frames in the pass/fail test results.

Parameter

N/A

Remarks

N/A

Return Format

The query returns an integer.

Example

N/A

3.20.11 :MASK:OUTPut:ENABle**Syntax**

:MASK:OUTPut:ENABle <bool>

:MASK:OUTPut:ENABle?

Description

Sets or queries the output on/off status of the rear-panel **[AUX OUT]** connector.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {0 OFF}}	0 OFF

Remarks

- If enabled, in the Utility menu, "AUX Out" is automatically set to "PassFail". When a successful or failed event is detected, a pulse will be output from the **[AUX OUT]** connector.
- If disabled, in the Utility menu, "AUX Out" is automatically set to "TrigOut". The output of the **[AUX OUT]** connector is irrelevant with the pass/fail test.

Return Format

The query returns 0 or 1.

Example

```
:MASK:OUTPut:ENABle ON      /*Enables the Aux output.*/
:MASK:OUTPut:ENABle?        /*The query returns 1.*/
```

3.20.12 :MASK:OUTPut:EVENT**Syntax**

:MASK:OUTPut:EVENT <item>

:MASK:OUTPut:EVENT?

Description

Sets or queries the output event.

Parameter

Name	Type	Range	Default
<item>	Discrete	{FAIL PASS}	FAIL

Remarks

N/A

Return Format

The query returns FAIL or PASS.

Example

```
:MASK:OUTPut:EVENT PASS /*Sets the output event to PASS.*/  
:MASK:OUTPut:EVENT? /*The query returns PASS.*/
```

3.20.13 :MASK:OUTPut:TIME

Syntax

:MASK:OUTPut:TIME <time>

:MASK:OUTPut:TIME?

Description

Sets or queries the output pulse time.

Parameter

Name	Type	Range	Default
<time>	Real	100 ns to 10 ms	1 μ s

Remarks

N/A

Return Format

The query returns the pulse time in scientific notation.

Example

```
:MASK:OUTPut:TIME 0.000003 /*Sets the pulse time to 3  $\mu$ s.*/  
:MASK:OUTPut:TIME? /*The query returns 3.000000E-6.*/
```

3.20.14 :MASK:OUTPut:POLarity

Syntax

:MASK:OUTPut:POLarity <*polarity*>

:MASK:OUTPut:POLarity?

Description

Sets or queries the polarity of the output pulse.

Parameter

Name	Type	Range	Default
<polarity>	Discrete	{POSitive NEGative}	POSitive

Remarks

N/A

Return Format

The query returns POS or NEG.

Example

```
:MASK:OUTPut:POLarity NEGative /*Sets the polarity of the output
pulse to NEGative.*/
:MASK:OUTPut:POLarity? /*The query returns NEG.*/
```

3.21 :MATH<n> Commands

:MATH<n> commands are used to set various math operation function of the waveform between channels.

This series oscilloscopes can realize multiple math operations between waveforms of different channels, including arithmetic operation, function operation, FFT operation, logic operation, and digital filter.

Operator

Arithmetic Operation

The arithmetic operations supported by this oscilloscope include $A+B$, $A-B$, $A \times B$, and $A \div B$.

- **$A+B$** adds the waveform voltage values of signal source A and B point by point and displays the results.
- **$A-B$** subtracts the waveform voltage values of signal source B from that of source A point by point and displays the results.

- **$A \times B$** multiplies the waveform voltage values of signal source A and B point by point and displays the results.
- **$A \div B$** divides the waveform voltage values of signal source A by that of source B point by point and displays the results. It can be used to analyze the Multiple relation of the two channels waveforms. When the voltage of signal source B is 0 V, the division result is treated as 0.

Function Operation

The available function operation types of this oscilloscope include Intg, Diff, Sqrt, Lg (Base 10 Exponential), Ln, Exp, Abs, and $AX+B$.

- **Intg:** calculates the integral of the selected source. For example, you can use integral to measure the area under a waveform or the pulse energy.
- **Diff:** calculates the discrete time derivative of the selected source. For example, you can use differentiate to measure the instantaneous slope of a waveform.
- **Sqrt:** calculates the square roots of the selected source point by point and displays the results.
- **Lg (Base 10 Exponential):** calculates the base 10 exponential of the selected source point by point and displays the results.
- **Ln:** calculates the natural logarithm (Ln) of the selected source point by point and displays the results.
- **Exp:** calculates the exponential of the selected source point by point and displays the results.
- **Abs:** calculates the absolute value of the selected source and displays the results.
- **$AX+B$:** applies a linear function to the selected source, and displays the results.

FFT Operation

FFT (Fast Fourier Transform) is used to transform time-domain signals to frequency-domain components (frequency spectrum). This oscilloscope provides FFT operation function which enables you to observe the time-domain waveform and spectrum of the signal at the same time. FFT operation can facilitate the following works:

- Measure harmonic components and distortion in the system;
- Display the characteristics of the noise in DC power;

- Analyze vibration.

Table 3.294 Window Function

Window Function	Characteristics	Waveforms Applicable to the Window Function
Rectangular	Best frequency resolution Poorest amplitude resolution Similar to the situation when no window is applied	Transient or short pulse, the signal levels before and after the multiplication are basically the same Sine waveforms with the same amplitudes and rather similar frequencies Wide band random noise with relatively slow change of waveform spectrum
Blackman-Harris	Best amplitude resolution Poorest frequency resolution	Single frequency signal, searching for higher order harmonics
Hanning	Better frequency resolution and poorer amplitude resolution compared with Rectangular	Sine, periodic, and narrow band random noise
Hamming	A little bit better frequency resolution than Hanning	Transient or short pulse, the signal levels before and after the multiplication are rather different
Flattop	Measure the signals accurately	Measure the signal that has no accurate reference and requires an accurate measurement
Triangle	Better frequency resolution	Measure the narrow band signal and that has strong noise interference

Spectral leakage can be considerably minimized when a window function is used. The oscilloscope provides 6 FFT window functions which have different characteristics and are applicable to measure different waveforms, as shown in the table below. You need to select the window function according to the characteristics of the waveform to be measured.

Logic Operation

The logic operations supported by this oscilloscope include $A \& B$, $A || B$, $A \wedge B$, and $!A$. The results of logic operation of one binary bit are shown in the table below:

Table 3.295 Logic Operation Results

A	B	A&&B	A B	A^B	!A
0	0	0	0	0	1
0	1	0	1	1	1
1	0	0	1	1	0
1	1	1	1	0	0

Digital Filter

The digital filters supported by this oscilloscope include: low-pass filter, high-pass filter, band-pass filter, and band-stop filter.

- **LowPass** only allows the signals whose frequencies are lower than the current upper limit frequency to pass.
- **HighPass** only allows the signals whose frequencies are higher than the current lower limit frequency to pass.
- **BandPass** only allows the signals whose frequencies are higher than the current lower limit frequency and lower than the current upper limit frequency to pass.
- **BandStop** only allows the signals whose frequencies are lower than the current lower limit frequency or higher than the current upper limit frequency to pass.

3.21.1 :MATH<n>:DISPlay

Syntax

:MATH<n>:DISPlay <bool>

:MATH<n>:DISPlay?

Description

Enables or disables the math operation function; or queries the on/off status of the math operation function.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```

:MATH1:DISPlay ON      /*Enables the math operation of Math1.*/
:MATH1:DISPlay?        /*The query returns 1.*/

```

3.21.2 :MATH<n>:OPERator

Syntax

:MATH<n>:OPERator <opt>

:MATH<n>:OPERator?

Description

Sets or queries the operator of math operation.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<opt>	Discrete	{ADD SUBTract MULTiply DIVision AND OR XOR NOT FFT INTG DIFF SQRT LG LN EXP ABS LPASs HPASs BPASs BSTop AXB AXBY BTWT TREND}	ADD

Remarks

The math operation supported include A+B (ADD), A-B (SUBTract), A×B (MULTiply), A÷B (DIVision), AND, OR, XOR, NOT, FFT, INTG, DIFF, SQRT, LG (Base 10 Exponential), natural logarithm (LN), EXP, ABS, LPASs, HPASs, BPASs, BSTop, AXBY, BTWT, TREND, and AXB. For details, refer to *Operator*.

Return Format

The query returns ADD, SUBT, MULT, DIV, AND, OR, XOR, NOT, FFT, INTG, DIFF, SQRT, LG, LN, EXP, ABS, LPAS, HPAS, BPAS, AXBY, BTWT, TREND, BST, or AXB.

Example

```

:MATH1:OPERator INTG /*Sets the math operator of Math1 to INTG.*/
:MATH1:OPERator?     /*The query returns INTG.*/

```

3.21.3 :MATH<n>:SOURce1

Syntax

:MATH<n> :SOURce1 <source>

:MATH<n> :SOURce1?

Description

Sets or queries the source or Source A of arithmetic operation/function operation/filter operation.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<source>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4 REF1 REF2 REF3 REF4 REF5 REF6 REF7 REF8 REF9 REF10 MATH1 MATH2 MATH3}	CHANnel1

Remarks

- When n = 1, the range of the parameter is {CHANnel1|CHANnel2|CHANnel3|CHANnel4|REF1|REF2|REF3|REF4|REF5|REF6|REF7|REF8|REF9|REF10}.
- When n = 2, the range of the parameter is {CHANnel1|CHANnel2|CHANnel3|CHANnel4|REF1|REF2|REF3|REF4|REF5|REF6|REF7|REF8|REF9|REF10|MATH1}.
- When n = 3, the range of the parameter is {CHANnel1|CHANnel2|CHANnel3|CHANnel4|REF1|REF2|REF3|REF4|REF5|REF6|REF7|REF8|REF9|REF10|MATH1|MATH2}.
- When n = 4, the range of the parameter is {CHANnel1|CHANnel2|CHANnel3|CHANnel4|REF1|REF2|REF3|REF4|REF5|REF6|REF7|REF8|REF9|REF10|MATH1|MATH2|MATH3}.
- For arithmetic operation, this command is used to set Source A.
- For function operation and filter operation, only use this command to set the source.
- For detailed operations, refer to the descriptions in *Operator*.

Return Format

The query returns MATH1, MATH2, MATH3, CHAN1, CHAN2, CHAN3, CHAN4, REF1, REF2, REF3, REF4, REF5, REF6, REF7, REF8, REF9, or REF10.

Example

```
:MATH1:SOURce1 CHANnel3 /*Sets Source A of the arithmetic
operation to CHANnel3.*/
:MATH1:SOURce1? /*The query returns CHAN3.*/
```

3.21.4 :MATH<n>:SOURce2

Syntax

:MATH<n> :SOURce2 <source>

:MATH<n> :SOURce2?

Description

Sets or queries Source B of arithmetic operation.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<source>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4 REF1 REF2 REF3 REF4 REF5 REF6 REF7 REF8 REF9 REF10 MATH1 MATH2 MATH3}	CHANnel1

Remarks

This command is only available for arithmetic operation (containing two sources). For detailed operations, refer to the descriptions in *Operator*.

- When n = 1, the range of the parameter is {CHANnel1|CHANnel2|CHANnel3|CHANnel4|REF1|REF2|REF3|REF4|REF5|REF6|REF7|REF8|REF9|REF10}.
- When n = 2, the range of the parameter is {CHANnel1|CHANnel2|CHANnel3|CHANnel4|REF1|REF2|REF3|REF4|REF5|REF6|REF7|REF8|REF9|REF10|MATH1}.
- When n = 3, the range of the parameter is {CHANnel1|CHANnel2|CHANnel3|CHANnel4|REF1|REF2|REF3|REF4|REF5|REF6|REF7|REF8|REF9|REF10|MATH1|MATH2}.

- When $n = 4$, the range of the parameter is {CHANnel1|CHANnel2|CHANnel3|CHANnel4|REF1|REF2|REF3|REF4|REF5|REF6|REF7|REF8|REF9|REF10|MATH1|MATH2|MATH3}.

Return Format

The query returns MATH1, MATH2, MATH3, CHAN1, CHAN2, CHAN3, CHAN4, REF1, REF2, REF3, REF4, REF5, REF6, REF7, REF8, REF9, or REF10.

Example

```
:MATH1:SOURce2 CHANnel3 /*Sets Source B of the arithmetic
operation to CHANnel3.*/
:MATH1:SOURce2? /*The query returns CHAN3.*/
```

3.21.5 :MATH<n>:LSOURCE1

Syntax

:MATH<n>:LSOURCE1 <source>

:MATH<n>:LSOURCE1?

Description

Sets or queries Source A of the logic operation.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

The logic operations include $A \& B$, $A | B$, $A \wedge B$, and $\neg A$.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:MATH1:LSOURCE1 CHANnel3 /*Sets Source A of the logic operation
to CHANnel3.*/
:MATH1:LSOURCE1? /*The query returns CHAN3.*/
```

3.21.6 :MATH<n>:LSOource2

Syntax

:MATH<n>:LSOource2 <source>

:MATH<n>:LSOource2?

Description

Sets or queries Source B of the logic operation.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

- The logic operations include $A \& B$, $A || B$, $A \wedge B$, and $!A$.
- This command is only available for the logic operation that contains two sources.
It is used to set Source B.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:MATH1:LSOource2 CHANnel4 /*Sets Source B of the logic operation
to CHANnel4.*/
:MATH1:LSOource2? /*The query returns CHAN4.*/
```

3.21.7 :MATH<n>:SCALE

Syntax

:MATH<n>:SCALE <scale>

:MATH<n>:SCALE?

Description

Sets or queries the vertical scale of the operation results. The unit is related to the currently selected operator and the unit selected by the source.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<scale>	Real	Refer to <i>Remarks</i>	-

Remarks

- The setting range of the vertical scale is related to the currently selected operator and the scale of the source channel. For integration and differentiation operations, the actual range of <scale> is also related to the current horizontal time base.
- This command is invalid for logic operation and FFT operation.

Return Format

The query returns the vertical scale of the current operation results in scientific notation.

Example

```
:MATH1:SCALE 0.2 /*Sets the vertical scale to 200 mV.*/
:MATH1:SCALE? /*The query returns 2.000000E-1.*/
```

3.21.8 :MATH<n>:OFFSet

Syntax

:MATH<n>:OFFSet <offset>

:MATH<n>:OFFSet?

Description

Sets or queries the vertical offset of the operation results. The unit is related to the currently selected operator and the unit selected by the source.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<offset>	Real	-1 GV to +1 GV	0.00 V

Remarks

This command is invalid for logic operation and FFT operation.

Return Format

The query returns the vertical offset of the current operation results in scientific notation.

Example

```
:MATH1:OFFSet 8 /*Sets the vertical offset to 8 V.*/
:MATH1:OFFSet? /*The query returns 8.000000E0.*/
```

3.21.9 :MATH<n>:INVert**Syntax**

:MATH<n>:INVert <bool>

:MATH<n>:INVert?

Description

Enables or disables the inverted display of the operation results; or queries the on/off status of the inverted display of the operation results.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

This command is invalid for FFT operation and logical operation.

Return Format

The query returns 1 or 0.

Example

```
:MATH1:INVert ON /*Enables the inverted display.*/
:MATH1:INVert? /*The query returns 1.*/
```

3.21.10 :MATH<n>:GRID**Syntax**

:MATH<n>:GRID <grid>

:MATH<n>:GRID?

Description

Sets or queries the grid type of the math operation display.

Parameter

Name	Type	Range	Default
<grid>	Discrete	{FULL HALF NONE}	-

Remarks

- **FULL:** turns the background grid and coordinates on.
- **HALF:** turns the background grid off and turns the coordinate on.
- **NONE:** turns the background grid and coordinate off.

Return Format

The query returns FULL, HALF, or NONE.

Example

```
:MATH1:GRID NONE /*Turns the background grid and coordinates off.*/
:MATH1:GRID? /*The query returns NONE.*/
```

3.21.11 :MATH<n>:DISMode

Syntax

:MATH<n>:DISMode <bool>

:MATH<n>:DISMode?

Description

Sets or queries the display area of math operation function.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<bool>	Bool	{{1 ON}}{0 OFF}}	{0 OFF}

Remarks

0|OFF: The math operation waveform is displayed in the math operation window.

1|ON: The math operation waveform is displayed in the main waveform view.

Return Format

The query returns 1 or 0.

Example

```
:MATH1:DISMode 1 /*Sets the math operation waveform to be
displayed in the main waveform view.*/
:MATH1:DISMode? /*The query returns 1.*/
```

3.21.12 :MATH<n>:RESet**Syntax**

```
:MATH<n>:RESet
```

Description

After you send this command, the instrument will adjust the vertical scale of the operation results to an optimal value based on the currently selected operator and the horizontal time base of the source.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.21.13 :MATH<n>:EXPand**Syntax**

```
:MATH<n>:EXPand <exp>
```

```
:MATH<n>:EXPand?
```

Description

Sets or queries the vertical expansion type of math operation.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<exp>	Discrete	{GND CENTer}	GND

Remarks

- **CENTER**: when the vertical scale is changed, the waveform will be expanded or compressed around the screen center.
- **GND**: when the vertical scale is changed, the waveform will be expanded or compressed around the signal ground level position.

Return Format

The query returns GND or CENTER.

Example

```
:MATH1:EXPand CENTER /*Sets the vertical expansion type of math
operation of CH1 to CENTER.*/
:MATH1:EXPand? /*The query returns CENTER.*/
```

3.21.14 :MATH<n>:WAVetype

Syntax

:MATH<n>:WAVetype <type>

:MATH<n>:WAVetype?

Description

Sets or queries the waveform type of math operation.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<type>	Discrete	{MAIN ZOOM}	MAIN

Remarks

- **MAIN**: indicates the main time base region.
- **ZOOM**: indicates the zoomed time base region.

Only when the zoom function is enabled, can the Zoom waveform type be enabled. Zoom is not supported for the FFT operation.

Return Format

The query returns MAIN or ZOOM.

Example

```
:MATH1:WAVetype ZOOM /*Sets the waveform type of math operation to ZOOM.*/
:MATH1:WAVetype? /*The query returns ZOOM.*/
```

3.21.15 :MATH<n>:FFT:SOURce**Syntax**

```
:MATH<n>:FFT:SOURce <source>
```

```
:MATH<n>:FFT:SOURce?
```

Description

Sets or queries the channel source of FFT operation.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<source>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4 MATH1 MATH2 MATH3}	CHANnel1

Remarks

N/A

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4, MATH1, MATH2, or MATH3.

Example

```
:MATH1:FFT:SOURce CHANnel3 /*Sets the channel source of FFT operation to CHANnel3.*/
:MATH1:FFT:SOURce? /*The query returns CHAN3.*/
```

3.21.16 :MATH<n>:FFT:WINDow**Syntax**

```
:MATH<n>:FFT:WINDow <window>
```

```
:MATH<n>:FFT:WINDow?
```

Description

Sets or queries the window function of FFT operation.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<window>	Discrete	{RECTangle BLACKman HANNing HAMMing FLATtop TRlangle}	HANNing

Remarks

- Spectral leakage can be considerably minimized when a window function is used.
- Different window functions are applicable to measurements of different waveforms. You need to select the window function according to the different waveforms to be measured and their characteristics. For the characteristics of the window function and its applicable waveforms, refer to *Table 3.294 Window Function*.

Return Format

The query returns RECT, BLAC, HANN, HAMM, FLAT, or TRI.

Example

```
:MATH1:FFT:WINDow BLACKman /*Sets the window function of FFT
operation to Blackman-Harris.*/
:MATH1:FFT:WINDow? /*The query returns BLAC.*/
```

3.21.17 :MATH<n>:FFT:UNIT

Syntax

```
:MATH<n>:FFT:UNIT <unit>
```

```
:MATH<n>:FFT:UNIT?
```

Description

Sets or queries the vertical unit of FFT operation results.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<unit>	Discrete	{VRMS DB}	DB

Remarks

N/A

Return Format

The query returns VRMS or DB.

Example

```
:MATH1:FFT:UNIT VRMS      /*Sets the vertical unit of FFT operation
results to Vrms.*/
:MATH1:FFT:UNIT?          /*The query returns VRMS.*/
```

3.21.18 :MATH<n>:FFT:MODE

Syntax**:MATH<n>:FFT:MODE** <mode>**:MATH<n>:FFT:MODE?****Description**

Sets or queries the mode of FFT operation.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<mode>	Discrete	{NORMal AVERage MAXHold}	NORMal

Remarks**NORMal**: indicates Normal mode.**AVERage**: indicates Average mode.**MAXHold**: indicates Max Hold mode.**Return Format**

The query returns NORM, AVER, or MAXH.

Example

```
:MATH1:FFT:MODE NORMal    /*Sets the mode of FFT operation of Math1
to NORMal.*/
:MATH1:FFT:MODE?          /*The query returns NORM.*/
```

3.21.19 :MATH<n>:FFT:AVCNT

Syntax**:MATH<n>:FFT:AVCNT** <cnt>

:MATH< n>:FFT:AVCnT?

Description

Sets or queries the average count for FFT in Average mode.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<cnt>	Integer	2 to 1,000	10

Remarks

N/A

Return Format

The query returns an integer ranging from 2 to 1,000.

Example

```
:MATH1:FFT:AVCnT 1000 /*Sets the average count for FFT in Average
mode to 1,000.*/
:MATH1:FFT:AVCnT? /*The query returns 1000.*/
```

3.21.20 :MATH<n>:FFT:SCALE

Syntax

:MATH< n>:FFT:SCALE <scale>

:MATH< n>:FFT:SCALE?

Description

Sets or queries the vertical scale of FFT operation results.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<scale>	Real	Refer to <i>Remarks</i>	-

Remarks

- When the unit is dBm/dBV, the range of the parameter <scale> is from 1.0E-9 dB to 5.00 GdB. The default value is 20.0 dB.

- When the unit is set to V_{rms} , the range of the parameter <scale> is from 1.00 nV_{rms} to 5.00 GV_{rms}. The default value is 500.00μV_{rms}.

You can run the `:MATH<n>:FFT:UNIT` command to configure or query the current unit.

Return Format

The query returns the current vertical scale in scientific notation.

Example

```
:MATH1:FFT:SCALE 0.3 /*Sets the vertical scale of the FFT
operation results to 300 mdB.*/
:MATH1:FFT:SCALE? /*The query returns 3.000000E-1.*/
```

3.21.21 :MATH<n>:FFT:OFFSet

Syntax

`:MATH<n>:FFT:OFFSet <offset>`

`:MATH<n>:FFT:OFFSet?`

Description

Sets or queries the vertical offset of FFT operation results.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<offset>	Real	Refer to <i>Remarks</i>	0 dB

Remarks

- When the unit is set to dBm/dBV, the range of <offset> is from -1.00G dBV to 1.00 GdBV. The default value is 0.0 dBV.
- When the unit is set to V_{rms} , the range of <offset> is from -1.00 GV_{rms} to 1.00 GV_{rms}. The default value is 0.00 V_{rms}.

You can run the `:MATH<n>:FFT:UNIT` command to configure or query the current unit.

Return Format

The query returns the current vertical offset in scientific notation.

Example

```
:MATH1:FFT:OFFSet 0.3 /*Sets the vertical offset of the FFT
operation results to 300 mdB.*/
:MATH1:FFT:OFFSet? /*The query returns 3.000000E-1.*/
```

3.21.22 :MATH<n>:FFT:HSCale**Syntax**

```
:MATH<n>:FFT:HSCale <hsc>
```

```
:MATH<n>:FFT:HSCale?
```

Description

Sets or queries the frequency range of FFT operation results. The default unit is Hz.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<hsc>	Real	10 Hz to 10 GHz	1 MHz

Remarks

You can reduce the frequency range to observe the details of the spectrum.

Modifying the frequency range of the FFT operation results will affect the value of the center frequency. You can run the **:MATH<n>:FFT:HCENter** command to query or modify the center frequency.

Return Format

The query returns the current frequency range in scientific notation.

Example

```
:MATH1:FFT:HSCale 500000 /*Sets the frequency range of the FFT
operation results to 500 kHz.*/
:MATH1:FFT:HSCale? /*The query returns 5.000000E+5.*/
```

3.21.23 :MATH<n>:FFT:HCENter**Syntax**

```
:MATH<n>:FFT:HCENter <cent>
```

```
:MATH<n>:FFT:HCENter?
```

Description

Sets or queries the center frequency of FFT operation results, i.e. the frequency relative to the horizontal center of the screen.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<cent>	Real	5 Hz to 9.999999995 GHz	1 MHz

Remarks

Modifying the center frequency of the FFT operation results will affect the value of the frequency range. You can run the `:MATH<n>:FFT:HSCale` command to query or modify the frequency range.

Return Format

The query returns the current center frequency in scientific notation. The unit is Hz.

Example

```
:MATH1:FFT:HCEnter 10000000 /*Sets the center frequency of the
FFT operation results to 10 MHz.*/
:MATH1:FFT:HCEnter? /*The query returns 1.000000E+7.*/
```

3.21.24 :MATH<n>:FFT:FREQuency:START**Syntax**

`:MATH<n>:FFT:FREQuency:START <value>`

`:MATH<n>:FFT:FREQuency:START?`

Description

Sets or queries the start frequency of FFT operation results.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<value>	Real	0 Hz to (stop frequency -10 Hz)	1 Hz

Remarks

The range of the start frequency of FFT operation is related to the stop frequency. You can run the `:MATH<n>:FFT:FREQuency:END` command to query or configure the stop frequency.

Return Format

The query returns the start frequency of the operation results in scientific notation. The unit is Hz.

Example

```
:MATH1:FFT:FREQuency:START 10000000 /*Sets the start frequency of
the FFT operation results to 10 MHz.*/
:MATH1:FFT:FREQuency:START? /*The query returns 1.000000E
+7.*/
```

3.21.25 :MATH<n>:FFT:FREQuency:END**Syntax**

```
:MATH<n>:FFT:FREQuency:END <value>
```

```
:MATH<n>:FFT:FREQuency:END?
```

Description

Sets or queries the stop frequency of FFT operation results.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<value>	Real	(Start frequency +10 Hz) to 2 GHz	10 MHz

Remarks

The range of the stop frequency of FFT operation is related to the start frequency. You can run the `:MATH<n>:FFT:FREQuency:START` command to query or configure the start frequency.

Return Format

The query returns the stop frequency of the operation results in scientific notation. The unit is Hz.

Example

```
:MATH1:FFT:FREQuency:END 10000000 /*Sets the stop frequency of
the FFT operation results to 10 MHz.*/
:MATH1:FFT:FREQuency:END? /*The query returns 1.000000E
+7.*/
```

3.21.26 :MATH<n>:FFT:SEARCh:ENABLE**Syntax**

```
:MATH<n>:FFT:SEARCh:ENABle <bool>
```

```
:MATH<n>:FFT:SEARCh:ENABle?
```

Description

Enables or disables the FFT peak search; or queries the on/off status of the FFT peak search function.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:MATH1:FFT:SEARCh:ENABle ON      /*Enables the FFT peak search.*/
:MATH1:FFT:SEARCh:ENABle?        /*The query returns 1.*/
```

3.21.27 :MATH<n>:FFT:SEARCh:NUM

Syntax

```
:MATH<n>:FFT:SEARCh:NUM <num>
```

```
:MATH<n>:FFT:SEARCh:NUM?
```

Description

Sets or queries the maximum number of the FFT peak search.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<num>	Integer	1 to 15	5

Remarks

N/A

Return Format

The query returns an integer ranging from 1 to 15.

Example

```
:MATH1:FFT:SEARCh:NUM 10          /*Sets the maximum number of the
FFT peak search to 10.*/
:MATH1:FFT:SEARCh:NUM?           /*The query returns 10.*/
```

3.21.28 :MATH<n>:FFT:SEARCh:THReshold**Syntax**

```
:MATH<n>:FFT:SEARCh:THReshold <thres>
```

```
:MATH<n>:FFT:SEARCh:THReshold?
```

Description

Sets or queries the threshold of the FFT peak search.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<thres>	Real	Related to the vertical scale and vertical offset of FFT operation	-

Remarks

N/A

Return Format

The query returns the threshold in scientific notation.

Example

```
:MATH1:FFT:SEARCh:THReshold 0.5    /*Sets the threshold of the
FFT peak search to 500 mdB.*/
:MATH1:FFT:SEARCh:THReshold?        /*The query returns
5.000000E-1.*/
```

3.21.29 :MATH<n>:FFT:SEARCh:EXCursion**Syntax**

```
:MATH<n>:FFT:SEARCh:EXCursion <excursion>
```

```
:MATH<n>:FFT:SEARCh:EXCursion?
```

Description

Sets or queries the excursion of the FFT peak search.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<excur>	Real	0 to (8 x VerticalScale)	1.8 dB

Remarks

VerticalScale indicates the vertical scale of FFT.

Return Format

The query returns the excursion in scientific notation.

Example

```
:MATH1:FFT:SEARCh:EXCursion 0.5 /*Sets the excursion of the
FFT peak search to 500 mdB.*/
:MATH1:FFT:SEARCh:EXCursion? /*The query returns
5.000000E-1.*/
```

3.21.30 :MATH<n>:FFT:SEARCh:ORDER**Syntax**

:MATH<n>:FFT:SEARCh:ORDER <order>

:MATH<n>:FFT:SEARCh:ORDER?

Description

Sets or queries the sequence of the FFT peak search results.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<order>	Discrete	{AMPorder FREQorder}	AMPorder

Remarks

N/A

Return Format

The query returns AMP or FREQ.

Example

```
:MATH1:FFT:SEARCh:ORDER AMPorder /*Sets the sequence of the FFT
peak search results to AMPorder.*/
:MATH1:FFT:SEARCh:ORDER? /*The query returns AMP.*/
```

3.21.31 :MATH<n>:FFT:SEARCh:RES?

Syntax

:MATH<n>:FFT:SEARCh:RES?

Description

Queries the FFT peak search results table.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-

Remarks

N/A

Return Format

The query returns the peak search results table in strings.

Example

```
:MATH1:FFT:SEARCh:RES? /*The query returns the peak search
results table in strings.*/
1,2.50000MHz,-24.98dBV
2,3.50000MHz,-27.84dBV
3,4.50000MHz,-30.04dBV
4,5.50125MHz,-31.5dBV
5,6.50125MHz,-32.34dBV
```

3.21.32 :MATH<n>:FILTer:TYPE

Syntax

:MATH<n>:FILTer:TYPE <type>

:MATH<n>:FILTer:TYPE?

Description

Sets or queries the filter type.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<type>	Discrete	{LPASs HPASs BPASs BStop BTWT}	LPASs

Remarks

The oscilloscope provides 5 practical filters (Low Pass Filter, High Pass Filter, Band Pass Filter, Band Stop Filter, and Butterworth Filter), which can filter the specified frequencies in the signal by setting the bandwidth. You can use the `:MATH<n>:FFT:SOURce` command to set or query the channel source of the filter.

- **LPASs:** indicates low pass filter, which only allows the signals whose frequencies are smaller than the current cut-off frequency to pass.
- **HPASs:** indicates high pass filter, which only allows the signals whose frequencies are greater than the current cut-off frequency to pass.
- **BPASs:** indicates band pass filter, which only allows the signals whose frequencies are greater than the current cut-off frequency 1 and smaller than the current cut-off frequency 2 to pass.

Note: The cut-off frequency 1 must be smaller than the cut-off frequency 2.

- **BSTOp:** indicates band stop filter, which only allows the signals whose frequencies are smaller than the current cut-off frequency 1 or greater than the current cut-off frequency 2 to pass.

Note: The cut-off frequency 1 must be smaller than the cut-off frequency 2.

- **BTWT:** provides the amplitude response with the maximum flatness in the passband, which is used to smooth the signal and suppress the frequency components outside the passband.

Return Format

The query returns LPAS, HPAS, BTWT, BPAS, or BST.

Example

```
:MATH1:FILTer:TYPE LPASs      /*Sets the filter type to Low Pass
Filter.*/
:MATH1:FILTer:TYPE?           /*The query returns LPAS.*/
```

3.21.33 :MATH<n>:FILTer:W1

Syntax

```
:MATH<n>:FILTer:W1 <freq1>
```

```
:MATH<n>:FILTer:W1?
```


Description

Sets or queries the cut-off frequency of Low Pass Filter/High Pass Filter; or the cut-off frequency 1 of Band Pass Filter/Band Stop Filter. The default unit is Hz.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<freq1>	Real	Refer to <i>Remarks</i>	Refer to <i>Remarks</i>

Remarks

- When the filter type is set to LPASs (Low Pass Filter) or HPASs (High Pass Filter), you need to set one cut-off frequency.
At this time, the range of <freq1> is from (0.005 x screen sample rate) to (0.5 x screen sample rate). The screen sample rate is indicated at the top of the current math operation result window.
- When the filter type is set to BPASs (Band Pass Filter) or BStop (Band Stop Filter), you need to set two cut-off frequencies. The cut-off frequency 1 must be smaller than the cut-off frequency 2. Run this command to set the cut-off frequency 1; run the `:MATH<n>:FILTer:W2` command to set the cut-off frequency 2.
At this time, the range of <freq1> is from (0.005 x screen sample rate) to (0.495 x screen sample rate).
- The default value of the parameter <freq1> is related to the filter type.
 - When the filter type is set to LPASs (Low Pass Filter), BPASs (Band Pass Filter), or BStop (Band Stop Filter), the default value of <freq1> is (0.005 x screen sample rate).
 - When the filter type is set to HPASs (High Pass Filter), the default value of <freq1> is (0.1 x screen sample rate).
- To set or query the filter type, run the `:MATH<n>:FILTer:TYPE` command.

Return Format

The query returns the current cut-off frequency or cut-off frequency 1 in scientific notation.

Example

```
:MATH1:FILTer:W1 1000000 /*Sets the cut-off frequency of Low
Pass Filter to 1 MHz.*/
```

```
:MATH1:FILTer:W1? /*The query returns +1000000000000E
+06.*/
```

3.21.34 :MATH<n>:FILTer:W2

Syntax

```
:MATH<n>:FILTer:W2 <freq2>
```

```
:MATH<n>:FILTer:W2?
```

Description

Sets or queries the cut-off frequency 2 of Band Pass Filter/Band Stop Filter. The default unit is Hz.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<freq2>	Real	Refer to <i>Remarks</i>	0.1×screen sample rate

Remarks

When the filter type is set to BPASs (Band Pass Filter) or BStOp (Band Stop Filter), you need to set two cut-off frequencies. The cut-off frequency 2 must be greater than the cut-off frequency 1. Run the `:MATH<n>:FILTer:W1` command to set the cut-off frequency 1, and run this command to set the cut-off frequency 2.

At this time, the range of <freq2> is from (0.01 x screen sample rate) to (0.5 x screen sample rate). The screen sample rate is indicated at the top of the current math operation result window.

Return Format

The query returns the current cut-off frequency 2 in scientific notation.

Example

```
:MATH1:FILTer:W2 1500000 /*Sets the cut-off frequency 2 of
Band Pass Filter to 1.5 MHz.*/
:MATH1:FILTer:W2? /*The query returns 1.500000E+6.*/
```

3.21.35 :MATH<n>:FILTer:BTWT:TYPE

Syntax

```
:MATH<n>:FILTer:BTWT:TYPE <type>
```

```
:MATH<n>:FILTer:BTWT:TYPE?
```

Description

Sets or queries the type of the Butterworth filter.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<type>	Discrete	{LPASs HPASs BPASs BSTop}	LPASs

Remarks

The oscilloscope provides 4 practical filters (Low Pass Filter, High Pass Filter, Band Pass Filter, and Band Stop Filter), which can filter the specified frequencies in the signal by setting the bandwidth. You can use the `:MATH<n>:FFT:SOURce` command to set or query the channel source of the filter.

- **LPASs:** indicates low pass filter, which only allows the signals whose frequencies are smaller than the current cut-off frequency to pass.
- **HPASs:** indicates high pass filter, which only allows the signals whose frequencies are greater than the current cut-off frequency to pass.
- **BPASs:** indicates band pass filter, which only allows the signals whose frequencies are greater than the current cut-off frequency 1 and smaller than the current cut-off frequency 2 to pass.

Note: The cut-off frequency 1 must be smaller than the cut-off frequency 2.

- **BSTop:** indicates band stop filter, which only allows the signals whose frequencies are smaller than the current cut-off frequency 1 or greater than the current cut-off frequency 2 to pass.

Note: The cut-off frequency 1 must be smaller than the cut-off frequency 2.

Return Format

The query returns LPAS, HPAS, BPAS, or BST.

Example

```
:MATH1:FiLTer:BTWT:TYPE LPASs      /*Sets the type of the
Butterworth filter to LPASs.*/
:MATH1:FiLTer:BTWT:TYPE?           /*The query returns LPAS.*/
```

3.21.36 :MATH<n>:FILTer:BTWT:ORDer

Syntax

:MATH<n>:FILTer:BTWT:ORDer <value>

:MATH<n>:FILTer:BTWT:ORDer?

Description

Sets or queries the order of the Butterworth filter.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<value>	Integer	{4 8}	4

Remarks

N/A

Return Format

The query returns 4 or 8.

Example

```
:MATH1:FILTer:BTWT:ORDer 8      /*Sets the order of the Butterworth
filter to 8.*/
:MATH1:FILTer:BTWT:ORDer?      /*The query returns 8.*/
```

3.21.37 :MATH<n>:SENSitivity

Syntax

:MATH<n>:SENSitivity <sens>

:MATH<n>:SENSitivity?

Description

Sets or queries the sensitivity of the logic operation. The default unit is div.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<sens>	Real	100 mdiv to 1 div	300 mdiv

Remarks

N/A

Return Format

The query returns the sensitivity of the logic operation in scientific notation.

Example

```
:MATH1:SENSitivity 0.2      /*Sets the sensitivity of the logic
operation to 0.2 div.*/
:MATH1:SENSitivity?         /*The query returns 2.000000E-1.*/
```

3.21.38 :MATH<n>:DISTance

Syntax

:MATH<n>:DISTance <dist>

:MATH<n>:DISTance?

Description

Sets or queries the smoothing window width of differential operation.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<dist>	Integer	5 to 10000	5

Remarks

N/A

Return Format

The query returns an integer ranging from 5 to 10000.

Example

```
:MATH1:DISTance 20      /*Sets the smoothing window width of
differential operation to 20.*/
:MATH1:DISTance?        /*The query returns 20.*/
```

3.21.39 :MATH<n>:THReshold1

Syntax

:MATH<n>:THReshold1 <thre>

:MATH<n>:THReshold1?

Description

Sets or queries threshold level of Analog Channel 1 in the logic operation. The default unit is V.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<thre>	Real	(-4 × VerticalScale - VerticalOffset) to (4 × VerticalScale - VerticalOffset)	0 V

Remarks

- This command is only available for the logic operations A&&B, A||B, A^B, and !A.
- VerticalScale indicates the vertical scale of Analog Channel 1. VerticalOffset indicates the vertical offset of Analog Channel 1. The step value is VerticalScale/10.

Return Format

The query returns the threshold level of of Analog Channel 1 in scientific notation.

Example

```
:MATH1:THReshold1 0.8 /*Sets the threshold level of Analog
Channel 1 in logic operation to 800 mV.*/
:MATH1:THReshold1? /*The query returns 8.000000E-1.*/
```

3.21.40 :MATH<n>:THReshold2**Syntax**

:MATH<n>:THReshold2 <thre>

:MATH<n>:THReshold2?

Description

Sets or queries threshold level of Analog Channel 2 in the logic operation. The default unit is V.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-

Name	Type	Range	Default
<thre>	Real	(-4 × VerticalScale - VerticalOffset) to (4 × VerticalScale - VerticalOffset)	0 V

Remarks

- This command is only available for the logic operations A&&B, A||B, A^B, and !A.
- VerticalScale indicates the vertical scale of Analog Channel 2. VerticalOffset indicates the vertical offset of Analog Channel 2. The step value is VerticalScale/10.

Return Format

The query returns the threshold level of of Analog Channel 2 in scientific notation.

Example

```
:MATH1:THReshold2 0.8 /*Sets the threshold level of Analog
Channel 2 in logic operation to 800 mV.*/
:MATH1:THReshold2? /*The query returns 8.000000E-1.*/
```

3.21.41 :MATH<n>:THReshold3

Syntax

:MATH<n>:THReshold3 <thre>

:MATH<n>:THReshold3?

Description

Sets or queries threshold level of Analog Channel 3 in the logic operation. The default unit is V.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<thre>	Real	(-4 × VerticalScale - VerticalOffset) to (4 × VerticalScale - VerticalOffset)	0 V

Remarks

- This command is only available for the logic operations A&&B, A||B, A^B, and !A.

- VerticalScale indicates the vertical scale of Analog Channel 3. VerticalOffset indicates the vertical offset of Analog Channel 3. The step value is VerticalScale/10.

Return Format

The query returns the threshold level of of Analog Channel 3 in scientific notation.

Example

```
:MATH1:THReshold3 0.8 /*Sets the threshold level of Analog
Channel 3 in logic operation to 800 mV.*/
:MATH1:THReshold3? /*The query returns 8.000000E-1.*/
```

3.21.42 :MATH<n>:THReshold4

Syntax

:MATH<n>:THReshold4 <thre>

:MATH<n>:THReshold4?

Description

Sets or queries threshold level of Analog Channel 4 in the logic operation. The default unit is V.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<thre>	Real	(-4 × VerticalScale - VerticalOffset) to (4 × VerticalScale - VerticalOffset)	0 V

Remarks

- This command is only available for the logic operations A&&B, A||B, A^B, and !A.
- VerticalScale indicates the vertical scale of Analog Channel 4. VerticalOffset indicates the vertical offset of Analog Channel 4. The step value is VerticalScale/10.

Return Format

The query returns the threshold level of of Analog Channel 4 in scientific notation.

Example

```
:MATH1:THReshold4 0.8 /*Sets the threshold level of Analog
Channel 4 in logic operation to 800 mV.*/*
:MATH1:THReshold4? /*The query returns 8.000000E-1.*/*
```

3.21.43 :MATH<n>:WINDow:TITLe?**Syntax**

```
:MATH<n>:WINDow:TITLe?
```

Description

Queries the title of the specified math operation window.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-

Remarks

N/A

Return Format

The query returns the title of the specified math operation window in strings.

Example

```
:MATH1:WINDow:TITLe? /*The query returns Math1 CH1*CH1 Scale:0U
Sa:2GSa/s.*/*
```

3.21.44 :MATH<n>:LABel:SHOW**Syntax**

```
:MATH<n>:LABel:SHOW <bool>
```

```
:MATH<n>:LABel:SHOW?
```

Description

Sets or queries whether to display the waveform label of the specified operation.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2 3 4}	-
<bool>	Bool	{{1 ON}}{0 OFF}}	-

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:MATH1:LABel:SHOW ON /*Enables the display of the label.*/
:MATH1:LABel:SHOW? /*The query returns 1.*/
```

 
3.22 :MEASure Commands

:MEASure commands are used to set and query the parameters related to measurements.

This oscilloscope allows you to set the measurement source, enable or disable the all measurement function, the statistical function, and etc.

Measurement Parameters**TIP**


If there is no signal input for the current source or the measurement result is not within the valid range (too large or too small), then the measurement results are invalid.

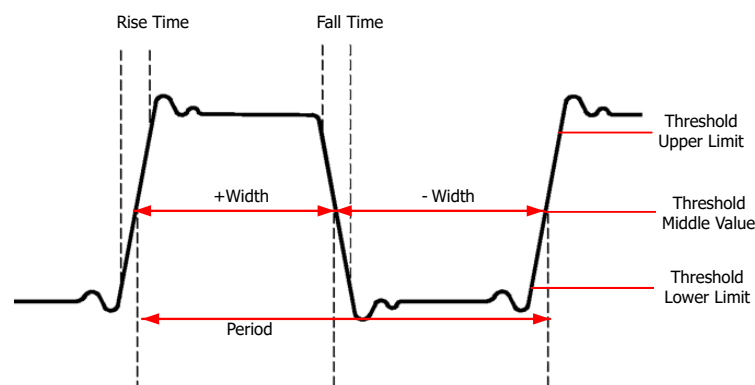Horizontal Parameters

- **Period (PERiod):** defined as the time between the middle threshold points of two consecutive, like-polarity edges.
- **Frequency (FREQuency):** defined as the reciprocal of period.
- **Rise Time (RTIME):** indicates the time for the signal amplitude to rise from the threshold lower limit to the threshold upper limit.

- **Fall Time (FTIME):** indicates the time for the signal amplitude to drop from the threshold upper limit to the threshold lower limit.
- **+Width (PWIDTH):** indicates the time between the threshold middle value of a rising edge to the threshold middle value of the next falling edge.
- **-Width (NWIDTH):** indicates the time between the threshold middle value of a falling edge to the threshold middle value of the next rising edge.
- **+Duty (PDUTy):** indicates the ratio of the positive pulse width to the period.
- **-Duty (NDUTy):** indicates the ratio of the negative pulse width to the period.
- **Tvmax (TVMAX):** indicates the time that corresponds to the maximum value of the waveform (Vmax).
- **Tvmin (TVMIN):** indicates the time that corresponds to the minimum value of the waveform (Vmin).

 Delay and Phase Parameters

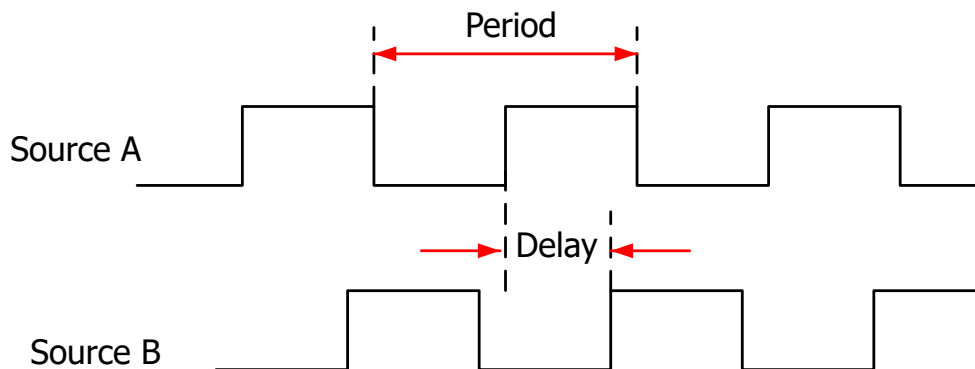


- **Delay(r-r) (RRDelay):** indicates the time difference between the threshold middle values of the rising edge of Source A and that of Source B. Negative delay indicates that the rising edge of Source A occurred after that of Source B.
- **Delay(f-f) (FFDelay):** indicates the time difference between the threshold middle values of the falling edge of Source A and that of Source B. Negative delay indicates that the falling edge of Source A occurred after that of Source B.
- **Delay(r-f) (RFDelay):** indicates the time difference between the threshold middle values of the rising edge of Source A and the falling edge of Source B.

Negative delay indicates that the rising edge of Source A occurred after the falling edge of Source B.


- **Delay(f-r) (FRDelay):** indicates the time difference between the threshold middle values of the falling edge of Source A and the rising edge of Source B. Negative delay indicates that the falling edge of Source A occurred after the rising edge of Source B.
- **Phase(r-r) (RRPHase):** indicates the phase deviation between the threshold middle values of the rising edge of Source A and that of Source B.
- **Phase(f-f) (FFPHase):** indicates the phase deviation between the threshold middle values of the falling edge of Source A and that of Source B.
- **Phase(r-f) (RFPHase):** indicates the phase deviation between the threshold middle values of the rising edge of Source A and the falling edge of Source B.
- **Phase(f-r) (FRPHase):** indicates the phase deviation between the threshold middle values of the falling edge of Source A and the rising edge of Source B.

Count Values

 
- **Positive Pulse Count (PPULses):** It is specified as the number of positive pulses that rise from under the threshold lower limit to above the threshold upper limit.

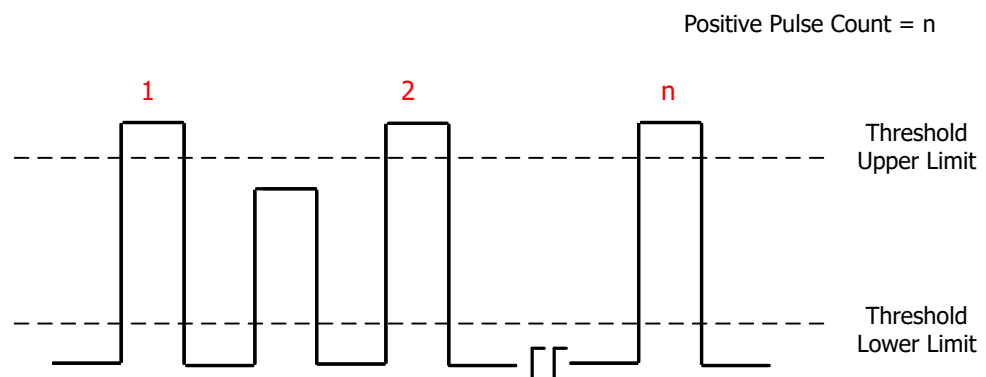

 
- **Negative Pulse Count (NPULses):** It is specified as the number of negative pulses that fall from above the threshold upper limit to below the threshold lower limit.

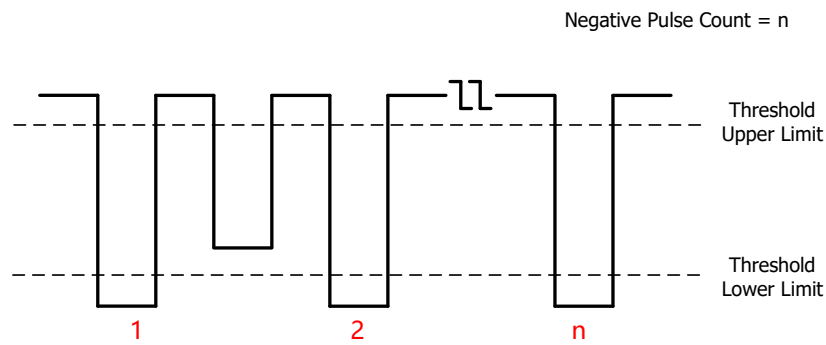

 
- **Rising Edge Count (PEDGes):** It is specified as the number of rising edges that rise from under the threshold lower limit to above the threshold upper limit.

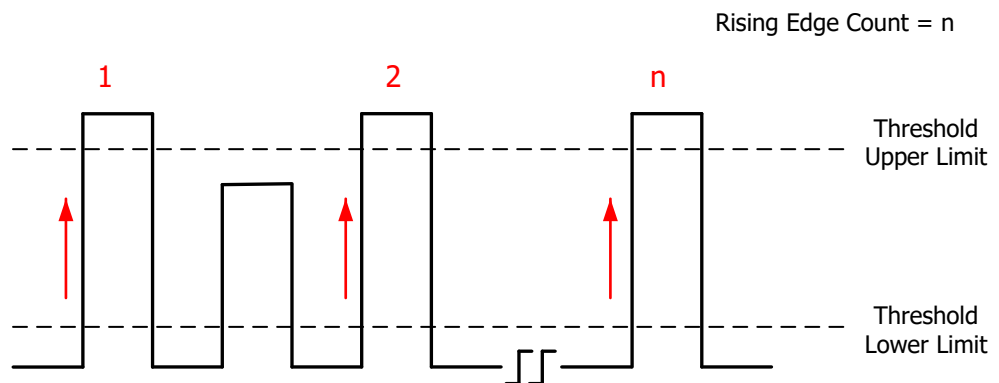

 - **Falling Edge Count (NEDGes):** It is specified as the number of falling edges that fall from above the threshold upper limit to below the threshold lower limit.

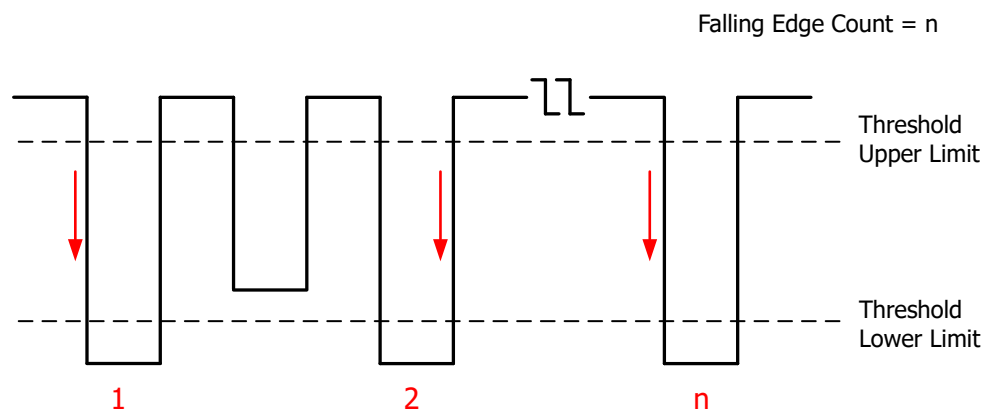

Voltage Parameters

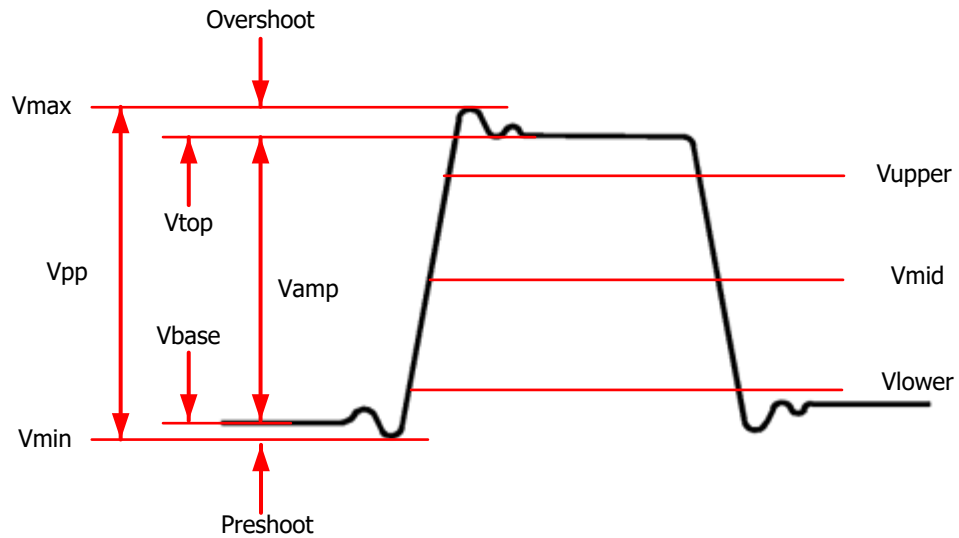 

- **Vmax (VMAX)**: indicates the voltage value from the highest point of the waveform to the GND.
- **Vmin (VMIN)**: indicates the voltage value from the lowest point of the waveform to the GND.
- **Vpp (VPP)**: indicates the voltage value from the highest point to the lowest point of the waveform.
- **Vtop (VTOP)**: indicates the voltage value from the flat top of the waveform to the GND.
- **Vbase (VBASe)**: indicates the voltage value from the flat base of the waveform to the GND.
- **Vamp (VAMP)**: indicates the voltage value from the top of the waveform to the base of the waveform.
- **Vupper (VUPPer)**: indicates the actual voltage value that corresponds to the threshold maximum value.
- **Vmid (VMID)** indicates the actual voltage value that corresponds to the threshold middle value.
- **Vlower (VLOWer)**: indicates the actual voltage value that corresponds to the threshold minimum value.

- **Vavg (VAVG):** indicates the arithmetic average value on the whole waveform or in the gating area.
- **VRMS (VRMS):** indicates the root mean square value on the whole waveform or in the gating area.
- **Per.VRMS (PVRMs):** indicates the root mean square value within a period.
- **Overshoot (OVERshoot):** indicates the ratio of the difference between the maximum value and the top value of the waveform to the amplitude value.
- **Preshoot (PREShoot):** indicates the ratio of the difference between the minimum value and the base value of the waveform to the amplitude value.
- **AC RMS (ACRMs):** indicates the root-mean-square value of the waveforms, with the DC component removed.

Other Parameters

- **Positive Slew Rate (PSLewrate):** On the rising edge, first calculate the difference between the high value and the low value, then use the difference to divide the corresponding time value to obtain the positive slew rate.
- **Negative Slew Rate (NSLewrate):** On the falling edge, first calculate the difference between the low value and the high value, then use the difference to divide the corresponding time value to obtain the negative slew rate.
- **Area (MARea):** indicates the area of the whole waveform within the screen. The unit is V*s. The area of the waveform above the zero reference (namely the vertical offset) is positive, and the area of the waveform below the zero reference is negative. The area measured is the algebraic sum of the area of the whole waveform within the screen.
- **Period Area (MPAREa):** indicates the area of the first period of waveform on the screen. The unit is V*s. The area of the waveform above the zero reference (namely the vertical offset) is positive, and the area of the waveform below the zero reference is negative. The area measured is the algebraic sum of the whole period area.

Measurement Results

This oscilloscope can make a statistics and display the measurement results.

- **MAXimum:** the maximum value.
- **MINimum:** the minimum value.
- **CURRent:** the current value.
- **AVERages:** the average value.
- **DEVIation:** the standard deviation.
- **CNT:** the count value.

3.22.1 :MEASure:SOURce

Syntax

```
:MEASure:SOURce <source>
```

```
:MEASure:SOURce?
```

Description

Sets or queries the channel source of the current measurement parameter.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4 MATH1 MATH2 MATH3 MATH4}	CHANnel1

Remarks

This command has the same function as the *:MEASure:SETup:DSA* and *:MEASure:SETup:PSA* commands.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, CHAN4, MATH1, MATH2, MATH3, or MATH4.

Example

```
:MEASure:SOURce CHANnel2 /*Sets the channel source of the
measurement parameter to CHANnel2.*/
:MEASure:SOURce? /*The query returns CHAN2.*/
```


3.22.2 :MEASure:ITEM

Syntax

:MEASure:ITEM <item>[, <src>[, <src>]]

:MEASure:ITEM? <item>[, <src>[, <src>]]

Description

Measures any waveform parameter of the specified source, or queries the statistical results of any waveform parameter of the specified source.

Parameter

Name	Type	Range	Default
<item>	Discrete	{VMAX VMIN VPP VTOP VBase VAMP VAVG VRMS OVERshoot PREShoot MARea MPARea PERiod FREQuency RTIME FTIME PWIDTH NWIDTH PDUTy NDUTy TVMAX TVMIN PSLewrate NSLewrate VUPPer VMID VLOWer PVRMs PPULses NPULses PEDGes NEDGes RRDelay RFDelay FRDelay FFDelay RRPHase RFPHase FRPHase FFPHase ACRMs}	-
<src>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4 MATH1 MATH2 MATH3 MATH4}	-

Remarks

- For the detailed measurement item parameter <item>, refer to *Measurement Parameters*.
- The parameter [, <src>[, <src>]] is used to set the source of the parameter under measurement.
 - If the measurement parameter is a single source, you only need to set one source. If this parameter is omitted, then the source is, by default, the one

that you've selected in the last sent command

(*:MEASure:SOURce*, *:MEASure:SETup:PSA*, or *:MEASure:SETup:DSA*).

- If the measurement parameter is a dual channel source, observe the following rules to determine the source that you've selected. That is, if the parameter <src> is omitted, the first source is, by default, the one that you've selected in the last sent command

(*:MEASure:SOURce*, *:MEASure:SETup:PSA*, or *:MEASure:SETup:DSA*); the

second source is, by default, the one that you've selected in the last sent command (*:MEASure:SETup:PSB* or *:MEASure:SETup:DSB*).

Return Format

The query returns the current measurement value in scientific notation.

Example

```
:MEASure:ITEM OVERshoot,CHANnel2 /*Measures the overshoot value of
Channel 2.*/
:MEASure:ITEM? OVERshoot,CHANnel2 /*The query returns 8.888889E-3.*/
```

3.22.3 :MEASure:CLEAr

Syntax

:MEASure:CLEAr

Description

Clears all the enabled measurement items.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.22.4 :MEASure:DElete

Syntax

:MEASure:DElete

Description

Clears all the enabled measurement items.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.22.5 :MEASure:AMSource

Syntax

:MEASure:AMSource <chan>

:MEASure:AMSource?

Description

Sets the source and displays all measurement values of the set source; or queries the channel source(s) of the all measurement function.

Parameter

Name	Type	Range	Default
<chan>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4 OFF}	OFF

Remarks

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4, or OFF.

Example

```
:MEASure:AMSource CHANnel1    /*Sets the source to CHANnel1.*/
:MEASure:AMSource?            /*The query returns CHAN1.*/
```

3.22.6 :MEASure:STATistic:COUNT

Syntax

`:MEASure:STATistic:COUNT <val>`

`:MEASure:STATistic:COUNT?`

Description

Sets or queries the statistics count.

Parameter

Name	Type	Range	Default
<val>	Integer	2 to 100,000	1,000

Remarks

N/A

Return Format

The query returns an integer ranging from 2 to 100,000.

Example

```
:MEASure:STATistic:COUNT 1000 /*Sets the statistics count to 1,000.*/  
:MEASure:STATistic:COUNT? /*The query returns 1000.*/
```

3.22.7 :MEASure:STATistic:DISPlay

Syntax

`:MEASure:STATistic:DISPlay <bool>`

`:MEASure:STATistic:DISPlay?`

Description

Enables or disables the statistical function; or queries the status of the statistical function.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{{0 OFF}}	0 OFF

Remarks

When the statistical function is enabled, the instrument makes statistics of the measurement results for at most 10 measurement items that are turned on last time and displays the statistical results.

Return Format

The query returns 1 or 0.

Example

```
:MEASure:STATistic:DISPlay ON      /*Enables the statistical
function.*/
:MEASure:STATistic:DISPlay?        /*The query returns 1.*/
```

3.22.8 :MEASure:STATistic:RESet

Syntax

```
:MEASure:STATistic:RESet
```

Description

Clears the history statistics data and makes statistics again.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.22.9 :MEASure:STATistic:ITEM

Syntax

```
:MEASure:STATistic:ITEM <item>[,<src>[,<src>]]
```

```
:MEASure:STATistic:ITEM? <type>,<item>[,<src>[,<src>]]
```

Description

Enables the statistical function of any waveform parameter of the specified source, or queries the statistical results of any waveform parameter of the specified source.

Parameter

Name	Type	Range	Default
<item>	Discrete	{VMAX VMIN VPP VTOP VBASE VAMP VAVG VRMS OVERshoot PREShoot MARea MPARea	-

Name	Type	Range	Default
		PERiod FREQuency RTIME FTIME PWIDTH NWIDTH PDUTy NDUTy TVMAX TVMIN PSLewrate NSLewrate VUPPer VMID VLOWer PVRMs PPULses NPULses PEDGes NEDGes RRDelay RFDelay FRDelay FFDelay RRPHase RFPHase FRPHase FFPHase ACRMs}	
<src>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4 MATH1 MATH2 MATH3 MATH4}	-
<type>	Discrete	{MAXimum MINimum CURRent AVERages DEVIation CNT}	-

Remarks

- For the detailed measurement item parameter <item>, refer to *Measurement Parameters*.
- The parameter [, <src> [, <src>]] is used to set the source of the parameter under measurement.
 - If the measurement parameter is a single source, you only need to set one source. If this parameter is omitted, then the source is, by default, the one that you've selected in the last sent command
(*:MEASure:SOURce*, *:MEASure:SETup:PSA*, or *:MEASure:SETup:DSA*).
 - If the measurement parameter is a dual channel source, observe the following rules to determine the source that you've selected. That is, if the parameter <src> is omitted, the first source is, by default, the one that you've selected in the last sent command
(*:MEASure:SOURce*, *:MEASure:SETup:PSA*, or *:MEASure:SETup:DSA*); the second source is, by default, the one that you've selected in the last sent command (*:MEASure:SETup:PSB* or *:MEASure:SETup:DSB*).

- For the results of <type>, refer to *Measurement Parameters*.

Return Format

The query returns the statistical results in scientific notation.

Example

```
:MEASure:STATistic:ITEM VPP,CHANnel2 /*Enables the statistical
function of the peak-peak value of CH2.*/
:MEASure:STATistic:ITEM? MAXimum,VPP /*Queries the maximum value.
The query returns 9.120000E-1.*/
```

3.22.10 :MEASure:SETup:MAX

Syntax

:MEASure:SETup:MAX <value>

:MEASure:SETup:MAX?

Description

Sets or queries the threshold level upper limit of the analog channel in auto measurement.

Parameter

Name	Type	Range	Default
<value>	Integer	Refer to <i>Remarks</i>	-

Remarks

The range of the upper limit of the threshold level is related to the current threshold level middle value. You can run the :MEASure:SETup:MID command to set or query the middle value of the threshold level of the analog channel in auto measurement.

- When the threshold type is percentage, its range is from (threshold middle value + 1%) to 100%.
- When the threshold type is absolute, its range changes with the probe ratio. Its max. range is from -5 MV to 5 MV; and its min. range is from -20 V to 20 V.
- When the set upper limit is smaller than the current threshold middle value, a message "Set at lower limit" will be displayed, and the threshold middle value will not be modified automatically.

Return Format

The query returns an integer. When the threshold type is absolute, the default unit of the returned value is V.

Example

```
:MEASure:SETup:MAX 95      /*Sets the upper limit of the threshold
level to 95%.*/
:MEASure:SETup:MAX?        /*The query returns 95.*/
```

3.22.11 :MEASure:SETup:MID**Syntax**

:MEASure:SETup:MID <value>

:MEASure:SETup:MID?

Description

Sets or queries the threshold level middle value of the analog channel in auto measurement.

Parameter

Name	Type	Range	Default
<value>	Integer	Refer to <i>Remarks</i>	-

Remarks

The set middle value must be smaller than the currently set upper limit and greater than the currently set lower limit.

You can send the *:MEASure:SETup:MAX* and *:MEASure:SETup:MIN* commands to set or query the threshold level upper limit and lower limit of the current analog channel in auto measurement.

Return Format

The query returns an integer. When the threshold type is absolute, the default unit of the returned value is V.

Example

```
:MEASure:SETup:MID 89      /*Sets the middle value of the threshold
level to 89%.*/
:MEASure:SETup:MID?        /*The query returns 89.*/
```

3.22.12 :MEASure:SETup:MIN**Syntax**

:MEASure:SETup:MIN <value>

:MEASure:SETup:MIN?

Description

Sets or queries the threshold level lower limit of the analog channel in auto measurement.

Parameter

Name	Type	Range	Default
<value>	Integer	Refer to <i>Remarks</i>	-

Remarks

The range of the threshold level lower limit is related to the current threshold middle value. You can send the *:MEASure:SETup:MID* command to set or query the threshold middle value of the current analog channel in auto measurement.

- When the threshold type is percentage, its range is from 0% to (threshold middle value - 1%).
- When the threshold type is absolute, its range changes with the probe ratio. Its max. range is from -5 MV to 5 MV; and its min. range is from -20 V to 20 V.
- When the set lower limit is greater than the current threshold middle value, a message "Set at upper limit" will be displayed, and the threshold middle value will not be modified automatically.

Return Format

The query returns an integer. When the threshold type is absolute, the default unit of the returned value is V.

Example

```
:MEASure:SETup:MIN 53      /*Sets the lower limit of the threshold
level to 53%.*/
:MEASure:SETup:MIN?        /*The query returns 53.*/
```

3.22.13 :MEASure:SETup:PSA

Syntax

:MEASure:SETup:PSA <source>

:MEASure:SETup:PSA?

Description

Sets or queries Source A in the phase or delay measurement.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4 MATH1 MATH2 MATH3 MATH4}	CHANnel1

Remarks

This command has the same function as the *:MEASure:SOURce* and *:MEASure:SETup:DSA* commands.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, CHAN4, MATH1, MATH2, MATH3, or MATH4.

Example

```
:MEASure:SETup:PSA CHANnel1 /*Sets Source A of the phase
measurement to CHANnel1.*/
:MEASure:SETup:PSA? /*The query returns CHAN1.*/
```

3.22.14 :MEASure:SETup:PSB

Syntax

:MEASure:SETup:PSB <source>

:MEASure:SETup:PSB?

Description

Sets or queries Source B in the phase or delay measurement.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4 MATH1 MATH2 MATH3 MATH4}	CHANnel1

Remarks

This command has the same function as the *:MEASure:SETup:DSB* command.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, CHAN4, MATH1, MATH2, MATH3, or MATH4.

Example

```
:MEASure:SETup:PSB CHANnel2      /*Sets Source B of the phase
measurement to CHANnel2.*/
:MEASure:SETup:PSB?              /*The query returns CHAN2.*/
```

3.22.15 :MEASure:SETup:DSA

Syntax

:MEASure:SETup:DSA <source>

:MEASure:SETup:DSA?

Description

Sets or queries Source A in the phase or delay measurement.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4 MATH1 MATH2 MATH3 MATH4}	CHANnel1

Remarks

This command has the same function as the *:MEASure:SOURce* and *:MEASure:SETup:PSA* commands.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, CHAN4, MATH1, MATH2, MATH3, or MATH4.

Example

```
:MEASure:SETup:DSA CHANnel1      /*Sets Source A of the delay
measurement to CHANnel1.*/
:MEASure:SETup:DSA?              /*The query returns CHAN1.*/
```

3.22.16 :MEASure:SETup:DSB

Syntax

:MEASure:SETup:DSB <source>

:MEASure:SETup:DSB?

Description

Sets or queries Source B in the phase or delay measurement.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4 MATH1 MATH2 MATH3 MATH4}	CHANnel1

Remarks

This command has the same function as the *:MEASure:SETup:PSB* command.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, CHAN4, MATH1, MATH2, MATH3, or MATH4.

Example

```
:MEASure:SETup:DSB CHANnel2      /*Sets Source B of the delay
measurement to CHANnel2.*/
:MEASure:SETup:DSB?              /*The query returns CHAN2.*/
```

3.22.17 :MEASure:THReshold:SOURce

Syntax

:MEASure:THReshold:SOURce <source>

:MEASure:THReshold:SOURce?

Description

Sets or queries the threshold source.

Parameter

Name	Type	Range	Default
<source>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4 MATH1 MATH2 MATH3 MATH4}	CHANnel1

Remarks

Modifying the threshold will affect the measurement results of time, delay and phase parameters.

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4, MATH1, MATH2, MATH3, or MATH4.

Example

```
:MEASure:THReshold:SOURce CHANnel2 /*Sets the threshold source
to CHANnel2.*/
:MEASure:THReshold:SOURce? /*The query returns CHAN2.*/
```

3.22.18 :MEASure:THReshold:TYPE

Syntax

:MEASure:THReshold:TYPE <type>

:MEASure:THReshold:TYPE?

Description

Sets or queries the measurement threshold type.

Parameter

Name	Type	Range	Default
<type>	Discrete	{PERCent ABSolute}	PERCent

Remarks

N/A

Return Format

The query returns PERC or ABS.

Example

```
:MEASure:THReshold:TYPE ABSolute /*Sets the threshold type to
ABSolute.*/
:MEASure:THReshold:TYPE? /*The query returns ABS.*/
```

3.22.19 :MEASure:THReshold:DEFault

Syntax

:MEASure:THReshold:DEFault

Description

Sets the threshold level of the analog channel in auto measurement to a default value.

Parameter

N/A

Remarks

For the default threshold level in absolute, its upper limit and lower limit are + (vertical scale x 3) and -(vertical scale x 3), respectively.

Return Format

N/A

Example

N/A

3.22.20 :MEASure:AREA

Syntax

```
:MEASure:AREA <area>
```

```
:MEASure:AREA?
```

Description

Sets or queries the type of the measurement range.

Parameter

Name	Type	Range	Default
<area>	Discrete	{MAIN ZOOM CURSor}	MAIN

Remarks

- **MAIN:** indicates that the measurement range is within the main time base region.
- **ZOOM:** indicates that the measurement range is within the zoomed time base region. Note that only when you enable the delayed sweep function first, can "Zoom" be enabled.
- **CURSor:** when you select it, two cursors will be displayed on the screen.

Return Format

The query returns MAIN, ZOOM, or CURS.

Example

```
:MEASure:AREA ZOOM           /*Sets the type of the measurement
range to ZOOM.*/
:MEASure:AREA?                /*The query returns ZOOM.*/
```

3.22.21 :MEASure:TYPE

Syntax

:MEASure:TYPE <type>

:MEASure:TYPE?

Description

Sets or queries the measurement type.

Parameter

Name	Type	Range	Default
<type>	Discrete	{THReshold RANGe AMPMethod}	THReshold

Remarks

- **THReshold:** sets the measurement type to Threshold.
- **RANGe:** sets the measurement type to Range.
- **AMPMethod:** sets the measurement type to Amplitude Method.

Return Format

The query returns THR, RANG, or AMPM.

Example

```
:MEASure:TYPE RANGe          /*Sets the measurement type to
RANGe.*/*
:MEASure:TYPE?                /*The query returns RANG.*/*
```

3.22.22 :MEASure:CREGion:CBX

Syntax

:MEASure:CREGion:CBX <cbx>

:MEASure:CREGion:CBX?

Description

Sets or queries the horizontal position of Cursor B when the measurement range is the "cursor region".The default unit s.

Parameter

Name	Type	Range	Default
<cbx>	Real	Refer to <i>Remarks</i>	6 μs

Remarks

- Its range is related to the current horizontal scale and position of the instrument.
- After the setting command is sent, the value in the field of CursorB in the user interface is set. The default unit is s.
- You can run the `:MEASure:AREA` command to set the measurement range to "cursor region".

Return Format

The query returns the horizontal position of Cursor B in scientific notation. The unit is s.

Example

```
:MEASure:CREGion:CBX 0.000005 /*Sets the position of Cursor B to 5
µs.*/
:MEASure:CREGion:CBX /*The query returns 5.000000E-6.*/
```

3.22.23 :MEASure:CREGion:CAX**Syntax**

`:MEASure:CREGion:CAX <cax>`

`:MEASure:CREGion:CAX?`

Description

Sets or queries the horizontal position of Cursor A when the measurement range is the "cursor region". The default unit is s.

Parameter

Name	Type	Range	Default
<cax>	Real	Refer to <i>Remarks</i>	-6 µs

Remarks

- Its range is related to the current horizontal scale and position of the instrument.
- After the setting command is sent, the value in the field of CursorA in the user interface is set. The default unit is s.
- You can run the `:MEASure:AREA` command to set the measurement range to "cursor region".

Return Format

The query returns the horizontal position of Cursor A in scientific notation. The unit is s.

Example

```
:MEASure:CREGion:CAX -0.00001 /*Sets the position of Cursor A to
-10  $\mu$ s.*/
:MEASure:CREGion:CAX /*The query returns -1.000000E-5.*/
```

3.22.24 :MEASure:INDicator

Syntax

:MEASure:INDicator <bool>

:MEASure:INDicator?

Description

Sets or queries the on/off status of the measurement auto cursor.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:MEASure:INDicator ON /*Sets the measurement auto cursor to be
on.*/
:MEASure:INDicator? /*The query returns 1.*/
```

3.22.25 :MEASure:COUNter:ENABLE

Syntax

:MEASure:COUNter:ENABLE <bool>

:MEASure:COUNter:ENABLE?

Description

Sets or queries the on/off status of the frequency counter.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:MEASure:COUNter:ENABle ON      /*Enables the frequency counter.*/
:MEASure:COUNter:ENABle?       /*The query returns 1.*/
```

3.22.26 :MEASure:COUNter:SOURce**Syntax**

```
:MEASure:COUNter:SOURce <source>
```

```
:MEASure:COUNter:SOURce?
```

Description

Sets or queries the measurement source for the frequency counter.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4 EXT}	CHANnel1

Remarks

N/A

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, CHAN4 or EXT.

Example

```
:MEASure:COUNter:SOURce CHANnel4 /*Sets the measurement source of
the frequency counter to CHANnel4.*/
:MEASure:COUNter:SOURce? /*The query returns CHAN4.*/
```

3.22.27 :MEASure:COUNter:VALue?

Syntax

`:MEASure:COUNter:VALue?`

Description

Queries the measurement results of the frequency counter.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the measurement results of the frequency counter in scientific notation.

Example

```
:MEASure:COUNter:VALue? /*The query returns 9.999996E-04.*/
```

3.22.28 :MEASure:AMP:TYPE

Syntax

`:MEASure:AMP:TYPE <val>`

`:MEASure:AMP:TYPE?`

Description

Sets or queries the amplitude method.

Parameter

Name	Type	Range	Default
<val>	Discrete	{AUTO MANual}	AUTO

Remarks

- **AUTO:** indicates the Auto method.
- **MANual:** indicates the Manual method.

Return Format

The query returns AUTO or MAN.

Example

```
:MEASure:AMP:TYPE MANual /*Sets the amplitude method to MANual.*/
:MEASure:AMP:TYPE? /*The query returns MAN.*/
```

3.22.29 :MEASure:AMP:MANual:TOP**Syntax**

```
:MEASure:AMP:MANual:TOP <val/>
```

```
:MEASure:AMP:MANual:TOP?
```

Description

Sets or queries the amplitude top value type for the manual amplitude method.

Parameter

Name	Type	Range	Default
<val>	Discrete	{HISTogram MAXMin}	HISTogram

Remarks

- **HISTogram:** indicates the histogram type.
- **MAXMin:** indicates the Max-Min type.

Return Format

The query returns HIST or MAXM.

Example

```
:MEASure:AMP:MANual:TOP MAXMin /*Sets the amplitude top value
type for the manual amplitude method to MAXMin.*/
:MEASure:AMP:MANual:TOP? /*The query returns MAXM.*/
```

3.22.30 :MEASure:AMP:MANual:BASE**Syntax**

```
:MEASure:AMP:MANual:BASE <val/>
```

```
:MEASure:AMP:MANual:BASE?
```

Description

Sets or queries the amplitude base value type for the manual amplitude method.

Parameter

Name	Type	Range	Default
<val>	Discrete	{HISTogram MAXMin}	HISTogram

Remarks

- **HISTogram**: indicates the histogram type.
- **MAXMin**: indicates the Max-Min type.

Return Format

The query returns HIST or MAXM.

Example

```
:MEASure:AMP:MANual:BASE MAXMin /*Sets the amplitude base value
type for the manual amplitude method to MAXMin.*/
:MEASure:AMP:MANual:BASE? /*The query returns MAXM.*/
```

3.22.31 :MEASure:CATegory

Syntax

```
:MEASure:CATegory <val>
```

```
:MEASure:CATegory?
```

Description

Sets or queries the measurement type.

Parameter

Name	Type	Range	Default
<val>	Discrete	{VERTical HORizontal OTHer}	VERTical

Remarks

N/A.

Return Format

The query returns VERT, HOR, or OTH.

Example

```
:MEASure:CATegory HORizontal /*Sets the measurement category to
Horizontal measurement.*/
:MEASure:CATegory? /*The query returns HOR.*/
```

3.22.32 :MEASure:HISTogram:STATistics:RESult?

Syntax

```
:MEASure:HISTogram:STATistics:RESult?
```

Description

Queries the statistics result of the measurement histogram.

Parameter

N/A

Remarks

Only when you enable the measure histogram function, can this command be valid.

Return Format

The query returns the statistics result of the measurement histogram in strings.

Example

```
:MEASure:HISTogram:STATistics:RESult? /*The query returns
[["92","1","0","Vpp","0","374hits","38hits","1.949V","1.907V","42.26
mV","1.924V","1.924V","1.924V","191.2uV","6.123mV","19.12mV"]].*/
```

3.22.33 :MEASure:MULTiwindow

Syntax

```
:MEASure:MULTiwindow <bool>
```

```
:MEASure:MULTiwindow?
```

Description

Sets or queries whether the measurement multiwindow is enbaled.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:MEASure:MULTiwindow 1 /*Enables the measurement multiwindow.*/
:MEASure:MULTiwindow? /*The query returns 1.*/
```

3.22.34 :MEASure:EDGedelay

Syntax

```
:MEASure:EDGedelay
```

```
<bool>[,<type>[,<source1>[,<slope1>[,<idx1>[,<source2>[,<slope2>[,<idx2>]]]]]]]]]
```

Description

Sets the parameters for time delay/phase measurements between edges.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF
<type>	Discrete	{DElay PHASe}	-
<source1>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4 MATH1 MATH2 MATH3 MATH4}	CHANnel1
<slope1>	Discrete	{RISing FALLing}	RISing
<idx1>	Integer	0 to 999	1
<source2>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4 MATH1 MATH2 MATH3 MATH4}	CHANnel2
<slope2>	Discrete	{RISing FALLing}	RISing
<idx2>	Integer	0 to 999	1

Remarks

This command is a multi-parameter composite command. A key composed of 8 parameters is used to define a user-defined edge measurement. Multiple user-defined edge measurements can be configured at the same time.

- **<bool>**: when set to "ON", it enables or adds a user-defined edge measurement; when set to "OFF", it disables the user-defined measurement (restores the normal delay r-r measurement).
- **<type>**: selects the measurement type to DELay or PHASe.
- **<source1>/<source2>**: specifies the start source and the stop source of the measurement respectively.
- **<slope1>/<slope2>**: specifies the direction of the starting edge and the ending edge of the measurement respectively.

- **<idx1>/<idx2>**: specify which edge of the start source and stop source is selected, respectively. For example, **<slope1>** is set to "RISing" and **<idx1>** is set to "2", it indicates that the starting edge is the second rising edge of source 1.

Return Format

The query returns the current measurement configuration parameters, separated by commas. The parameters represent the measurement type, source 1, source 2, user-defined status, edge 1, and edge 2, in sequence.

Example

```
:MEASure:EDGedelay ON,DElay,CHANnel1,RISing,2,CHANnel2,RISing,3 /*
*Enables a new delay measurement: the time delay between the second
rising edge of CH1 and the third rising edge of CH2.*/
:MEASure:EDGedelay? DElay,CHANnel1,RISing,CHANnel2,RISing /*The
query returns the above measurement configuration and returns
["38","1","2","1","2","3"].*/
```

3.23 :QUICK Command

The **:QUICK** command is used to set and query the relevant parameters for quick operation shortcut keys.

3.23.1 :QUICK:OPERation

Syntax

:QUICK:OPERation *<type>*

:QUICK:OPERation?

Description

Sets or queries the type of the shortcut keys.

Parameter

Name	Type	Range	Default
<i><type></i>	Discrete	{SIMage SWAVe SSETup AMEasure SRESet RECORD SSAVe}	SIMage

Remarks

- **SIMage**: indicates the screen image.
- **SWAVe**: indicates the waveform saving.
- **SSETup**: indicates the setup saving.

- **AMEasure:** indicates all measurement.
- **SRESet:** indicates statistics reset.
- **RECORD:** indicates waveform recording.
- **SSAVe:** indicates saving group.

Return Format

The query returns SIM, SWAV, SSET, AME, REC, SSAV, or SRES.

Example

```
:QUICK:OPERation SWAVe          /*Sets the type of the shortcut key to
"save waveform".*/
:QUICK:OPERation?                /*The query returns SWAV.*/
```

3.24 :RECORD Commands

The **:RECORD** commands are used to set and query the parameters related to the waveform recording mode and frames.

Waveform recording/playing function allows you to record and play the waveforms, enabling you to analyze the waveforms better.

3.24.1 :RECORD:WRECORD:ENABLE

Syntax

```
:RECORD:WRECORD:ENABLE <bool>
```

```
:RECORD:WRECORD:ENABLE?
```

Description

Enables or disables the waveform recording function; or queries the on/off status of the waveform recording function.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 0 or 1.

Example

```
:RECORD:WRECORD:ENABLE ON      /*Enables the waveform recording
function.*/
:RECORD:WRECORD:ENABLE?        /*The query returns 1.*/
```

3.24.2 :RECORD:ENABLE**Syntax**

```
:RECORD:ENABLE <bool>
```

```
:RECORD:ENABLE?
```

Description

Enables or disables the waveform recording function; or queries the on/off status of the waveform recording function.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

This command exists for backwards compatibility. Use the command *:RECORD:WRECORD:ENABLE*.

Return Format

The query returns 0 or 1.

Example

```
:RECORD:ENABLE ON      /*Enables the waveform recording function.*/
:RECORD:ENABLE?        /*The query returns 1.*/
```

3.24.3 :RECORD:WRECORD:OPERate**Syntax**

```
:RECORD:WRECORD:OPERate <operate>
```

```
:RECORD:WRECORD:OPERate?
```

Description

Sets to start the waveform recording, or queries whether the waveform recording starts or stops.

Parameter

Name	Type	Range	Default
<operate>	Discrete	{RUN STOP}	STOP

Remarks

N/A

Return Format

The query returns RUN or STOP.

Example

```
:RECORD:WRECORD:OPERate RUN      /*Sets to start recording
waveforms.*/
:RECORD:WRECORD:OPERate?          /*The query returns RUN.*/
```

3.24.4 :RECORD:START

Syntax

```
:RECORD:START <bool>
```

```
:RECORD:START?
```

Description

Sets to start the waveform recording, or queries whether the waveform recording starts or stops.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

This command exists for backwards compatibility. Use the command *:RECORD:WRECORD:OPERate*.

Return Format

The query returns 1 or 0.

Example

```
:RECORD:START ON      /*Sets to start recording the waveforms.*/
:RECORD:START?        /*The query returns 1.*/
```

3.24.5 :RECORD:WRECORD:FRAMES

Syntax

`:RECORD:WRECORD:FRAMES <value>`

`:RECORD:WRECORD:FRAMES?`

Description

Sets or queries the number of frames for waveform recording.

Parameter

Name	Type	Range	Default
<value>	Integer	1 to the maximum number of frames that can be recorded currently	1,000

Remarks

N/A

Return Format

The query returns an integer ranging from 1 to the maximum number of frames that can be recorded currently.

Example

```
:RECORD:WRECORD:FRAMES 300 /*Sets the number of recorded frames
to 300.*/
:RECORD:WRECORD:FRAMES? /*The query returns 300.*/
```

3.24.6 :RECORD:FRAMES

Syntax

`:RECORD:FRAMES <value>`

`:RECORD:FRAMES?`

Description

Sets or queries the number of frames for waveform recording.

Parameter

Name	Type	Range	Default
<value>	Integer	1 to the maximum number of frames that can be recorded currently	1,000

Remarks

This command exists for backwards compatibility. Use the command *:RECORD:WRECORD:FRAMES*.

Return Format

The query returns an integer ranging from 1 to the maximum number of frames that can be recorded currently.

Example

```
:RECORD:FRAMES 300 /*Sets the number of recorded frames to 300.*/  
:RECORD:FRAMES? /*The query returns 300.*/
```

3.24.7 :RECORD:WRECORD:FRAMES:MAX

Syntax

:RECORD:WRECORD:FRAMES:MAX

Description

Sets the number of recorded frames to the maximum number of frames.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

```
:RECORD:WRECORD:FRAMES:MAX /*Sets the number of recorded frames  
to the maximum number of frames.*/
```

3.24.8 :RECORD:WRECORD: FMAX?

Syntax

:RECORD:WRECORD: FMAX?

Description

Queries the maximum number of frames that can be recorded currently.

Parameter

N/A

Remarks

N/A

Return Format

The query returns an integer. The maximum number of frames that can be recorded currently is determined by the current memory depth.

Example

N/A

3.24.9 :RECORD:WRECORD:FINTErval

Syntax

```
:RECORD:WRECORD:FINTErval <interval>
```

```
:RECORD:WRECORD:FINTErval?
```

Description

Sets or queries the time interval between frames in waveform recording.

Parameter

Name	Type	Range	Default
<interval>	Real	100 ns to 1 s	100ns

Remarks

N/A

Return Format

The query returns the time interval in scientific notation. The unit is s.

Example

```
:RECORD:WRECORD:FINTErval 1 /*Sets the time interval between frames
in waveform recording to 1 s.*/
:RECORD:WRECORD:FINTErval? /*The query returns 1.000000E0.*/
```

3.24.10 :RECORD:WRECORD:PROMpt

Syntax

```
:RECORD:WRECORD:PROMpt <bool>
```

```
:RECORD:WRECORD:PROMpt?
```

Description

Sets or queries the on/off status of the beeper when the recording is completed.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	1 ON

Remarks

N/A

Return Format

The query returns 0 or 1.

Example

```
:RECORD:WRECORD:PROMPT ON      /*Enables the beeper when the
recording is completed.*/
:RECORD:WRECORD:PROMPT?        /*The query returns 1.*/
```

3.24.11 :RECORD:WREPLAY:FCURRENT

Syntax

```
:RECORD:WREPLAY:FCURRENT <value>
```

```
:RECORD:WREPLAY:FCURRENT?
```

Description

Sets or queries the current frame in waveform playing.

Parameter

Name	Type	Range	Default
<value>	Integer	1 to the maximum number of frames recorded	-

Remarks

N/A

Return Format

The query returns an integer.

Example

```
:RECORD:WREPLAY:FCURRENT 300    /*Sets the current frame for
waveform playing to 300.*/
:RECORD:WREPLAY:FCURRENT?        /*The query returns 300.*/
```

3.24.12 :RECORD:CURRENT

Syntax

`:RECORD:CURRENT <value>`

`:RECORD:CURRENT?`

Description

Sets or queries the current frame in waveform playing.

Parameter

Name	Type	Range	Default
<value>	Integer	1 to the maximum number of frames recorded	-

Remarks

This command exists for backwards compatibility. Use the command `:RECORD:WREPLAY:FCURRENT`.

Return Format

The query returns an integer.

Example

```
:RECORD:CURRENT 300 /*Sets the current frame for waveform
playing to 300.*/
:RECORD:CURRENT? /*The query returns 300.*/
```

3.24.13 :RECORD:WREPLAY:FCURRENT:TIME?

Syntax

`:RECORD:WREPLAY:FCURRENT:TIME?`

Description

Queries the time stamp of the current frame in waveform playing.

Parameter

N/A

Remarks

N/A

Return Format

Queries the time stamp of the current frame in strings in waveform playing.

Example

N/A

3.24.14 :RECORD:WREPLAY:FSTART

Syntax

```
:RECORD:WREPLAY:FSTART <start>
```

```
:RECORD:WREPLAY:FSTART?
```

Description

Sets or queries the start frame in waveform playback.

Parameter

Name	Type	Range	Default
<start>	Integer	1 to the maximum number of frames that can be played back currently	-

Remarks

N/A

Return Format

The query returns the start frame in integer.

Example

```
:RECORD:WREPLAY:FSTART 10 /*Sets the start frame in waveform  
playing to 10.*/  
:RECORD:WREPLAY:FSTART? /*The query returns 10.*/
```

3.24.15 :RECORD:WREPLAY:FEND

Syntax

```
:RECORD:WREPLAY:FEND <end>
```

```
:RECORD:WREPLAY:FEND?
```

Description

Sets or queries the end frame in waveform playback.

Parameter

Name	Type	Range	Default
<end>	Integer	1 to the maximum number of frames recorded	-

Remarks

N/A

Return Format

The query returns the end frame in integer.

Example

```
:RECORD:WREPLAY:FEND 346 /*Sets the end frame for waveform  
playing to 346.*/  
:RECORD:WREPLAY:FEND? /*The query returns 346.*/
```

3.24.16 :RECORD:WREPLAY:FMAX?

Syntax

```
:RECORD:WREPLAY:FMAX?
```

Description

Queries the maximum number of frames that can be played back currently.

Parameter

N/A

Remarks

N/A

Return Format

The query returns an integer ranging from 0 to the number of frames that have been recorded currently.

Example

N/A

3.24.17 :RECORD:WREPLAY:FINTEVAL

Syntax

```
:RECORD:WREPLAY:FINTEVAL <interval>  
:RECORD:WREPLAY:FINTEVAL?
```

Description

Sets or queries the time interval between frames in waveform playback.

Parameter

Name	Type	Range	Default
<interval>	Real	20 ms to 1 s	-

Remarks

N/A

Return Format

The query returns the time interval in scientific notation. The unit is s.

Example

```
:RECORD:WREPLAY:FINTERVAL 1 /*Sets the time interval between frames
in waveform playback to 1 s.*/
:RECORD:WREPLAY:FINTERVAL? /*The query returns 1.000000E0.*/
```

3.24.18 :RECORD:WREPLAY:MODE

Syntax

```
:RECORD:WREPLAY:MODE <mode>
```

```
:RECORD:WREPLAY:MODE?
```

Description

Sets the waveform playback mode to Repeat or Single; queries the waveform playback mode.

Parameter

Name	Type	Range	Default
<mode>	Discrete	{REPEAT SINGLE}	SINGLE

Remarks

N/A

Return Format

The query returns REP or SING.

Example

```
:RECORD:WREPLAY:MODE REP /*Sets the playback mode to REP.*/
:RECORD:WREPLAY:MODE? /*The query returns REP.*/
```

3.24.19 :RECORD:WREPLAY:DIRECTION

Syntax

```
:RECORD:WREPLAY:DIRECTION <direction>
```

:RECORD:WREPlay:DIRection?

Description

Sets or queries the playback direction in waveform playing.

Parameter

Name	Type	Range	Default
<direction>	Discrete	{FORWard BACKward}	FORWard

Remarks

N/A

Return Format

The query returns FORW or BACK.

Example

```
:RECORD:WREPlay:DIRection BACK /*Sets the direction of waveform  
playback to BACK.*/  
:RECORD:WREPlay:DIRection? /*The query returns BACK.*/
```

3.24.20 :RECORD:WREPlay:OPERate

Syntax

:RECORD:WREPlay:OPERate <operate>

:RECORD:WREPlay:OPERate?

Description

Enables or disables the waveform playing function; or queries the on/off status of the waveform playing function.

Parameter

Name	Type	Range	Default
<operate>	Discrete	{RUN STOP}	STOP

Remarks

N/A

Return Format

The query returns RUN or STOP.

Example

```
:RECORD:WREPlay:OPERate RUN /*Sets to play the waveforms.*/  
:RECORD:WREPlay:OPERate? /*The query returns RUN.*/
```

3.24.21 :RECORD:PLAY

Syntax

`:RECORD:PLAY <bool>`

`:RECORD:PLAY?`

Description

Enables or disables the waveform playing function; or queries the on/off status of the waveform playing function.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {0 OFF}}	0 OFF

Remarks

This command exists for backwards compatibility. Use the command `:RECORD:WREPLAY:OPERate`.

Return Format

The query returns 1 or 0.

Example

```
:RECORD:PLAY ON      /*Sets to play the waveforms.*/  
:RECORD:PLAY?        /*The query returns 1.*/
```

3.24.22 :RECORD:WREPLAY:BACK

Syntax

`:RECORD:WREPLAY:BACK`

Description

Plays back the previous frame of waveforms manually.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

```
:RECORD:WREPLAY:BACK /*Plays back the previous frame of waveforms manually.*/
```

3.24.23 :RECORD:WREPLAY:NEXT

Syntax

```
:RECORD:WREPLAY:NEXT
```

Description

Plays back the next frame of waveforms manually.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

```
:RECORD:WREPLAY:NEXT /*Plays back the next frame of waveforms manually.*/
```

3.24.24 :RECORD:WREPLAY:PLAY

Syntax

```
:RECORD:WREPLAY:PLAY <val>
```

Description

Sets to play from the start frame or end frame manually.

Parameter

Name	Type	Range	Default
<val>	Discrete	{FFIRst FEND}	FFIRst

Remarks

- **FFIRst**: starts from the start frame.
- **FEND**: starts from the end frame.

Return Format

N/A

Example

```
:RECORD:WREPlay: PLAY FEND /*Sets to play from end frame manually.*/
```

3.25 :REference Commands

:REference commands are used to set the reference waveform parameters.

This series oscilloscope provides 10 reference waveform positions (Ref1-Ref10). In the actual test process, you can compare the signal waveform with the reference waveform to locate the failure.

3.25.1 :REference:SOURce

Syntax

```
:REference:SOURce <ref>,<chan>
```

```
:REference:SOURce? <ref>
```

Description

Sets or queries the source of the specified reference channel.

Parameter

Name	Type	Range	Default
<ref>	Discrete	{1 2 3 4 5 6 7 8 9 10}	-
<chan>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4 MATH1 MATH2 MATH3 MATH4}	CHANnel1

Remarks

Only the currently enabled channel can be selected as the source of the specified reference channel.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, CHAN4, MATH1, MATH2, MATH3, or MATH4.

Example

```
:REference:SOURce 1,CHANnel1 /*Sets the source of Ref1 to
CHANnel1.*/
:REference:SOURce? 1 /*The query returns CHAN1.*/
```

3.25.2 :REfERENCE:VSCale

Syntax

```
:REfERENCE:VSCale <ref>,<scale>
```

```
:REfERENCE:VSCale? <ref>
```

Description

Sets or queries the vertical scale of the specified reference channel.

Parameter

Name	Type	Range	Default
<ref>	Discrete	{1 2 3 4 5 6 7 8 9 10}	-
<scale>	Real	Refer to <i>Remarks</i>	500mV

Remarks

The range of the parameter is related to the probe ratiosettings.

This command is only available when you have saved the waveforms of the specified reference channel.

Return Format

The query returns the vertical scale in scientific notation.

Example

```
:REfERENCE:VSCale 1,2 /*Sets the vertical scale of reference
channel 1 to 2 V.*/
:REfERENCE:VSCale? 1 /*The query returns 2.000000E0.*/
```

3.25.3 :REfERENCE:VOFFset

Syntax

```
:REfERENCE:VOFFset <ref>,<offset>
```

```
:REfERENCE:VOFFset? <ref>
```

Description

Sets or queries the vertical position of the specified reference channel.

Parameter

Name	Type	Range	Default
<ref>	Discrete	{1 2 3 4 5 6 7 8 9 10}	-

Name	Type	Range	Default
<offset>	Real	$(-10 \times \text{RefVerticalScale})$ to $(10 \times \text{RefVerticalScale})$	0 V

Remarks

RefVerticalScale indicates the vertical scale of the currently set reference channel.

Return Format

The query returns the vertical position in scientific notation.

Example

```
:REfERENCE:VOFFset 1,0.5 /*Sets the vertical offset of reference
channel 1 to 500 mV.*/
:REfERENCE:VOFFset? 1 /*The query returns 5.000000E-1.*/
```

3.25.4 :REfERENCE:RESet

Syntax

:REfERENCE:RESet <ref>

Description

Resets the vertical scale and vertical offset of the specified reference channel to the defaults.

Parameter

Name	Type	Range	Default
<ref>	Discrete	{1 2 3 4 5 6 7 8 9 10}	-

Remarks

N/A

Return Format

N/A

Example

N/A

3.25.5 :REfERENCE:HOFFset

Syntax

:REfERENCE:HOFFset <ref>,<offset>

:REfERENCE:HOFFset? <ref>

Description

Sets or queries the horizontal position of the specified reference channel.

Parameter

Name	Type	Range	Default
<ref>	Discrete	{1 2 3 4 5 6 7 8 9 10}	-
<offset>	Real	-1.00 ks to 1.00 ks	0.00s

Remarks

N/A

Return Format

The query returns the horizontal position of the specified reference channel in scientific notation.

Example

```
:REfERENCE:HOffset 1,0.5 /*Sets the horizontal position of
reference channel 1 to 500 mV.*/
:REfERENCE:HOffset? 1 /*The query returns 5.000000E-1.*/
```

3.25.6 :REfERENCE:CURRent

Syntax

:REfERENCE:CURRent <ref>

Description

Sets the current reference channel.

Parameter

Name	Type	Range	Default
<ref>	Discrete	{1 2 3 4 5 6 7 8 9 10}	1

Remarks

N/A

Return Format

N/A

Example

N/A

3.25.7 :REference:SAVE

Syntax

:REference:SAVE <ref>

Description

Saves the waveform of the specified reference channel to the internal memory as the reference waveform.

Parameter

Name	Type	Range	Default
<ref>	Discrete	{1 2 3 4 5 6 7 8 9 10}	-

Remarks

N/A

Return Format

N/A

Example

N/A

3.25.8 :REference:COLor

Syntax

:REference:COLor <ref>, <color>

:REference:COLor? <ref>

Description

Sets or queries the color of the specified reference channel.

Parameter

Name	Type	Range	Default
<ref>	Discrete	{1 2 3 4 5 6 7 8 9 10}	-
<color>	Discrete	{GRAY GREen BLUE RED ORANGE}	-

Remarks

N/A

Return Format

The query returns GRAY, GRE, BLUE, RED, or ORAN.

Example

```
:REfERENCE:COLOr 1,GREn /*Sets the display color of the
reference channel 1 to GREEn.*/
:REfERENCE:COLOr? 1 /*The query returns GRE.*/
```

3.25.9 :REfERENCE:LABel:ENABle**Syntax**

```
:REfERENCE:LABel:ENABle <bool>
```

```
:REfERENCE:LABel:ENABle?
```

Description

Enables or disables the label display of all the reference channels; or queries the on/off label display status of all the reference channels.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:REfERENCE:LABel:ENABle ON /*Enables the label display of
all the reference channels.*/
:REfERENCE:LABel:ENABle? /*The query returns 1.*/
```

3.25.10 :REfERENCE:LABel:CONTent**Syntax**

```
:REfERENCE:LABel:CONTent <ref>,<str>
```

```
:REfERENCE:LABel:CONTent? <ref>
```

Description

Sets or queries the label of the specified reference channel.

Parameter

Name	Type	Range	Default
<ref>	Discrete	{1 2 3 4 5 6 7 8 9 10}	-
<str>	ASCII String	The label can contain English letters and numbers, as well as some symbols.	-

Remarks

N/A

Return Format

The query returns the label of the specified reference channel in strings.

Example

```
:REfERENCE:LABel:CONTent 1,REF1          /*Sets the label of
reference channel 1 to REF1.*/
:REfERENCE:LABel:CONTent? 1              /*The query returns REF1.*/
```

3.26 :SAVE Commands

You can save the current setups, waveforms, screen image, and parameters of the oscilloscope to the internal memory or external USB storage device (such as USB storage device) in various formats and recall the stored files when necessary.

3.26.1 :SAVE:IMAGe:INVert

Syntax

```
:SAVE:IMAGe:INVert <bool>
```

```
:SAVE:IMAGe:INVert?
```

Description

Enables or disables the invert function when saving the image; or queries whether the invert function is enabled when saving the image.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:SAVE:IMAGe:INVert ON          /*Enables the invert function when
saving the image.*/
:SAVE:IMAGe:INVert?           /*The query returns 1.*/
```

3.26.2 :SAVE:IMAGe:COLor**Syntax**

:SAVE:IMAGe:COLor <color>

:SAVE:IMAGe:COLor?

Description

Sets the image color for image saving to Color or Gray; or queries image color for image saving.

Parameter

Name	Type	Range	Default
<color>	Discrete	{COLor GRAY}	COLor

Remarks

N/A

Return Format

The query returns COL or GRAY.

Example

```
:SAVE:IMAGe:COLor GRAY        /*Sets the image color for image
saving to GRAY.*/
:SAVE:IMAGe:COLor?            /*The query returns GRAY.*/
```

3.26.3 :SAVE:IMAGe:FORMat**Syntax**

:SAVE:IMAGe:FORMat <format>

:SAVE:IMAGe:FORMat?

Description

Sets or queries in what format is the image saved.

Parameter

Name	Type	Range	Default
<format>	Discrete	{PNG BMP JPG}	-

Remarks

N/A

Return Format

The query returns PNG, BMP, or JPG.

Example

```
:SAVE:IMAGe:FORMat PNG /*Sets the storage format to PNG.*/  
:SAVE:IMAGe:FORMat? /*The query returns PNG.*/
```

3.26.4 :SAVE:IMAGe:HEADer

Syntax

:SAVE:IMAGe:HEADer <bool>

:SAVE:IMAGe:HEADer?

Description

Sets or queries whether to display the image header.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	-

Remarks

- **1|ON:** enables to display the image header. If you select "ON", the instrument model and the image creation date will be displayed in the header of the image when you save the image file.
- **0|OFF:** disables to display the image header.

Return Format

The query returns 1 or 0.

Example

```
:SAVE:IMAGe:HEADer ON /*Enables the display of the image header.*/  
:SAVE:IMAGe:HEADer? /*The query returns 1.*/
```

3.26.5 :SAVE:IMAGe

Syntax

:SAVE:IMAGe <path>

Description

Stores the contents displayed on the screen into the internal or external memory in image format.

Parameter

Name	Type	Range	Default
<path>	ASCII String	Refer to <i>Remarks</i>	-

Remarks

<path> includes the file storage location and the filename with a suffix.

- The local path is C:/; and the path of the external storage device is D:/.
- The suffix of the file supported is "*.bmp", "*.png", or "*.jpg".
- Refer to *:SAVE:OVERlap*. When you send the command :SAVE:OVERlap ON:

If the specified storage location already contains a file with the same filename, the original file will be overwritten.

- The filename can contain letters, numbers, and other non-Chinese characters.

The length of the filename shall not exceed 16 characters.

Return Format

N/A

Example

```
:SAVE:IMAGe D:/123.png /*Saves the oscilloscope screenshot image
to the external memory Disk D, with the filename "*123.png".*/
```

3.26.6 :SAVE:SETup

Syntax

:SAVE:SETup <path>

Description

Saves the current setup parameters of the oscilloscope to the internal or external memory as a file.

Parameter

Name	Type	Range	Default
<path>	ASCII String	Refer to <i>Remarks</i>	-

Remarks

<path> includes the file storage location and the filename with a suffix.

- The path of the local disk is C:/ and the path of the external storage device can be D:/
- The suffix of the filename is "*.stp".
- Refer to *:SAVE:OVERlap*. When you send the command :SAVE:OVERlap ON, if the specified storage location already contains a file with the same filename, the original file will be overwritten.
- The filename can contain letters, numbers, and other non-Chinese characters.
The length of the filename shall not exceed 16 characters.

Return Format

N/A

Example

```
:SAVE:SETup D:/123.stp /*Stores the current setup parameters of the
oscilloscope into the external storage device Disk D, with the
filename 123.stp.*/
```

3.26.7 :SAVE:WAVEform

Syntax

:SAVE:WAVEform <path>

Description

Saves the screen waveform data to the internal or external memory as a file.

Parameter

Name	Type	Range	Default
<path>	ASCII String	Refer to <i>Remarks</i>	-

Remarks

<path> includes the file storage location and the filename with a suffix.

- The path of the local disk is C:/ and the path of the external storage device can be D:/.
- The suffix of the filename is "*.bin" or "*.csv".
- Refer to *:SAVE:OVERlap*. When you send the command :SAVE:OVERlap ON, if the specified storage location already contains a file with the same filename, the original file will be overwritten.
- The filename can contain letters, numbers, and other non-Chinese characters. The length of the filename shall not exceed 16 characters.

Return Format

N/A

Example

```
:SAVE:WAVEform D:/123.csv /*Saves the screen waveform file to the
external storage device Disk D, with the filename 123.csv.*/
```

3.26.8 :SAVE:MEMory:WAVEform

Syntax

:SAVE:MEMory:WAVEform <path>

Description

Saves the memory waveform data of the oscilloscope to the specified path as a file.

Parameter

Name	Type	Range	Default
<path>	ASCII String	Refer to <i>Remarks</i>	-

Remarks

<path> includes the file storage location and the filename with a suffix.

- The path of the local disk is C:/; and the path of the external storage device can be D:/.
- The suffix of the filename is "*.bin", "*.csv", or "*.wfm".
- Refer to *:SAVE:OVERlap*. When you send the command :SAVE:OVERlap ON, if the specified storage location already contains a file with the same filename, the original file will be overwritten.

- The filename can contain letters, numbers, and other non-Chinese characters.
The length of the filename shall not exceed 16 characters.

Return Format

N/A

Example

```
:SAVE:MEMory:WAVEform D:/123.bin /*Saves the oscilloscope memory
waveform data to the external storage device Disk D, with the
filename "*123.bin".*/
```

3.26.9 :SAVE:HISTogram

Syntax

:SAVE:HISTogram <path>

Description

Stores the histogram measurement data in file form to the location specified by path.

Parameter

Name	Type	Range	Default
<path>	ASCII String	Refer to <i>Remarks</i>	-

Remarks

<path> includes the file storage location and the filename with a suffix.

- The local path is C:/; and the path of the external storage device is D:/.
- The suffix of the filename is "*.csv".
- Refer to *:SAVE:OVERlap*. When :SAVE:OVERlap is set to ON, if the specified storage location already contains a file with the same filename, the original file will be overwritten.
- The filename can contain letters, numbers, and other non-Chinese characters.
The length of the filename shall not exceed 16 characters.

Return Format

N/A

Example

```
:SAVE:HISTogram D:/123.csv /*Stores the histogram measurement data
of the oscilloscope to Disk D, with the filename "123.csv".*/
```

3.26.10 :SAVE:STATus?

Syntax

:SAVE:STATus?

Description

Queries the status of the memory.

Parameter

N/A

Remarks

N/A

Return Format

The query returns 0 or 1 (when the saving operation is completed).

Example

N/A

3.26.11 :SAVE:OVERlap

Syntax

:SAVE:OVERlap <bool>

:SAVE:OVERlap?

Description

Sets or queries whether to enable or disable the file overwriting function.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {0 OFF}}	-

Remarks

- **1|ON:** enables to overwrite the existing file. The existing file with the same name as the file to be saved will be overwritten.
- **0|OFF:** disables to overwrite the existing file.

Return Format

The query returns 1 or 0.

Example

```
:SAVE:OVERlap ON /*Enables to overwrite the existing file.*/
:SAVE:OVERlap? /*The query returns 1.*/
```

3.26.12 :SAVE:PREFIX**Syntax**

```
:SAVE:PREFIX <name>
```

```
:SAVE:PREFIX?
```

Description

Sets or queries the prefix of the filename when saving a file.

Parameter

Name	Type	Range	Default
<name>	ASCII String	<i>Remarks</i>	-

Remarks

Each filename consists of the given prefix, appended with an appropriate extension.

The prefix of the filename mentioned in this command shall not contain the suffix. Its prefix can contain letters, numbers, and other non-Chinese characters. The length of the prefix shall not exceed 16 characters.

Return Format

The query returns the prefix of the filename in strings.

Example

```
:SAVE:PREFIX Rigol /*Sets the prefix of the filename to Rigol.*/
:SAVE:PREFIX? /*The query returns Rigol.*/
```

3.26.13 :SAVE:MASK**Syntax**

```
:SAVE:MASK <path>
```

Description

Saves the mask file to the specified path.

Parameter

Name	Type	Range	Default
<path>	ASCII String	Refer to <i>Remarks</i>	-

Remarks

<path> includes the file storage location and the filename with a suffix.

- The local path is C:/; and the external storage path is D:/.
- The suffix of the filename is "*.pf".
- Refer to **:SAVE:OVERlap**. When you have performed the :SAVE:OVERlap ON command, if the file to be saved has the same filename as the existing file in the specified storage path, then the original file will be overwritten by the newly saved file.
- The filename can contain letters, numbers, and other non-Chinese characters. The length of the filename shall not exceed 16 characters.

You can run the **:LOAD:MASK** command to load the mask file.

Return Format

N/A

Example

```
:SAVE:MASK D:/123.pf /*Saves the mask file to the external storage device Disk D, with the filename 123.pf.*/
```

3.26.14 :SAVE:PATHname

Syntax

:SAVE:PATHname <name>

:SAVE:PATHname?

Description

Sets or queries the file saving path.

Parameter

Name	Type	Range	Default
<name>	ASCII String	-	-

Remarks

N/A

Return Format

The query returns the file saving path in strings.

Example

```
:SAVE:PATHname C:/new /*Sets the file saving path to C:/new.*/  
:SAVE:PATHname? /*The query returns C:/new.*/*
```

3.26.15 :LOAD:SETup**Syntax**

```
:LOAD:SETup <path>
```

Description

Loads the setup file of the oscilloscope from the specified path.

Parameter

Name	Type	Range	Default
<path>	ASCII String	Refer to <i>Remarks</i>	-

Remarks

<path> includes the file storage location and the filename with a suffix.

- The path of the local disk is C:/ and the path of the external storage device can be D:/.
- The suffix of the filename to be loaded is "*.stp".

Return Format

N/A

Example

```
:LOAD:SETup D:/123.stp /*Loads the setup file "123.stp" from  
the external storage device Disk D.*/*
```

3.26.16 :LOAD:MASK**Syntax**

```
:LOAD:MASK <path>
```

Description

Loads the mask file from the specified path.

Parameter

Name	Type	Range	Default
<path>	ASCII String	Refer to <i>Remarks</i>	-

Remarks

<path> includes the file storage location and the filename with a suffix.

- The local path is C:/; and the external storage path is D:/ or E:/.
- The suffix of the filename is "*.pf".

Return Format

N/A

Example

```
:LOAD:MASK D:/123.pf /*Loads the mask file named "123.pf" from the
external storage device Disk D.*/
```

3.27 :SEARCh Commands

3.27.1 :SEARCh:COUNT?

Syntax

```
:SEARCh:COUNT?
```

Description

Queries the total number of the search events.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the total number of the search events in integer.

Example

```
N/A
```

3.27.2 :SEARCh:STATe

Syntax

```
:SEARCh:STATe <bool>
```

```
:SEARCh:STATe?
```


Description

Enables or disables the search function; or queries the on/off status of the search function.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Return Format

The query returns 1 or 0.

Example

```
:SEARCH:STATE ON      /*Enables the search function.*/  
:SEARCH:STATE?        /*The query returns 1.*/
```

3.27.3 :SEARCh:MODE

Syntax

:SEARCh:MODE <value>

:SEARCh:MODE?

Description

Sets the search type.

Parameter

Name	Type	Range	Default
<value>	Discrete	{EDGE PULSe}	EDGE

Remarks

- **EDGE**: selects "Edge" as the search type.
- **PULSe**: selects "Pulse" as the search type.

Return Format

The query returns EDGE or PULS.

Example

```
:SEARCH:MODE PULSe    /*Selects the search type to "PULSe".*/  
:SEARCH:MODE?         /*The query returns PULS.*/
```

3.27.4 :SEARCh:EVENT

Syntax

:SEARCh:EVENT <value>

:SEARCh:EVENT?

Description

Sets to navigate a search event.

Parameter

Name	Type	Range	Default
<value>	Integer	0 to (the number of searched events)	0

Remarks

If no search event is found in the current search event table, the query returns 0.

If the parameter <value> is set to 0, then the instrument navigates to the event with the index number 1.

Return Format

The query returns an integer.

Example

```
:SEARCh:EVENT 1 /*Sets to navigate to Search Event 1.*/
:SEARCh:EVENT? /*The query returns 1.*/
```

3.27.5 :SEARCh:VALue?

Syntax

:SEARCh:VALue? <X>

Description

Queries the time value for the specified Line No. in the marktable.

Parameter

Name	Type	Range	Default
<X>	Integer	-	-

Remarks

<X> denotes the line number of the marktable.

Return Format

The query returns a time value.

Example

N/A

3.27.6 :SEARch:EDGE:SLOPe

Syntax

```
:SEARch:EDGE:SLOPe <slope>
```

```
:SEARch:EDGE:SLOPe?
```

Description

Sets or queries the edge for the "Edge" search type.

Parameter

Name	Type	Range	Default
<slope>	Discrete	{POSitive NEGative EITHer}	POSitive

Remarks

- **POSitive:** indicates the rising edge.
- **NEGative:** indicates the falling edge.
- **EITHer:** indicates the rising edge or the falling edge.

Return Format

The query returns POS, NEG, or EITH.

Example

```
:SEARch:EDGE:SLOPe NEGative /*Sets the edge type to NEGative.*/
:SEARch:EDGE:SLOPe? /*The query returns NEG.*/
```

3.27.7 :SEARch:EDGE:SOURce

Syntax

```
:SEARch:EDGE:SOURce <source>
```

```
:SEARch:EDGE:SOURce?
```

Description

Sets or queries the source for the "Edge" search type.

Parameter

Name	Type	Range	Default
<source>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

N/A

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4.

Example

```
:SEARCH:EDGE:SOURce CHANnel1 /*Sets the source for the Edge
search type to CHANnel1.*/
:SEARCH:EDGE:SOURce? /*The query returns CHAN1.*/
```

3.27.8 :SEARCH:EDGE:THReshold**Syntax**

```
:SEARCH:EDGE:THReshold <thre>
```

```
:SEARCH:EDGE:THReshold?
```

Description

Sets or queries the threshold for the "Edge" search type.

Parameter

Name	Type	Range	Default
<thre>	Real	(-4.5 x VerticalScale - Offset) to (4.5 x VerticalScale - Offset)	0.000V

Remarks

N/A

Return Format

The query returns the threshold for the edge search type in scientific notation.

Example

```
:SEARCH:EDGE:THReshold 0.01 /*Sets the threshold to 0.01
V.*/
:SEARCH:EDGE:THReshold? /*The query returns 1.000000E-2.*/
```

3.27.9 :SEARCh:PULSe:POLarity

Syntax

```
:SEARCh:PULSe:POLarity <polarity>
```

```
:SEARCh:PULSe:POLarity?
```

Description

Sets or queries the polarity for the "Pulse" search type.

Parameter

Name	Type	Range	Default
<polarity>	Discrete	{POSitive NEGative}	POSitive

Remarks

N/A

Return Format

The query returns POS or NEG.

Example

```
:SEARCh:PULSe:POLarity POSitive /*Sets the polarity for the
Pulse search type to POSitive.*/
:SEARCh:PULSe:POLarity? /*The query returns POS.*/
```

3.27.10 :SEARCh:PULSe:QUALifier

Syntax

```
:SEARCh:PULSe:QUALifier <qualifier>
```

```
:SEARCh:PULSe:QUALifier?
```

Description

Sets or queries the search condition for the "Pulse" search type.

Parameter

Name	Type	Range	Default
<qualifier>	Discrete	{GREater LESS GLESS}	GREater

Remarks

- **GREater:** the positive/negative pulse width of the input signal is greater than the specified pulse width.

- **LESS:** the positive/negative pulse width of the input signal is smaller than the specified pulse width.
- **GLESS:** the positive/negative pulse width of the input signal is greater than the specified lower limit of pulse width and smaller than the specified upper limit of pulse width.

Return Format

The query returns GRE, LESS, or GLESS.

Example

```
:SEARCH:PULSE:QUALifier LESS /*Sets the search condition for the
"Pulse" search type to LESS.*/
:SEARCH:PULSE:QUALifier? /*The query returns LESS.*/
```

3.27.11 :SEARCH:PULSE:SOURCE

Syntax

```
:SEARCH:PULSE:SOURCE <source>
```

```
:SEARCH:PULSE:SOURCE?
```

Description

Sets or queries the source for the "Pulse" search type.

Parameter

Name	Type	Range	Default
<source>	Discrete	{CHANNEL1 CHANNEL2 CHANNEL3 CHANNEL4}	CHANNEL1

Remarks

N/A

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4.

Example

```
:SEARCH:PULSE:SOURCE CHANNEL1 /*Sets the source for the Pulse
search type to CHANNEL1.*/
:SEARCH:PULSE:SOURCE? /*The query returns CHAN1.*/
```

3.27.12 :SEARCh:PULSe:UWIDth

Syntax

`:SEARCh:PULSe:UWIDth <width>`

`:SEARCh:PULSe:UWIDth?`

Description

Sets or queries the upper limit of the pulse width for the "Pulse" search type.

Parameter

Name	Type	Range	Default
<width>	Real	800 ps to 10 s	2 μ s

Remarks

N/A

Return Format

The query returns the upper limit of the pulse width in scientific notation.

Example

```
:SEARCh:PULSe:UWIDth 1 /*Sets the upper limit of the pulse width
for the Pulse search type to 1 s.*/
:SEARCh:PULSe:UWIDth? /*The query returns 1.000000E0.*/
```

3.27.13 :SEARCh:PULSe:LWIDth

Syntax

`:SEARCh:PULSe:LWIDth <width>`

`:SEARCh:PULSe:LWIDth?`

Description

Sets or queries the lower limit of the pulse width for the "Pulse" search type.

Parameter

Name	Type	Range	Default
<width>	Real	800 ps to 10 s	1 μ s

Remarks

N/A

Return Format

The query returns the lower limit of the pulse width in scientific notation.

Example

```
:SEARCh:PULSe:LWIDth 0.2 /*Sets the lower limit of the pulse
width for the Pulse search type to 200 ms.*/
:SEARCh:PULSe:LWIDth? /*The query returns 2.000000E-1.*/
```

3.27.14 :SEARCh:PULSe:THReshold**Syntax**

```
:SEARCh:PULSe:THReshold <thre>
```

```
:SEARCh:PULSe:THReshold?
```

Description

Sets or queries the threshold for the "Pulse" search type.

Parameter

Name	Type	Range	Default
<thre>	Real	(-4.5 x VerticalScale - Offset) to (4.5 x VerticalScale - Offset)	0.000 V

Remarks

N/A

Return Format

The query returns the threshold for the pulse search type in scientific notation.

Example

```
:SEARCh:PULSe:THReshold 0.01 /*Sets the threshold to 10
mV.*/
:SEARCh:PULSe:THReshold? /*The query returns
1.000000E-2.*/
```

3.28 :NAVigate Commands**3.28.1 :NAVigate:ENABLE****Syntax**

```
:NAVigate:ENABle <bool>
```

```
:NAVigate:ENABle?
```

Description

Sets or queries the on/off status of the Navigation function.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:NAVigate:ENABle ON      /*Enables the Navigation function.*/
:NAVigate:ENABle?        /*The query returns 1.*/
```

3.28.2 :NAVigate:MODE

Syntax

```
:NAVigate:MODE <mode>
```

```
:NAVigate:MODE?
```

Description

Sets or queries the navigation mode.

Parameter

Name	Type	Range	Default
<mode>	Discrete	{TIME SEARCh}	TIME

Remarks

- **TIME:** indicates the time navigation. It is available only when in "YT" time mode.
- **SEARCh:** indicates event search navigation. When you enable the navigation function and complete the event search, you can use the navigation combination keys to quickly navigate the specific event in the event mark table.

The navigation function is available only when the oscilloscope is in "STOP" state (acquisition stopped). You can send the **:STOP** command to set the oscilloscope to STOP status.

Return Format

The query returns TIME or SEARCh.

Example

```
:NAVigate:MODE TIME /*Sets the navigation mode to Time navigation.*/
:NAVigate:MODE? /*The query returns TIME.*/
```

3.28.3 :NAVigate:TIME:SPEEd**Syntax**

```
:NAVigate:TIME:SPEEd <speed>
```

```
:NAVigate:TIME:SPEEd?
```

Description

Sets or queries the speed of playing the waveforms in time navigation mode.

Parameter

Name	Type	Range	Default
<speed>	Discrete	{HIGH NORMAL LOW}	NORMAL

Remarks

- **HIGH:** indicates playing the waveforms at a high speed.
- **NORMAL:** indicates playing the waveforms at a normal speed.
- **LOW:** indicates playing the waveforms at a low speed.

Return Format

The query returns HIGH, NORMAL, or LOW.

Example

```
:NAVigate:TIME:SPEEd LOW /*Sets to play the waveforms in time
navigation mode at a low speed.*/
:NAVigate:TIME:SPEEd? /*The query returns LOW.*/
```

3.28.4 :NAVigate:TIME:PLAY**Syntax**

```
:NAVigate:TIME:PLAY <bool>
```

```
:NAVigate:TIME:PLAY?
```

Description

Sets or queries whether to play the waveforms in time navigation mode.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

- **1|ON:** starts playing the waveforms.
- **0|OFF:** stops playing the waveforms.

Return Format

The query returns 0 or 1.

Example

```
:NAVigate:TIME:PLAY ON /*Sets to play the waveforms in time  
navigation.*/  
:NAVigate:TIME:PLAY? /*The query returns 1.*/
```

3.28.5 :NAVigate:TIME:END

Syntax

```
:NAVigate:TIME:END
```

Description

Sets to navigate to the end waveforms (waveforms ending at the rightmost end of screen) in time navigation mode.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

```
N/A
```

3.28.6 :NAVigate:TIME:START

Syntax

```
:NAVigate:TIME:START
```

Description

Sets to navigate to the start waveform (waveform starting at the leftmost end of screen) in time navigation mode.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.28.7 :NAVigate:TIME:NEXT

Syntax

:NAVigate:TIME:NEXT

Description

Sets to play forward the waveform in time navigation mode.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.28.8 :NAVigate:TIME:BACK

Syntax

:NAVigate:TIME:BACK

Description

Sets to play backward the waveform in time navigation mode.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.28.9 :NAVigate:SEARch:END

Syntax`:NAVigate:SEARch:END`**Description**

Sets to navigate to the last event.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.28.10 :NAVigate:SEARch:START

Syntax`:NAVigate:SEARch:START`**Description**

Sets to navigate to the first event.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.28.11 :NAVigate:SEARch:NEXT

Syntax`:NAVigate:SEARch:NEXT`**Description**

Sets to navigate to the next event.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.28.12 :NAVigate:SEARch:BACK

Syntax`:NAVigate:SEARch:BACK`**Description**

Sets to navigate to the previous event.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.29 Function/Arbitrary Waveform Generator Commands

The commands are used to set the relevant parameters of the built-in function/arbitrary waveform generator. <n> can set to 1 or 2, which indicates the specified built-in function/arbitrary waveform generator channel. The commands are only available for the model installed with the AWG option.

3.29.1 :OUTPut<n>:STATe

Syntax

```
:OUTPut<n>:STATe <bool>
```

```
:OUTPut<n>:STATe?
```

Description

Enables or disables the output of the specified function/arbitrary waveform generator channel; or queries the output status of the specified function/arbitrary waveform generator channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 0 or 1.

Example

```
:OUTPut1:STATe ON      /*Enables the output of the AWG channel 1.*/
:OUTPut1:STATe?        /*The query returns 1.*/
```

3.29.2 :OUTPut<n>:LOAD

Syntax

:OUTPut<n>:LOAD <ohms>

:OUTPut<n>:LOAD?

Description

Sets or queries the output impedance of the specified function/arbitrary waveform generator channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<ohms>	Discrete	{50 INFINITY}	INFINITY

Remarks

- 50: indicates that the output impedance of the specified function/arbitrary waveform generator channel is 50 Ω .
- INFINITY: indicates HighZ.

Return Format

The query returns +5.000000000000000E+01 or 9.9E+37.

Example

```
:OUTPut1:LOAD 50 /*Sets the output impedance of the specified
function/arbitrary waveform generator channel to 50  $\Omega$ .*/
:OUTPut1:LOAD? /*The query returns +5.000000000000000E+01.*/
```

3.29.3 :SOURce<n>:FUNCtion

Syntax

:SOURce<n>:FUNCtion <wave>

:SOURce<n>:FUNCtion?

Description

Sets or queries the type of the basic waveform output from the specified function/arbitrary waveform generator channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<wave>	Discrete	{SINusoid SQUare PULSe RAMP NOISe ARB}	SINusoid

Remarks

The built-in function/arbitrary waveform generator can output multiple basic waveforms, including Sine (SINusoid), Square (SQUare), Pulse (PULSe), Ramp (RAMP), Noise (NOISe), and ARB.

For the detailed information of the ARB waveforms, refer to the *:SOURce<n>:FUNCTION:ARbitrary* command.

Return Format

The query returns SIN, SQU, PULS, RAMP, NOIS, or ARB.

Example

```
:SOURce1:FUNCTION SQUare /*Sets the basic waveform output from
GI to SQUare.*/
:SOURce1:FUNCTION? /*The query returns SQU.*/
```

3.29.4 :SOURce<n>:FUNCTION:RAMP:SYMMetry

Syntax

```
:SOURce<n>:FUNCTION:RAMP:SYMMetry <symm>
```

```
:SOURce<n>:FUNCTION:RAMP:SYMMetry?
```

Description

Sets or queries the symmetry of the Ramp waveform output from the specified function/arbitrary waveform generator channel.


Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<symm>	Real	0.1% to 99.9%	50%

Remarks

This command is only available when the waveform type (*:SOURce<n>:FUNCTION*) is "Ramp".

 Symmetry is defined as the percentage that the rising period of the ramp takes up in the whole period.

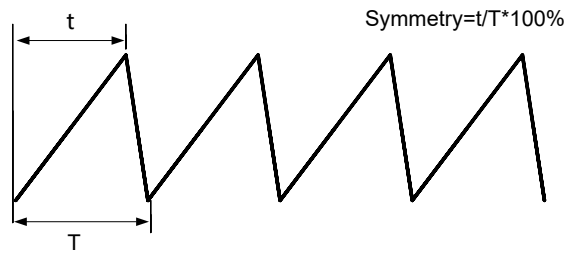

Return Format

The query returns the symmetry of the Ramp waveform in scientific notation. For example, 5.500000000000000E+01 (the Ramp symmetry is 55%).

Example

```
:SOURce1:FUNCTION:RAMP:SYMMetry 55 /*Sets the symmetry of the
Ramp waveform output from GI to 55%.*/
:SOURce1:FUNCTION:RAMP:SYMMetry? /*The query returns
5.500000000000000E+01.*/
```

3.29.5 :SOURce<n>:FUNCTION:PULSE:DCYCLE

Syntax

```
:SOURce<n>:FUNCTION:PULSE:DCYCLE <percent>
:SOURce<n>:FUNCTION:PULSE:DCYCLE?
```

Description

Sets or queries the duty cycle of the pulse output from the specified function/arbitrary waveform generator channel, that is, the ratio of high level to a pulse period.


Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<percent>	Real	10 to 90	50

Remarks

This command is only available when the waveform type (:SOURce<n>:FUNCTION) is "Pulse".

 Duty cycle is defined as the percentage that the high level takes up in the whole pulse period.

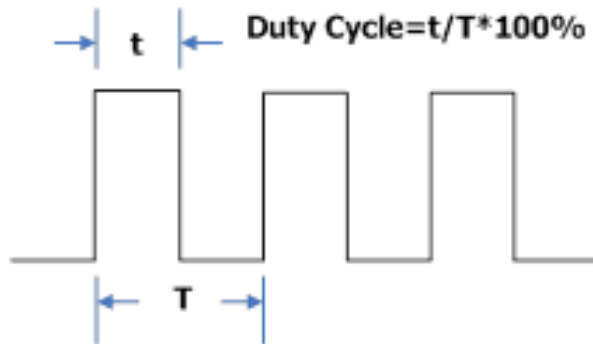

Return Format

The query returns the current duty cycle in scientific notation.

Example

```
:SOURce1:FUNCTION:PULSe:DCYClE 20 /*Sets the duty cycle of the
pulse waveform output from GI to 20%.*/
:SOURce1:FUNCTION:PULSe:DCYClE? /*The query returns
+2.0000000000000000E+01.*/
```

3.29.6 :SOURce<n>:FUNCTION:PULSe:TRANSition:TRAILing

Syntax

```
:SOURce<n>:FUNCTION:PULSe:TRANSition:TRAILing <seconds>
```

```
:SOURce<n>:FUNCTION:PULSe:TRANSition:TRAILing?
```

Description

Sets or queries the falling edge time of Pulse waveform output from the specified function/arbitrary waveform generator channel. By, the unit is s.


Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<seconds>	Real	9 ns to 1 s	9 ns

Remarks

This command is only available when the waveform type (:SOURce<n>:FUNCTION) is "Pulse".

 The falling edge time of the pulse waveform is defined as the time required for the pulse amplitude to fall from 90% to 10%.

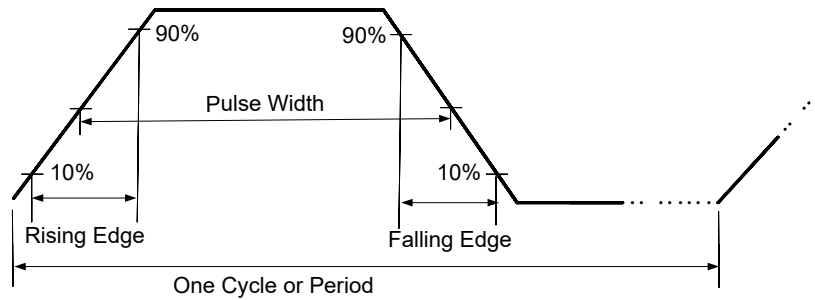

Return Format

The query returns the falling edge time of the pulse waveform in scientific notation. The unit is s.

Example

```
:SOURce1:FUNCTION:PULSe:TRANSition:TRAILing 0.0000001 /*Sets the
falling edge time of the output Pulse waveform of GI to 100 ns.*/
:SOURce1:FUNCTION:PULSe:TRANSition:TRAILing? /*The query
returns +1.0000000000000000E-07.*/
```

3.29.7 :SOURce<n>:FUNCTION:PULSe:TRANSition:LEADIng

Syntax

```
:SOURce<n>:FUNCTION:PULSe:TRANSition:LEADIng <seconds>
```

```
:SOURce<n>:FUNCTION:PULSe:TRANSition:LEADIng?
```

Description

Sets or queries the rising edge time of Pulse waveform output from the specified function/arbitrary waveform generator channel. By, the unit is s.


Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<seconds>	Real	9 ns to 1 s	9 ns

Remarks

This command is only available when the waveform type (:SOURce<n>:FUNCTION) is "Pulse".

 The rising edge time is defined as the time required for the pulse amplitude to rise from 10% to 90%. The default unit is s.

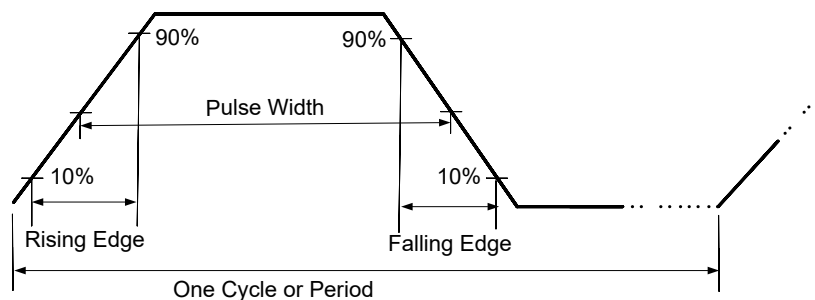

Return Format

The query returns the rising edge time of the pulse waveform in scientific notation. The unit is s.

Example

```
:SOURce1:FUNCTION:PULSe:TRANSition:LEADing 0.0000001 /*Sets the the
rising edge time of the output Pulse waveform of GI to 100 ns.*/
:SOURce1:FUNCTION:PULSe:TRANSition:LEADing? /*The query
returns +1.0000000000000000E-07.*/
```

3.29.8 :SOURce<n>:FUNCTION:PULSe:WIDTh

Syntax

```
:SOURce<n>:FUNCTION:PULSe:WIDTh <width>
```

```
:SOURce<n>:FUNCTION:PULSe:WIDTh?
```

Description

Sets or queries the pulse width of the pulse waveform output from the specified function/arbitrary waveform generator channel. By, the unit is s.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<width>	Real	1 s to 9 s @100 mHz	500 μs

Remarks

This command is only available when the waveform type (:SOURce<n>:FUNCTION) is "Pulse".

Pulse Width = Pulse Period x Duty Cycle

To set or query the duty cycle of the pulse waveform, run the :SOURce<n>:FUNCTION:PULSe:DCYCLE command.

Return Format

The query returns the current pulse width in scientific notation. The unit is s.

Example

```
:SOURce1:FUNCTION:PULSe:WIDTh 0.0001 /*Sets the pulse width of the
output pulse waveform of GI to 100 μs.*/
:SOURce1:FUNCTION:PULSe:WIDTh? /*The query returns
+1.0000000000000000E-04.*/
```

3.29.9 :SOURce<n>:FUNCTION:SQUare:DCYCLE**Syntax**

:SOURce<n>:FUNCTION:SQUare:DCYCLE <dcycle>

:SOURce<n>:FUNCTION:SQUare:DCYCLE?

Description

Sets or queries the duty cycle of the Square waveform from the specified function/arbitrary waveform generator channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<dcycle>	Real	10 to 90	50

Remarks

This command is only available when the waveform type (**:SOURce<n>:FUNCTION**) is "Square".

Return Format

The query returns the duty cycle of the Square waveform in scientific notation. For example, +5.5000000000000000E+01 (the duty cycle is 55%).

Example

```
:SOURce1:FUNCTION:SQUare:DCYCLE 55 /*Sets the duty cycle of the
Square waveform from GI to 55%.*/
:SOURce1:FUNCTION:SQUare:DCYCLE? /*The query returns
+5.5000000000000000E+01.*/
```

3.29.10 :SOURce<n>:FUNCTION:ARBitrary**Syntax**

:SOURce<n>:FUNCTION:ARBitrary <type>

:SOURce<n>:FUNCTION:ARBitrary?

Description

Sets or queries the built-in arbitrary waveform type output from the specified function/arbitrary waveform generator channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<type>	Discrete	{DC SINC EXPRISE EXP FALL ECG1 GAUSS LORENTZ HAVERSINE}	SINC

Remarks

This command is only available when the basic waveform type (:SOURce<n>:FUNctIon) is set to "ARB".

The built-in arbitrary waveforms include DC, Sinc, ExpRise, ExpFall, ECG1, Gauss, Lorentz, and Haversine.

To load an arbitrary waveform file, refer to :OUTPut<n>:LOAD.

Return Format

The query returns DC, SINC, EXPRISE, EXP FALL, ECG1, GAUSS, LORENTZ, and HAVERSINE.

Example

```
:SOURce1:FUNctIon:ARBitrary GAUSS /*Sets the basic waveform
output from GI to GAUSS.*/
:SOURce1:FUNctIon:ARBitrary? /*The query returns GAUSS.*/
```

3.29.11 :SOURce<n>:ARB:LOAD

Syntax

:SOURce<n>:ARB:LOAD <path>

Description

Loads the arbitrary waveform file from the specified path.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<path>	ASCII String	Refer to <i>Remarks</i>	-

Remarks

- The maximum arbitrary wave data length supported for loading is 16384 points.
- <path> includes the file storage location and the filename with a suffix.
- The local path is C:/; and the path of the external storage device is D:/.

Return Format

N/A

Example

```
:SOURce1:ARB:LOAD D:/123.csv /*Loads the arbitrary waveform file
named "123.csv" from the external storage device Disk D.*/*
```

3.29.12 :SOURce<n>:VOLTage**Syntax**

```
:SOURce<n>:VOLTage <volt>
```

```
:SOURce<n>:VOLTage?
```

Description

Sets or queries the amplitude of the signal output from the specified function/arbitrary waveform generator channel. By default, the unit is V.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	1
<volt>	Real	0.002 V to 10 V	5 V

Remarks

The range of the amplitude of the basic waveform is related to the output impedance and the waveform frequency.

- Output frequency $\leq$ 50 MHz:
2 mVpp to 20 Vpp (HighZ)
1 mVpp to 10 Vpp (50 Ω)
- Output frequency $\leq$ 100 MHz:
2 mVpp to 10 Vpp (HighZ)
1 mVpp to 5 Vpp (50 Ω)
- Output frequency $\leq$ 200 MHz:

2 mVpp to 4 Vpp (HighZ)

1 mVpp to 2 Vpp (50 Ω)

To set or query the output impedance, run the `:OUTPut<n>:LOAD` command.

Return Format

The query returns the amplitude of the basic waveform in scientific notation. The unit is V.

Example

```
:SOURce1:VOLTage 1 /*Sets the amplitude of the output basic
waveform of GI to 1 V.*/
:SOURce1:VOLTage? /*The query returns +1.000000000000000E+00.*/
```

3.29.13 :SOURce<n>:VOLTage:OFFSet

Syntax

`:SOURce<n>:VOLTage:OFFSet <offset>`

`:SOURce<n>:VOLTage:OFFSet?`

Description

Sets or queries the voltage offset of the basic waveform output from the specified function/arbitrary waveform generator channel. By default, the unit is V.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<offset>	Real	-5 V to 5 V	0 V

Remarks

Running this command will modify the offset of the output basic waveform, thus affecting the amplitude of the output basic waveform.

To set or query the amplitude of the basic waveform, run the `:SOURce<n>:VOLTage` command.

Offset Range = $\pm(\text{Max. Available Amplitude Value} - \text{Currently Set Amplitude Value})/2$

Return Format

The query returns the voltage offset of the basic waveform in scientific notation. The unit is V.

Example

```
:SOURce1:VOLTage:OFFSet 0.2 /*Sets the voltage offset of the output
basic waveform of GI to 200 mV.*/
```

```
:SOURce1:VOLTage:OFFSet? /*The query returns
+2.000000000000000E-01.*/
```

3.29.14 :SOURce<n>:VOLTage:HIGH

Syntax

```
:SOURce<n>:VOLTage:HIGH <value>
```

```
:SOURce<n>:VOLTage:HIGH?
```

Description

Sets or queries the high level of the basic waveform output from the specified function/arbitrary waveform generator channel. By default, the unit is V.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<value>	Real	-10 V to 10 V	2.5V

Remarks

High Level = Amplitude/2 + Offset

To set or query the amplitude of the basic waveform, run the `:SOURce<n>:VOLTage` command. To set or query the offset of the basic waveform, run the `:SOURce<n>:VOLTage:OFFSet` command.

Return Format

The query returns the high level of the basic waveform in scientific notation. The unit is V.

Example

```
:SOURce1:VOLTage:HIGH 1 /*Sets the high level of the output basic
waveform of GI to 1 V.*/
:SOURce1:VOLTage:HIGH? /*The query returns
+1.000000000000000E+00.*/
```

3.29.15 :SOURce<n>:VOLTage:LOW

Syntax

```
:SOURce<n>:VOLTage:LOW <value>
```

```
:SOURce<n>:VOLTage:LOW?
```

Description

Sets or queries the low level of the basic waveform output from the specified function/arbitrary waveform generator channel. By default, the unit is V.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<value>	Real	-10 V to 10 V	-2.5V

Remarks

Low Level = Offset - Amplitude/2

To set or query the amplitude of the basic waveform, run the `:SOURce<n>:VOLTage` command. To set or query the offset of the basic waveform, run the `:SOURce<n>:VOLTage:OFFSet` command.

Return Format

The query returns the low level of the basic waveform in scientific notation. The unit is V.

Example

```
:SOURce1:VOLTage:LOW 0.001 /*Sets the low level of the output basic
waveform of GI to 1 mV.*/
:SOURce1:VOLTage:LOW? /*The query returns
+1.0000000000000000E-03.*/
```

3.29.16 :SOURce<n>:FREQuency

Syntax

`:SOURce<n>:FREQuency <freq>`

`:SOURce<n>:FREQuency?`

Description

Sets or queries the frequency of the basic waveform.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<freq>	Real	Refer to <i>Remarks</i>	1 kHz

Remarks

- DC and Noise: no frequency parameter.
- Sine: 1 μHz to 200 MHz (with AFG200 option installed); 1 μHz to 50 MHz (with standard AFG50)

- Square: 1 μ Hz to 50 MHz (with AFG200 option installed); 1 μ Hz to 10 MHz (with standard AFG50)
- Ramp: 1 μ Hz to 5 MHz (with AFG200 option installed); 1 μ Hz to 2 MHz (with standard AFG50)
- Arb: 1 μ Hz to 50 MHz (with AFG200 option installed); 1 μ Hz to 20 MHz (with standard AFG50)
- Pulse: 1 μ Hz to 20 MHz (with AFG200 option installed); 1 μ Hz to 20 MHz (with standard AFG50)
- Built-in waveforms (except DC): 1 μ Hz to 50 MHz (with AFG200 option installed); 1 μ Hz to 20 MHz (with standard AFG50)

To set or query the type of the basic waveforms, run the *:SOURce<n>:FUNCTION* command.

Return Format

The query returns the frequency value in scientific notation. For example
+1.0000000000000000E+03.

Example

```
:SOURce1:FREQuency 1000 /*Sets the frequency of the basic waveform
of GI to 1 kHz.*/
:SOURce1:FREQuency? /*The query returns +1.0000000000000000E+03.*/
```

3.29.17 :SOURce<n>:PERiod[:FIXed]

Syntax

:SOURce<n>:PERiod[:FIXed] <value>

:SOURce<n>:PERiod[:FIXed] ?

Description

Sets or queries the period of the basic waveform output from the specified function/ arbitrary waveform generator channel. The unit is s.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<value>	Real	5 ns to 1 Ms	1 ms

Remarks

The period is the reciprocal of the frequency, and vice versa. To set or query the frequency of different waveform types, run the `:SOURce<n>:FREQuency` command.

Return Format

The query returns the period of the output waveform in scientific notation. The unit is s.

Example

```
:SOURce1:PERiod 1 /*Sets the period of the waveform output from GI
to 1 s.*/
:SOURce1:PERiod? /*The query returns +1.0000000000000000E+00.*/
```

3.29.18 :SOURce<n>:PHASe

Syntax

`:SOURce<n>:PHASe <phase>`

`:SOURce<n>:PHASe?`

Description

Sets or queries the start phase of the basic waveform output from the specified function/arbitrary waveform generator channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<phase>	Real	-360° to 360°	0°

Remarks

N/A

Return Format

The query returns the start phase of the waveform in scientific notation. For example, `+1.0000000000000000E+01` (the start phase of the waveform is 10°).

Example

```
:SOURce1:PHASe 10 /*Sets the start phase of the basic waveform
output from GI to 10°.*/
:SOURce1:PHASe? /*The query returns +1.0000000000000000E+01.*/
```

3.29.19 :SOURce<n>:PHASe:SYNChronize

Syntax

:SOURce<n>:PHASe:SYNChronize

Description

Performs the "align phase" operation.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-

Remarks

After running this command to perform the "align phase" operation, the instrument will re-configure the two Function/Arbitrary Waveform Generator channels to output according to the preset frequency and phase. If these two signals whose frequencies are identical or in multiple, performing this operation will align their phases.

Return Format

N/A

Example

```
:SOURce1:PHASe:SYNChronize /*Performs the "align phase" operation
on GI.*/
```

3.29.20 :SOURce<n>:AM:STATe

Syntax

:SOURce<n>:AM:STATe <bool>

:SOURce<n>:AM:STATe?

Description

Enables or disables the output of the AM modulation for the specified Function/Arbitrary Waveform Generator channel; queries the on/off status of the output of the AM modulation for the specified Function/Arbitrary Waveform Generator channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:SOURce1:AM:STATe ON /*Enables the output of the AM modulation for
GI.*/*
:SOURce1:AM:STATe? /*The query returns 1.*/*
```

3.29.21 :SOURce<n>:AM[:DEPTh]

Syntax

:SOURce<n>:AM[:DEPTh] <depth>

:SOURce<n>:AM[:DEPTh] ?

Description

Sets or queries the AM depth of the specified function/arbitrary waveform generator channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<depth>	Real	0% to 120%	100%

Remarks

Modulation depth indicates the amplitude variation. It is expressed in percentage.

- At 0% depth, the output amplitude is half of the carrier waveform amplitude.
- At 100% depth, the amplitude is identical to the carrier's amplitude setting.
- When the modulation depth is greater than 100%, envelope distortion will occur.

This should be avoided in actual circuit. At this time, the output of the instrument will not exceed 10 Vpp (on the 50 Ω load).

Return Format

The query returns the AM modulation depth in scientific notation. For example, 5.0000000000E+01 (the AM modulation depth is 50%).

Example

```
:SOURce1:AM:DEPTh 50 /*Sets the AM modulation depth of GI to 50%.*/
:SOURce1:AM:DEPTh? /*The query returns 5.0000000000E+01.*/
```

3.29.22 :SOURce<n>:AM:INternal:FREQuency**Syntax**

```
:SOURce<n>:AM:INternal:FREQuency <freq>
```

```
:SOURce<n>:AM:INternal:FREQuency?
```

Description

Sets or queries the AM modulation frequency of the specified function/arbitrary waveform generator channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<freq>	Real	2 mHz to 1 MHz	100 Hz

Remarks

N/A

Return Format

The query returns the AM modulation frequency in scientific notation. For example, 1.5000000000E+02 (the AM modulation frequency is 150 Hz).

Example

```
:SOURce1:AM:INternal:FREQuency 150 /*Sets the AM modulation
frequency of GI to 150 Hz.*/
:SOURce1:AM:INternal:FREQuency? /*The query 1.5000000000E
+02.*/
```

3.29.23 :SOURce<n>:AM:INternal:FUNcTion**Syntax**

```
:SOURce<n>:AM:INternal:FUNcTion <function>
```

```
:SOURce<n>:AM:INternal:FUNcTion?
```

Description

Sets or queries the AM modulation waveform of the specified function/arbitrary waveform generator channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<function>	Discrete	{SINusoid SQUare TRIangle UPRamp DNRamp NOISe}	SINusoid

Remarks

- **SINusoid**: sine waveform.
- **SQUare**: square waveform with the duty cycle of 50%.
- **TRIangle**: triangle waveform with the 50% symmetry.
- **UPRamp**: upramp waveform with the 100% symmetry.
- **UPRamp**: downramp waveform with the 0% symmetry.
- **NOISe**: noise waveform.

Return Format

The query returns SIN, SQU, TRI, UPR, DNR, or NOIS.

Example

```
:SOURce1:AM:INTernal:FUNCTion SQUare /*Sets the AM modulation
waveform of GI to Square.*/
:SOURce1:AM:INTernal:FUNCTion? /*The query returns SQU.*/
```

3.29.24 :SOURce<n>:AM:DSSC

Syntax

```
:SOURce<n>:AM:DSSC <bool>
```

```
:SOURce<n>:AM:DSSC?
```

Description

Sets or queries the on/off status of DSSC of the AM modulation for the specified function/arbitrary waveform generator channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:SOURce1:AM:DSSC ON /*Enables the DSSC of the AM modulation for
GI.*/
:SOURce1:AM:DSSC? /*The query returns 1.*/
```

3.29.25 :SOURce<n>:FM:STaTe**Syntax**

```
:SOURce<n>:FM:STaTe <bool>
```

```
:SOURce<n>:FM:STaTe?
```

Description

Enables or disables the output of the FM modulation for the specified Function/Arbitrary Waveform Generator channel; queries the on/off status of the output of the FM modulation for the specified Function/Arbitrary Waveform Generator channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:SOURce:FM:STaTe ON /*Enables the output of the FM modulation for
GI.*/
:SOURce:FM:STaTe? /*The query returns 1.*/
```

3.29.26 :SOURce<n>:FM:DEVIation**Syntax**

```
:SOURce<n>:FM:DEVIation <deviation>
```

```
:SOURce<n>:FM:DEVIation?
```

Description

Sets or queries the FM frequency offset of the specified function/arbitrary waveform generator channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<deviation>	Real	1 μ Hz to current carrier frequency	100 Hz

Remarks

- The frequency deviation is the deviation of the frequency of the modulating waveform from that of the carrier waveform.
- The sum of frequency deviation and carrier frequency must be smaller than or equal to the sum of upper limit of the current carrier frequency and 1 kHz.
- For different modulation types, the ranges of the frequencies of the different carrier waveforms (refer to `:SOURce<n>:FREQuency`) are different.

Return Format

The query returns the frequency deviation in scientific notation.

Example

```
:SOURce1:FM:DEVIation 50      /*Sets FM frequency deviation of GI to
50 Hz.*/
:SOURce1:FM:DEVIation?       /*The query returns 5.000000E+01.*/
```

3.29.27 :SOURce<n>:FM:INTernal:FREQuency

Syntax

```
:SOURce<n>:FM:INTernal:FREQuency <freq>
```

```
:SOURce<n>:FM:INTernal:FREQuency?
```

Description

Sets or queries the FM modulation frequency of the specified function/arbitrary waveform generator channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<freq>	Real	2 mHz to 1 MHz	100 Hz

Remarks

N/A

Return Format

The query returns the FM modulation frequency in scientific notation. For example, 1.5000000000E+02 (the FM modulation frequency is 150 Hz).

Example

```
:SOURce1:FM:INTernal:FREQuency 150 /*Sets the FM modulation
frequency of GI to 150 Hz.*/
:SOURce1:FM:INTernal:FREQuency? /*The query 1.5000000000E
+02.*/
```

3.29.28 :SOURce<n>:FM:INTernal:FUNction**Syntax**

:SOURce<n>:FM:INTernal:FUNction <function>

:SOURce<n>:FM:INTernal:FUNction?

Description

Sets or queries the FM modulation waveform of the specified function/arbitrary waveform generator channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<function>	Discrete	{SINusoid SQUare TRIangle UPRamp DNRamp NOISe}	SINusoid

Remarks

- **SINusoid**: sine waveform.
- **SQUare**: square waveform with the duty cycle of 50%.
- **TRIangle**: triangle waveform with the 50% symmetry.
- **UPRamp**: upramp waveform with the 100% symmetry.

- **UPRamp:** downramp waveform with the 0% symmetry.
- **NOISe:** noise waveform.

Return Format

The query returns SIN, SQU, TRI, UPR, DNR, or NOIS.

Example

```
:SOURce1:FM:INTernal:FUNCTion SQUare /*Sets the FM modulation
waveform of GI to Square.*/
:SOURce1:FM:INTernal:FUNCTion? /*The query returns SQU.*/
```

3.29.29 :SOURce<n>:PM:STATe

Syntax

:SOURce<n>:PM:STATe <bool>

:SOURce<n>:PM:STATe?

Description

Enables or disables the output of the PM modulation for the specified Function/Arbitrary Waveform Generator channel; queries the on/off status of the output of the PM modulation for the specified AFG channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:SOURce1:PM:STATe ON /*Enables the output of the PM modulation for
GI.*/
:SOURce1:PM:STATe? /*The query returns 1.*/
```

3.29.30 :SOURce<n>:PM:DEVIation

Syntax

:SOURce<n>:PM:DEVIation <deviation>

:SOURce< n>:PM:DEVIation?

Description

Sets or queries the PM phase deviation of the specified function/arbitrary waveform generator channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<deviation>	Real	0° to 360°	90°

Remarks

Phase deviation indicates the deviation of the modulating waveform phase from the carrier waveform phase.

Return Format

The query returns the PM phase deviation in scientific notation. For example, +5.000000000000000E+01 (the PM phase deviation is 50°).

Example

```
:SOURce1:PM:DEVIation 50 /*Sets the PM phase deviation of GI to 50°.*/  
:SOURce1:PM:DEVIation? /*The query returns +5.000000000000000E+01.*/
```

3.29.31 :SOURce<n>:PM:INTernal:FREQuency

Syntax

:SOURce< n>:PM:INTernal:FREQuency <freq>

:SOURce< n>:PM:INTernal:FREQuency?

Description

Sets or queries the PM modulation frequency of the specified function/arbitrary waveform generator channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<freq>	Real	2 mHz to 1 MHz	100 Hz

Remarks

N/A

Return Format

The query returns the PM modulation frequency in scientific notation. For example, +1.5000000000000000E+02 (the PM modulation frequency is 150 Hz).

Example

```
:SOURce1:PM:INTernal:FREQuency 150      /*Sets the PM modulation
frequency of GI to 150 Hz.*/
:SOURce1:PM:INTernal:FREQuency?          /*The query returns
+1.5000000000000000E+02.*/
```

3.29.32 :SOURce<n>:PM:INTernal:FUNCTion

Syntax

:SOURce<n>:PM:INTernal:FUNCTion <function>

:SOURce<n>:PM:INTernal:FUNCTion?

Description

Sets or queries the PM modulation waveform of the specified function/arbitrary waveform generator channel.

Parameter

Name	Type	Range	Default
<n>	Discrete	{1 2}	-
<function>	Discrete	{SINusoid SQUare TRIangle UPRamp DNRamp NOISe}	SINusoid

Remarks

- **SINusoid**: sine waveform.
- **SQUare**: square waveform with the duty cycle of 50%.
- **TRIangle**: triangle waveform with the 50% symmetry.
- **UPRamp**: upramp waveform with the 100% symmetry.
- **UPRamp**: downramp waveform with the 0% symmetry.
- **NOISe**: noise waveform.

Return Format

The query returns SIN, SQU, TRI, UPR, DNR, or NOIS.

Example

```
:SOURce1:PM:INTernal:FUNCTion SQUare /*Sets the PM modulation
waveform of Source 1 to Square.*/
:SOURce1:PM:INTernal:FUNCTion? /*The query returns SQU.*/
```

3.30 :SYSTem Commands

The :SYSTem commands are used to set the system-related parameters.

3.30.1 :SYSTem:AOUTput

Syntax

```
:SYSTem:AOUTput <auxoutput>
:SYSTem:AOUTput?
```

Description

Sets or queries the type of the signal output from the rear-panel [AUX OUT] connector.

Parameter

Name	Type	Range	Default
<auxoutput>	Discrete	{TOUT PFAil}	TOUT

Remarks

- **TOUT:** after you select this type, the oscilloscope initiates a trigger and then a signal which reflects the current capture rate of the oscilloscope can be output from the connector.
- **PFAil:** after you select this type, a pulse signal will be output from the connector once the oscilloscope detects a successful or failed event.

Return Format

The query returns TOUT or PFA.

Example

```
:SYSTem:AOUTput PFAil /*Sets the signal type to PFAil.*/
:SYSTem:AOUTput? /*The query returns PFA.*/
```

3.30.2 :SYSTem:LANGuage

Syntax

```
:SYSTem:LANGuage <language>
:SYSTem:LANGuage?
```


Description

Sets or queries the system language.

Parameter

Name	Type	Range	Default
<language>	Discrete	{SCHinese TCHinese KORean JAPanese ENGLish GERMan PORTuguese POLish FRENch RUSSian SPAN THAI INDonesian}	SCHinese

Remarks

The language settings are not affected by factory default settings (send the **RST* command).

Return Format

The query returns SCH, TCH, KOR, JAP, ENGL, GERM, PORT, POL, FREN, RUSS, SPAN, THAI, or IND.

Example

```
:SYSTem:LANGuage ENGLish    /*Sets the system language to ENGLISH.*/  
:SYSTem:LANGuage?           /*The query returns ENGL.*/*
```

3.30.3 :SYSTem:BEEPer

Syntax

```
:SYSTem:BEEPer <bool>
```

```
:SYSTem:BEEPer?
```

Description

Turns on or off the beeper or queries the on/off status of the beeper.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:SYSTem:BEEPer ON      /*Enables the beeper.*/
:SYSTem:BEEPer?        /*The query returns 1.*/
```

3.30.4 :SYSTem:DATE**Syntax**

:SYSTem:DATE <year>,<month>,<day>

:SYSTem:DATE?

Description

Sets or queries the system date.

Parameter

Name	Type	Range	Default
<year>	Integer	1900 to 2100	-
<month>	Integer	1 to 12	-
<day>	Integer	1 to 31 (28, 29, or 30)	-

Remarks

N/A

Return Format

The query returns the system date in strings. The year, month, and date are separated by commas.

Example

```
:SYSTem:DATE 2017,10,17      /*Sets the system date to
2017/10/17.*/
:SYSTem:DATE?                /*The query returns 2017,10,17.*/
```

3.30.5 :SYSTem:ERRor[:NEXT]?**Syntax**

:SYSTem:ERRor[:NEXT]?

Description

Queries and clears the error queue message.

Parameter

N/A

Remarks

N/A

Return Format

The query is in <Message Number>, <Message Content> format. Wherein, <Message Number> is an integer; <Message Content> is a double-quoted ASCII string. For example, -113, "Undefined header; command cannot be found".

Example

N/A

3.30.6 :SYSTem:RCLock

Syntax

:SYSTem:RCLock <clock>

:SYSTem:RCLock?

Description

Sets or queries the type of the 10M reference clock.

Parameter

Name	Type	Range	Default
<clock>	Discrete	{OFF COUtput CINPut}	-

Remarks

- **OFF:** disables the 10M reference clock.
- **COUtput:** indicates the clock output. The oscilloscope outputs the internal 10 MHz clock signal from the rear-panel **[10 MHz REF OUT]** connector.
- **CINPut:** indicates the clock input. The oscilloscope receives the external 10 MHz signal input from the rear-panel **[10 MHz REF IN]** connector as the clock signal.

Return Format

The query returns OFF, COU, or CINP.

Example

```
:SYSTem:RCLock CINPut /*Sets the type of the reference clock to  
CINPut.*/  
:SYSTem:RCLock? /*The query returns CINP.*/*
```

3.30.7 :SYSTem:PON

Syntax

```
:SYSTem:PON <power_on>
```

```
:SYSTem:PON?
```

Description

Sets or queries the configuration type recalled by the oscilloscope when it is powered on again after power-off.

Parameter

Name	Type	Range	Default
<power_on>	Discrete	{LATest DEFault}	DEFault

Remarks

N/A

Return Format

The query returns LAT or DEF.

Example

```
:SYSTem:PON LATest /*Sets the oscilloscope to recall Last
value after it is powered on again.*/
:SYSTem:PON? /*The query returns LAT.*/
```

3.30.8 :SYSTem:PStatus

Syntax

```
:SYSTem:PStatus <sat>
```

```
:SYSTem:PStatus?
```

Description

Sets or queries the power status of the instrument.

Parameter

Name	Type	Range	Default
<sat>	Discrete	{DEFault OPEN}	OPEN

Remarks

- **DEFault:** after the instrument is powered on, you need to press the Power key on the front panel to start the instrument.

- **OPEN:** after the instrument is powered on, it starts directly. You do not have to press the Power key.

Return Format

The query returns DEF or OPEN.

Example

```
:SYSTem:PSTatus DEFault      /*Sets the power status to DEFault.*/
:SYSTem:PSTatus?              /*The query returns DEF.*/
```

3.30.9 :SYSTem:OPTion:INSTall

Syntax

:SYSTem:OPTion:INSTall <license>

Description

Installs an option.

Parameter

Name	Type	Range	Default
<license>	ASCII String	Refer to <i>Remarks</i>	-

Remarks

- To install the option, first purchase the required option to obtain the key, and then use the key to obtain the option license according to the following steps.
 - Log in to the RIGOL official website (<http://www.rigol.com>). Click **SERVICE CENTRE (or Products & Services) > License Activation** to enter the license activation interface.
 - Input the correct key, serial number (To obtain the serial number, click or tap the function navigation icon at the lower-left corner of the screen first, then click or tap **Utility**. Click or tap **About** to acquire the serial number of the instrument.), verification code. Click Generate to acquire the download link for the option license file. If you need to use the option license file, click to download the file to the specified directory of the USB storage device.
- The <license> format is "<series>-<opt>@<code>".
 - **<series>**: indicates the product series.

- **<opt>**: indicates the option name. The options supported include:
 - **AUTOA**: auto serial bus trigger and analysis (CAN-FD, LIN).
 - **FlexA**: FlexRay serial bus trigger and analysis option (FlexRay).
 - **AUDIOA**: audio serial bus trigger and analysis option (I2S).
 - **AEROA**: MIL-STD-1553B bus trigger and analysis option (MIL-STD-1553B).
 - **RLU20**: 500 Mpts-2 Gpts memory depth option.
 - **SENTA**: SENT serial bus decoding analysis option.
 - **AFG200**: built-in dual-channel 200 MHz Function/Arbitrary Waveform Generator option.
 - **JITTA**: eye diagram and jitter analysis option (DS9202 is not supported).
 - **EYEA**: eye diagram analysis option (For DS9202 only).
 - **PWRA**: power analysis option (PC software).
 - **USBSQA**: USB2.0 protocol signal quality test (PC software).
 - **DPHY12C**: MIPI D-PHY v1.2 compliance test (PC software).
 - **AUTOC**: automotive ethernet protocol compliance test (PC software).
 - **ENETC**: 100/1000 M ethernet protocol compliance test (PC software).
- **<code>**: The license is a fixed length of strings. Each instrument has a unique license.

Return Format

N/A

Example

```
:SYSTem:OPTion:INSTall DS9000-
AUDIOA@f162e40cbb94492625262381e9e29323387cbc29bd9d7bae2dcbe99780070
0b983826c9b35d3c56d83a6e35cfcc51d03
```

3.30.10 :SYSTem:OPTion:UNINStall

Syntax

```
:SYSTem:OPTion:UNINStall
```

Description

Uninstalls all the official options.

Parameter

N/A

Remarks

After the option has been uninstalled, you need to restart the instrument.

Return Format

N/A

Example

N/A

3.30.11 :SYSTem:OPTion:STATus?

Syntax

:SYSTem:OPTion:STATus? <type>

Description

Queries whether an option is activated or not.

Parameter

Name	Type	Range	Default
<type>	Discrete	{AUTOA AUDIOA FlexA AEROA RLU20 SENTA JITTA EYEA AFG200 PWRA USBSQA DPHY12C AUTOC ENETC}	-

Remarks

- **AUTOA:** auto serial bus trigger and analysis (CAN-FD, LIN).
- **FlexA:** FlexRay serial bus trigger and analysis option (FlexRay).
- **AUDIOA:** audio serial bus trigger and analysis option (I2S).
- **AEROA:** MIL-STD-1553B bus trigger and analysis option (MIL-STD-1553B).
- **RLU20:** 500 Mpts-2 Gpts memory depth option.
- **SENTA:** SENT serial bus decoding analysis option.

- **AFG200:** built-in dual-channel 200 MHz Function/Arbitrary Waveform Generator option.
- **JITTA:** eye diagram and jitter analysis option (DS9202 is not supported).
- **EYEA:** eye diagram analysis option (For DS9202 only).
- **PWRA:** power analysis option (PC software).
- **USBSQA:** USB2.0 protocol signal quality test (PC software).
- **DPHY12C:** MIPI D-PHY v1.2 compliance test (PC software).
- **AUTOC:** automotive ethernet protocol compliance test (PC software).
- **ENETC:** 100/1000 M ethernet protocol compliance test (PC software).

Return Format

The query returns 0 or 1.

- 0: indicates that the option is not installed.
- 1: indicates that the official option has been installed.

Example

N/A

3.30.12 :SYSTem:OPTion:VALid?

Syntax

:SYSTem:OPTion:VALid? <type>

Description

Queries whether an option is activated or not.

This command exists for backwards compatibility. Use the command *:SYSTem:OPTion:STATus?*.

Parameter

Name	Type	Range	Default
<type>	Discrete	{AUTOA AUDIOA FlexA AEROA RLU20 SENTA JITTA EYEA AFG200 PWRA USBSQA DPHY12C AUTOC ENETC}	-

Remarks

- **AUTOA:** auto serial bus trigger and analysis (CAN-FD, LIN).
- **FlexA:** FlexRay serial bus trigger and analysis option (FlexRay).
- **AUDIOA:** audio serial bus trigger and analysis option (I2S).
- **AEROA:** MIL-STD-1553B bus trigger and analysis option (MIL-STD-1553B).
- **RLU20:** 500 Mpts-2 Gpts memory depth option.
- **SENTA:** SENT serial bus decoding analysis option.
- **AFG200:** built-in dual-channel 200 MHz Function/Arbitrary Waveform Generator option.
- **JITTA:** eye diagram and jitter analysis option (DS9202 is not supported).
- **EYEA:** eye diagram analysis option (For DS9202 only).
- **PWRA:** power analysis option (PC software).
- **USBSQA:** USB2.0 protocol signal quality test (PC software).
- **DPHY12C:** MIPI D-PHY v1.2 compliance test (PC software).
- **AUTOE:** automotive ethernet protocol compliance test (PC software).
- **ENETC:** 100/1000 M ethernet protocol compliance test (PC software).

Return Format

The query returns 0 or 1.

- 0: indicates that the option is not installed.
- 1: indicates that the official option has been installed.

Example

N/A

3.30.13 :SYSTem:RAMount?

Syntax

:SYSTem:RAMount?

Description

Queries the number of analog channels of the current instrument.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the number of analog channels of the current instrument in integer.

Example

N/A

3.30.14 :SYSTem:RESet

Syntax`:SYSTem:RESet`**Description**

Resets the system to power on.

Parameter

N/A

Remarks

N/A

Return Format

N/A

Example

N/A

3.30.15 :SYSTem:SETup

Syntax`:SYSTem:SETup <setup_data>``:SYSTem:SETup?`**Description**

Sends or reads the data stream of the system setup file.

Parameter

Name	Type	Range	Default
<setup_data>	Binary	Refer to <i>Remarks</i>	-

Remarks

- <setup_data> is a binary data block, which consists of the TMC data block header and setup data.
 - The format of the TMC data block header is #NX...X. Wherein, # is the start identifier of the data stream; the N-digit data "X...X" ($N \leq 9$) following the start identifier indicate the length of the data stream (the number of bytes).
For example, #9000002506
Wherein, N is 9, 000002506 following it represents that the data stream contains 2506 bytes of effective data.
 - The setup data are expressed in ASCII format.
- When sending the command, directly place the data stream after the command string, then complete the whole sending process in one time. When reading the data stream, ensure that there is enough buffer space to receive the data stream; otherwise, errors might occur in reading the program.

Return Format

N/A

Example

N/A

3.30.16 :SYSTem:TIME

Syntax

:SYSTem:TIME <hours>,<minutes>,<seconds>

:SYSTem:TIME?

Description

Sets or queries the system time.

Parameter

Name	Type	Range	Default
<hours>	Integer	0 to 23	-
<minutes>	Integer	0 to 59	-

Name	Type	Range	Default
<seconds>	Integer	0 to 59	-

Remarks

There is a certain delay between the return time value and the set time value due to the command response time and other factors.

Return Format

The query returns the system time in strings.

Example

```
:SYSTem:TIME 16,10,17      /*Sets the system time to 16:10:17.*/
:SYSTem:TIME?              /*The query returns 16:10:17.*/
```

3.30.17 :SYSTem:LOCKed

Syntax

:SYSTem:LOCKed <bool>

:SYSTem:LOCKed?

Description

Enables or disables the front-panel key operation and touch screen operation; queries whether the front-panel key operation and touch screen operation are locked.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:SYSTem:LOCKed ON          /*Disables the front-panel key operation
and touch screen operation.*/
:SYSTem:LOCKed?            /*The query returns 1.*/
```

3.30.18 :SYSTem:MODules?

Syntax

:SYSTem:MODules?

Description

Queries the hardware modules.

Parameter

N/A

Remarks

N/A

Return Format

The query returns 1,0,0,0,0. The first figure indicates LA; the second figure indicates DG; and the others are not defined currently. 1 indicates available, and 0 indicates not available.

Example

N/A

3.30.19 :SYSTem:AUToscale

Syntax

:SYSTem:AUToscale <bool>

:SYSTem:AUToscale?

Description

Enables or disables the function of the Auto menu; or queries the on/off status of the Auto menu.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	1 ON

Remarks

- You can send this command or use the menu key to disable the function of the **AUTO** key.
- After the function of the **AUTO** key is disabled, you cannot perform the Auto Scale operation.

Return Format

The query returns 1 or 0.

Example

```
:SYSTem:AUToscale ON      /*Enables the function of the front-panel
AUTO key.*/
:SYSTem:AUToscale?        /*The query returns 1.*/
```

3.30.20 :SYSTem:KEY:PRESSs**Syntax**

```
:SYSTem:KEY:PRESSs <key>
```

Description

Press the specified key on the front panel of the oscilloscope.

Parameter

Name	Type	Range	Default
<key>	Discrete	{CH1 CH2 CH3 CH4 VPOsition VSCale HSCale HPOsition TLEVel DEFault CLEar AUTO RSTop SINGle QUICK CURSor FORCe TOUCH ZOOM SLOPe}	-

Remarks

- CH1|CH2|CH3|CH4|VPOsition|VSCale|HSCale|HPOsition|TLEVel|DEFault|CLEar|AUTO|RSTop|SINGle|QUICK|CURSor|FORCe|TOUCH|ZOOM|SLOPe: press the specified key on the front panel.
- VSCale: press down the vertical scale knob, that is, switch the vertical scale to "Coarse" or "Fine" .
- HSCale: press down the horizontal time base adjustment knob, that is, switch the horizontal time base to "Coarse" or "Fine" .
- HPOsition: press down the horizontal position adjustment knob, that is, set the horizontal position to 0.
- VPOsition: press down the vertical offset adjustment knob, that is, set the vertical offset to 0.
- TLEVel: press down the trigger level adjustment knob, that is, set the trigger level to 50% of the peak-peak value.

- DEFault: press the **DEFAULT** key to restore the oscilloscope to factory default settings.
- CLear: press the **CLEAR** key to clear all waveforms on the screen.
- AUTO: press the **AUTO** key to enable the automatic waveform setup.
- RSTop: press the **RUN/STOP** key.
- SINGle: press the **SINGLE** key.
- QUICk: press the **QUICK** key.
- CURSor: press the **CURSOR** key.
- FORCe: press the **FORCE** key.
- TOUCh: press the **TOUCH** key.
- ZOOM: press the **ZOOM** key.
- SLOPe: press the **SLOPE** key.

Example

```
:SYSTem:KEY:PRESS CH1 /* Press the CH1 key on the front panel of  
the oscilloscope.*/
```

3.30.21 :SYSTem:GAMount?

Syntax

```
:SYSTem:GAMount?
```

Description

Queries the number of grids in the horizontal direction of the screen.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the number of grids in integer. For this oscilloscope, the query returns a fixed value 10.

Example

```
N/A
```

3.30.22 :SYSTem:STIMe

Syntax

`:SYSTem:STIMe <bool>`

`:SYSTem:STIMe?`

Description

Sets or queries whether to display the system time.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	1 ON

Remarks

N/A

Return Format

The query returns 0 or 1.

Example

```
:SYSTem:STIMe ON          /*Sets to display the system time.*/  
:SYSTem:STIMe?           /*The query returns 1.*/
```

3.30.23 :SYSTem:VERSion?

Syntax

`:SYSTem:VERSion?`

Description

Queries the version number of the SCPI used by the system.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the SCPI version number in strings.

Example

```
:SYSTem:VERSion? /*The query returns 3.0 */
```


3.31 :TIMebase Commands

:TIMebase commands are used to set the horizontal system. For example, you can enable the Zoom mode or set the horizontal time base mode.

Horizontal Time Base Mode

- **YT Mode:** By default, this series oscilloscope uses the YT mode for waveform display window. In YT mode, Y-axis indicates the Voltage and X-axis indicates the Time.
- **XY Mode:** In XY mode, both the X-axis and Y-axis indicate voltage. The XY mode converts the oscilloscope from a "Voltage-Time" display to a "Voltage-Voltage" display using two input channels. The XY mode can be used to measure the phase deviation occurred when the signal under test passes through a circuit network.
- **Roll Mode:** The roll mode causes the waveform to move across the screen from right to left. It allows you to view the acquired data without waiting for a complete acquisition. The Roll mode is automatically enabled when the horizontal time base is set to 50 ms/div or slower.



TIP

- If the Zoom mode is currently turned on, enabling the roll mode automatically turns off the Zoom mode.
- The following functions are not available when the roll mode is enabled: To Adjust the Horizontal Position (available when the oscilloscope run state is STOP), Zoom Mode (Delayed Sweep), Triggering the Oscilloscope, Protocol Decoding, Pass/Fail Test, Waveform Recording and Playing, Persistence Time, XY Mode, Average, Histogram, and Search function.

3.31.1 :TIMebase:DElay:ENABle

Syntax

:TIMebase:DElay:ENABle <bool>

:TIMebase:DElay:ENABle?

Description

Turns on or off the delayed sweep; or queries the on/off status of the delayed sweep.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

Delayed sweep can be used to enlarge a length of waveform horizontally to view waveform details.

Return Format

The query returns 1 or 0.

Example

```
:TIMEbase:DElay:ENABle ON      /*Enables the delayed sweep.*/
:TIMEbase:DElay:ENABle?        /*The query returns 1.*/
```

3.31.2 :TIMEbase:DElay:OFFSet

Syntax

```
:TIMEbase:DElay:OFFSet <offset>
```

```
:TIMEbase:DElay:OFFSet?
```

Description

Sets or queries the offset of the delayed time base.

Parameter

Name	Type	Range	Default
<offset>	Real	-(LeftTime - DelayRange/2) to (RightTime - DelayRange/2)	0

Remarks

$\text{LeftTime} = 5 \times \text{MainScale} - \text{MainOffset}$

$\text{RightTime} = 5 \times \text{MainScale} + \text{MainOffset}$

$\text{DelayRange} = 10 \times \text{DelayScale}$

Wherein, MainScale indicates the current main time base scale, MainOffset indicates the current main time base offset, and

DelayScale indicates the current delay time base scale.

Return Format

The query returns the offset of the delayed time base in scientific notation.

Example

```
:TImebase:DElay:OFFSet 0.000002 /*Sets the offset of the delayed
time base to 2  $\mu$ s.*/
:TImebase:DElay:OFFSet? /*The query returns 2.000000E-6.*/
```

3.31.3 :TImebase:DElay:SCALE**Syntax**

```
:TImebase:DElay:SCALE <scale>
```

```
:TImebase:DElay:SCALE?
```

Description

Sets or queries the scale of the delayed time base. The default unit is s/div.

Parameter

Name	Type	Range	Default
<scale>	Real	Refer to <i>Remarks</i>	

Remarks

- The maximum value of the parameter <scale> is the current scale of the main time base.
- The delayed time base scale can only be the maximum value or the values acquired by reducing the maximum value at 1-2-5 step. If the minimum value calculated according to the above formula is not one of the settable values, take the minimum settable value that is greater than the minimum value calculated.
- The default value of the delayed time base scale is determined by the scale in Main mode and its value is the next scale value in Main mode.

Return Format

The query returns the scale of the delayed time base in scientific notation.

Example

```
:TImebase:DElay:SCALE 0.00000005 /*Sets the scale of the delayed
time base to 50 ns/div.*/
:TImebase:DElay:SCALE? /*The query returns 5.000000E-8.*/
```

3.31.4 :TImebase[:MAIN][:OFFSet]**Syntax**

```
:TImebase[:MAIN][:OFFSet] <offset>
```

```
:TImebase[:MAIN][:OFFSet]?
```

Description

Sets or queries the offset of the main time base. The default unit is s.

Parameter

Name	Type	Range	Default
<offset>	Real	Refer to <i>Remarks</i>	0

Remarks

- In RUN state, the offset of the main time base is from 5 ks to $-\text{memdepth} / 2 / \text{sample rate}$.
- In Stop state, the offset of the main time base is as follows:
 Min. = $\min(-1\text{s}, -\text{memdepth} / 2 / \text{sample rate})$;
 Max. = $\min(1\text{s}, \text{memdepth} / 2 / \text{sample rate})$

Return Format

The query returns the offset of the main time base in scientific notation.

Example

```
:TIMEbase:MAIN:OFFSet 0.0002 /*Sets the offset of the main time
base to 200 μs.*/
:TIMEbase:MAIN:OFFSet? /*The query returns 2.000000E-4.*/
```

3.31.5 :TIMEbase[:MAIN]:SCALE

Syntax

```
:TIMEbase[:MAIN]:SCALE <scale>
```

```
:TIMEbase[:MAIN]:SCALE?
```

Description

Sets or queries the main time base scale.

Parameter

Name	Type	Range	Default
<scale>	Real	Refer to <i>Remarks</i>	50 ns/div

Remarks

The range of <scale> is related to the bandwidth of the oscilloscope and the horizontal time base mode.

Return Format

The query returns the main time base scale in scientific notation.

Example

```
:TIMEbase:MAIN:SCALE 0.0002 /*Sets the main time base scale to
200 ps/div.*/
:TIMEbase:MAIN:SCALE? /*The query returns 2.000000E-4.*/
```

3.31.6 :TIMEbase:MODE**Syntax**

```
:TIMEbase:MODE <mode>
```

```
:TIMEbase:MODE?
```

Description

Sets or queries the horizontal time base mode.

Parameter

Name	Type	Range	Default
<mode>	Discrete	{MAIN XY ROLL}	MAIN

Remarks

- **MAIN:** indicates the current time base mode. When you send the `:TIMEbase:MODE MAIN` command, the time base is set to YT mode.
- **XY:** indicates the XY mode. After performing the command `:TIMEbase:MODE XY` to configure the XY mode, you can send the query command `:TIMEbase:MODE?` to query the time base mode. The query returns MAIN.
- **ROLL:** roll mode.

For different time base modes, refer to *Horizontal Time Base Mode*.

Return Format

The query returns MAIN or ROLL.

Example

```
:TIMEbase:MODE ROLL /*Sets the horizontal time base mode to
ROLL.*/
:TIMEbase:MODE? /*The query returns ROLL.*/
```

3.31.7 :TIMEbase:HREference:MODE**Syntax**

```
:TIMEbase:HREference:MODE <href>
```

```
:TIMEbase:HREference:MODE?
```

Description

Sets or queries the horizontal reference mode.

Parameter

Name	Type	Range	Default
<href>	Discrete	{CENTer LB RB TRIG USER}	CENTer

Remarks

- **CENTer:** when the horizontal time base is modified, the waveform displayed will be expanded or compressed horizontally relative to the screen center.
- **LB:** when the horizontal time base is modified, the waveform displayed will be expanded or compressed relative to the left border of the screen.
- **RB:** when the horizontal time base is modified, the waveform displayed will be expanded or compressed relative to the right border of the screen.
- **TRIG:** when the horizontal time base is modified, the waveform displayed will be expanded or compressed horizontally relative to the trigger position.
- **USER:** when the horizontal time base is modified, the waveform displayed will be expanded or compressed horizontally relative to the user-defined reference position.

Return Format

The query returns CENT, LB, RB, TRIG, or USER.

Example

```
:TIMebase:HREference:MODE TRIG /*Sets the horizontal
reference mode to trigger position.*/
:TIMebase:HREference:MODE? /*The query returns TRIG.*/
```

3.31.8 :TIMebase:HREference:POSition

Syntax

```
:TIMebase:HREference:POSition <pos>
:TIMebase:HREference:POSition?
```

Description

Sets or queries the user-defined reference position when the waveforms are expanded or compressed horizontally.

Parameter

Name	Type	Range	Default
<pos>	Integer	-500 to 500	0

Remarks

When <pos> is set to -500, the reference position is the leftmost side of the screen.
When <pos> is set to 500, the reference position is the rightmost side of the screen.

Return Format

The query returns an integer ranging from -500 to 500.

Example

```
:TImEbase:HREFeRence:POSiTion 60      /*Sets the user-defined  
reference position to 60.*/  
:TImEbase:HREFeRence:POSiTion?        /*The query returns  
60.*/
```

3.31.9 :TImEbase:VERNIer

Syntax

:TImEbase:VERNIer <bool>

:TImEbase:VERNIer?

Description

Enables or disables the fine adjustment function of the horizontal scale; or queries the on/off status of the fine adjustment function of the horizontal scale.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}} {0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 1 or 0.

Example

```
:TImEbase:VERNIer ON      /*Sets the fine adjustment function  
of the horizontal scale to ON.*/  
:TImEbase:VERNIer?        /*The query returns 1.*/
```

3.31.10 :TImebase:HOTKeys

Syntax

:TImebase:HOTKeys <action>

Description

Sets the running status.

Parameter

Name	Type	Range	Default
<action>	Discrete	{STOP RUN SINGLe}	-

Remarks

- **STOP**: stops the measurement.
- **RUN**: runs the measurement.
- **SINGLe**: indicates the single trigger measurement.

Return Format

N/A

Example

```
:TImebase:HOTKeys RUN /*Sets the operating status to RUN.*/
```

3.31.11 :TImebase:ROLL

Syntax

:TImebase:ROLL <value>

:TImebase:ROLL?

Description

Sets or queries the status of the ROLL mode.

Parameter

Name	Type	Range	Default
<value>	Integer	{0 1}	1

Remarks

- **0**: disables the Auto ROLL mode.

- **1:** enables the Auto ROLL mode. The system enters the ROLL mode automatically when the time base is greater than or equal to 50 ms.

Return Format

The query returns 0 or 1.

Example

```
:TImEbase:ROLL 0      /*Disables the ROLL mode.*/
:TImEbase:ROLL?       /*The query returns 0.*/
```

3.31.12 :TImEbase:XY:ENABle

Syntax

:TImEbase:XY:ENABle <bool>

:TImEbase:XY:ENABle?

Description

Enables or disables the XY mode; or queries the on/off status of the XY mode.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

N/A

Return Format

The query returns 0 or 1.

Example

```
:TImEbase:XY:ENABle OFF /*Disables the XY mode.*/
:TImEbase:XY:ENABle?    /*The query returns 0.*/
```

3.31.13 :TImEbase:XY:X

Syntax

:TImEbase:XY:X <S>

:TImEbase:XY:X?

Description

Sets or queries the source channel of X coordinate when the horizontal time base mode is XY.

Parameter

Name	Type	Range	Default
<S>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

N/A

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4.

Example

```
:TImEbase:XY:X CHANnel3 /*Sets the source channel of X
coordinate to CHANnel3.*/
:TImEbase:XY:X? /*The query returns CHAN3.*/
```

3.31.14 :TImEbase:XY:Y**Syntax**

:TImEbase:XY:Y <S>

:TImEbase:XY:Y?

Description

Sets or queries the channel source of the Y coordinate when the horizontal time base mode is XY.

Parameter

Name	Type	Range	Default
<S>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel2

Remarks

N/A

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4.

Example

```
:TImEbase:XY:Y CHANnel3 /*Sets the channel source of the Y
coordinate to CHANnel3.*/
:TImEbase:XY:Y? /*The query returns CHAN3.*/
```

3.31.15 :TIMebase:XY:GRID

Syntax

`:TIMebase:XY:GRID <grid>`

`:TIMebase:XY:GRID?`

Description

Sets or queries the grid type of the XY display.

Parameter

Name	Type	Range	Default
<grid>	Discrete	{FULL HALF NONE}	FULL

Remarks

- **FULL:** turns the background grid and coordinates on.
- **HALF:** turns the background grid off and turns the coordinate on.
- **NONE:** turns the background grid and coordinate off.

Return Format

The query returns FULL, HALF, or NONE.

Example

```
:TIMebase:XY:GRID NONE /*Sets the grid type of the XY display.*/
:TIMebase:XY:GRID? /*The query returns NONE.*/
```

3.32 :TRIGger Commands

The **:TRIGger** commands are used to set the trigger source type, trigger input edge type and trigger delay as well as generating a trigger event.

3.32.1 :TRIGger:MODE

Syntax

`:TRIGger:MODE <mode>`

`:TRIGger:MODE?`

Description

Sets or queries the trigger type.

Parameter

Name	Type	Range	Default
<mode>	Discrete	{EDGE PULSe SLOPe VIDeo PATtern DURation TIMeout RUNT WINDow DELay SETup NEDGe RS232 IIC SPI CAN LIN IIS FLEXray M1553}	EDGE

Remarks

The IIS, FLEXray, M1553B, CAN-FD, LIN trigger types are options for this series oscilloscope. These trigger commands are only available when the specified trigger option is installed.

Return Format

The query returns EDGE, PULS, SLOP, VID, PATT, DUR, TIM, RUNT, WIND, DEL, SET, NEDG, RS232, IIC, SPI, CAN, LIN, IIS, FLEX, or M1553.

Example

```
:TRIGger:MODE SLOPe /*Selects the Slope trigger.*/
:TRIGger:MODE? /*The query returns SLOP.*/
```

3.32.2 :TRIGger:COUPling

Syntax

```
:TRIGger:COUPling <couple>
```

```
:TRIGger:COUPling?
```

Description

Selects or queries the trigger coupling type.

Parameter

Name	Type	Range	Default
<couple>	Discrete	{AC DC LFReject HFReject}	DC

Remarks

This command is only available for the Edge trigger in which the analog channel is selected as the source.

- **AC:** blocks any DC components to pass the trigger path.
- **DC:** allows DC and AC components to pass the trigger path.

- **LFReject:** blocks the DC components and rejects the low frequency components to pass the trigger path.
- **HFReject:** rejects the high frequency components to pass the trigger path.

Return Format

The query returns AC, DC, LFR, or HFR.

Example

```
:TRIGger:COUPling LFReject /*Sets the trigger coupling type to
low frequency rejection.*/
:TRIGger:COUPling? /*The query returns LFR.*/
```

3.32.3 :TRIGger:STATus?

Syntax

:TRIGger:STATus?

Description

Queries the current trigger status.

Parameter

N/A

Remarks

N/A

Return Format

The query returns TD, WAIT, RUN, AUTO, or STOP.

Example

N/A

3.32.4 :TRIGger:SWEep

Syntax

:TRIGger:SWEep <sweep>

:TRIGger:SWEep?

Description

Sets or queries the trigger mode.

Parameter

Name	Type	Range	Default
<sweep>	Discrete	{AUTO NORMal SINGle}	AUTO

Remarks

- **AUTO:** Auto trigger. The waveforms are displayed no matter whether the trigger conditions are met.
- **NORMal:** Normal trigger. The waveforms are displayed when trigger conditions are met. If the trigger conditions are not met, the oscilloscope displays the original waveforms and waits for another trigger.
- **SINGle:** Single trigger. The oscilloscope waits for a trigger, displays the waveforms when the trigger conditions are met, and then stops.

Return Format

The query returns AUTO, NORM, or SING.

Example

```
:TRIGger:SWEep NORMal /*Selects the normal trigger mode.*/
:TRIGger:SWEep? /*The query returns NORM.*/
```

3.32.5 :TRIGger:HOLDoff

Syntax

:TRIGger:HOLDoff <value>

:TRIGger:HOLDoff?

Description

Sets or queries the trigger holdoff time. The default unit is s.

Parameter

Name	Type	Range	Default
<value>	Real	8 ns to 10 s	8 ns

Remarks

- Trigger holdoff can be used to stably trigger complex waveforms (such as pulse waveform). Holdoff time indicates the time that the oscilloscope waits for re-

arming the trigger module. The oscilloscope will not trigger before the holdoff time expires.

- Holdoff time is not available for Video trigger, Timeout trigger, Setup&Hold trigger, Nth Edge trigger, RS232 trigger, I2C trigger, SPI trigger, CAN trigger, LIN trigger.

Return Format

The query returns the trigger holdoff time in scientific notation.

Example

```
:TRIGger:HOLDOff 0.0000002 /*Sets the trigger holdoff time to 200 ns.*/  
:TRIGger:HOLDOff? /*The query returns 2.000000E-7.*/
```

3.32.6 :TRIGger:NREJect

Syntax

:TRIGger:NREJect <bool>

:TRIGger:NREJect?

Description

Turns on or off noise rejection; or queries the on/off status of noise rejection.

Parameter

Name	Type	Range	Default
<bool>	Bool	{{1 ON}}{0 OFF}}	0 OFF

Remarks

- Noise rejection reduces the possibility of the Noise trigger.
- This command is only available when the source is an analog channel or EXT.

Return Format

The query returns 1 or 0.

Example

```
:TRIGger:NREJect ON /*Enables the noise rejection function.*/  
:TRIGger:NREJect? /*The query returns 1.*/
```

3.32.7 :TRIGger:POSition?

Syntax

:TRIGger:POSition?

Description

Queries the waveform trigger position relative to the corresponding position in the internal memory.

Parameter

N/A

Remarks

N/A

Return Format

The query returns the waveform trigger position relative to the corresponding position in the internal memory in scientific notation.

Example

:TRIGger:POSition? /*The query returns 0.000E+00.*/

3.32.8 :TRIGger:EDGE

Edge trigger identifies a trigger on the trigger level of the specified edge on the input signal.

3.32.8.1 :TRIGger:EDGE:SOURce

Syntax

:TRIGger:EDGE:SOURce <source>

:TRIGger:EDGE:SOURce?

Description

Sets or queries the trigger source of Edge trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4 ACLine EXT}	CHANnel1

Remarks

N/A

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, CHAN4, ACL, or EXT.

Example

```
:TRIGger:EDGE:SOURce CHANnel1 /*Sets the trigger source to
CHANnel1.*/
:TRIGger:EDGE:SOURce? /*The query returns CHAN1.*/
```

3.32.8.2 :TRIGger:EDGE:SLOPe**Syntax**

```
:TRIGger:EDGE:SLOPe <slope>
```

```
:TRIGger:EDGE:SLOPe?
```

Description

Sets or queries the edge type of Edge trigger.

Parameter

Name	Type	Range	Default
<slope>	Discrete	{POSitive NEGative RFALL}	POSitive

Remarks

- **POSitive:** indicates the rising edge.
- **NEGative:** indicates the falling edge.
- **RFALL:** indicates the rising or falling edge.

Return Format

The query returns POS, NEG, or RFAL.

Example

```
:TRIGger:EDGE:SLOPe NEGative /*Sets the edge type to NEGative.*/
:TRIGger:EDGE:SLOPe? /*The query returns NEG.*/
```

3.32.8.3 :TRIGger:EDGE:LEVel**Syntax**

```
:TRIGger:EDGE:LEVel <level>
```

```
:TRIGger:EDGE:LEVel?
```

Description

Sets or queries the trigger level of Edge trigger. The unit is the same as that of current amplitude of the selected source.

Parameter

Name	Type	Range	Default
<level>	Real	Analog channel: (-4.5 x VerticalScale - Offset) to (4.5 x VerticalScale - Offset)	0 V

Remarks

For VerticalScale, refer to the `:CHANnel<n>:SCALE` command. For Offset, refer to the `:CHANnel<n>:OFFSET` command.

Only when the selected source is an analog channel or an external trigger, can this setting command be valid.

Return Format

The query returns the trigger level in scientific notation.

 
Example

```
:TRIGger:EDGE:LEVel 0.16 /*Sets the trigger level to 160 mV.*/
:TRIGger:EDGE:LEVel? /*The query returns 1.600000E-1.*/
```

3.32.9 :TRIGger:PULSe

Pulse trigger sets the oscilloscope to trigger on the positive or negative pulse of a specified width. In this mode, the oscilloscope will trigger when the pulse width of the input signal satisfies the specified pulse width condition.

In this oscilloscope, positive pulse width is defined as the time difference between the two crossing points of the trigger level and positive pulse; negative pulse width is defined as the time difference between the two crossing points of the trigger level and negative pulse, as shown in the figure below.

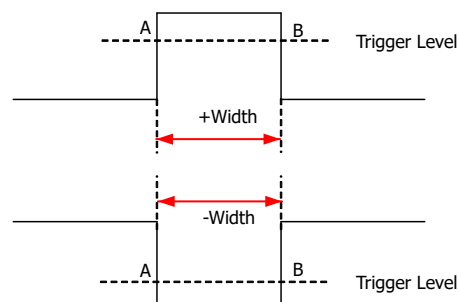

3.32.9.1 :TRIGger:PULSe:SOURce

Syntax

```
:TRIGger:PULSe:SOURce <source>
```

```
:TRIGger:PULSe:SOURce?
```

Description

Sets or queries the trigger source of Pulse trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

N/A

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TRIGger:PULSe:SOURce CHANnel1 /*Sets the trigger source to
CHANnel1.*/
:TRIGger:PULSe:SOURce? /*The query returns CHAN1.*/
```

3.32.9.2 :TRIGger:PULSe:POLarity

Syntax

```
:TRIGger:PULSe:POLarity <polarity>
```

```
:TRIGger:PULSe:POLarity?
```

Description

Sets or queries the polarity of Pulse trigger.

Parameter

Name	Type	Range	Default
<polarity>	Discrete	{POSitive NEGative}	POSitive

Remarks

N/A

Return Format

The query returns POS or NEG.

Example

```
:TRIGger:PULSe:POLarity NEGative /*Sets the polarity of Pulse
trigger to NEGative.*/
:TRIGger:PULSe:POLarity?          /*The query returns NEG.*/
```

3.32.9.3 :TRIGger:PULSe:WHEN**Syntax**

```
:TRIGger:PULSe:WHEN <when>
```

```
:TRIGger:PULSe:WHEN?
```

Description

Sets or queries the trigger condition of Pulse trigger.

Parameter

Name	Type	Range	Default
<when>	Discrete	{GREater LESS GLESS}	GREater

Remarks

- **GREater:** triggers when the positive/negative pulse width of the input signal is greater than the specified pulse width.
- **LESS:** triggers when the positive/negative pulse width of the input signal is smaller than the specified pulse width.
- **GLESS:** triggers when the positive/negative pulse is greater than than the specified lower limit of pulse width and smaller than the specified upper limit of pulse width.

Return Format

The query returns GRE, LESS, or GLE.

Example

```
:TRIGger:PULSe:WHEN LESS /*Sets the trigger condition to LESS.*/
:TRIGger:PULSe:WHEN?     /*The query returns LESS.*/
```

3.32.9.4 :TRIGger:PULSe:UWIDth

Syntax

`:TRIGger:PULSe:UWIDth <width>`

`:TRIGger:PULSe:UWIDth?`

Description

Sets or queries the pulse upper limit of the Pulse trigger. The default unit is s.

Parameter

Name	Type	Range	Default
<width>	Real	Pulse lower limit to 10 s	2 μ s

Remarks

This command is only available when the trigger condition is set to LESS or GLESSs. To set or query the trigger condition of the Pulse trigger, send the `:TRIGger:PULSe:WHEN` command.

When the trigger condition is set to GLESSs, if the set pulse upper limit value is smaller than the lower limit, the lower limit will be automatically changed. You can send the `:TRIGger:PULSe:LWIDth` command to set or query the pulse lower limit value of the Pulse trigger.

Return Format

The query returns the pulse upper limit in scientific notation.

Example

```
:TRIGger:PULSe:UWIDth 0.000003 /*Sets the pulse upper limit to 3
 $\mu$ s.*/
:TRIGger:PULSe:UWIDth? /*The query returns 3.000000E-6.*/
```

3.32.9.5 :TRIGger:PULSe:LWIDth

Syntax

`:TRIGger:PULSe:LWIDth <width>`

`:TRIGger:PULSe:LWIDth?`

Description

Sets or queries the pulse lower limit of the Pulse trigger. The default unit is s.

Parameter

Name	Type	Range	Default
<width>	Real	1 ns to upper limit	1 μ s

Remarks

This command is only available when the trigger condition is set to GREater or GLESSs. To set or query the trigger condition of the Pulse trigger, send the `:TRIGger:PULSe:WHEN` command.

When the trigger condition is set to GLESSs, if the set pulse lower limit value is greater than the upper limit, the upper limit will be automatically changed. You can send the `:TRIGger:PULSe:UWIDth` command to set or query the pulse upper limit value of the Pulse trigger.

Return Format

The query returns the pulse lower limit in scientific notation.

Example

```
:TRIGger:PULSe:LWIDth 0.000003 /*Sets the pulse lower limit of
the Pulse trigger to 3 μs.*/
:TRIGger:PULSe:LWIDth? /*The query returns 3.000000E-6.*/
```

3.32.9.6 :TRIGger:PULSe:LEVel**Syntax**

`:TRIGger:PULSe:LEVel <level>`

`:TRIGger:PULSe:LEVel?`

Description

Sets or queries the trigger level of Pulse trigger. The unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	Analog channel: (-4.5 x VerticalScale - OFFSet) to (4.5 x VerticalScale - OFFSet)	0 V

Remarks

For VerticalScale, refer to the `:CHANnel<n>:SCALe` command. For OFFSet, refer to the `:CHANnel<n>:OFFSet` command.

Return Format

The query returns the trigger level in scientific notation.

 
Example

```
:TRIGger:PULSe:LEVel 0.16 /*Sets the trigger level to 160 mV.*/
:TRIGger:PULSe:LEVel? /*The query returns 1.600000E-1.*/
```

3.32.10 :TRIGger:SLOPe

Slope trigger sets the oscilloscope to trigger on the positive or negative slope of the specified time. This trigger mode is applicable to ramp and triangle waveforms.

In this oscilloscope, positive slope time is defined as the time difference between the two crossing points of trigger level line A and B with the rising edge; negative slope time is defined as the time difference between the two crossing points of trigger level line A and B with the falling edge. See the figure below.

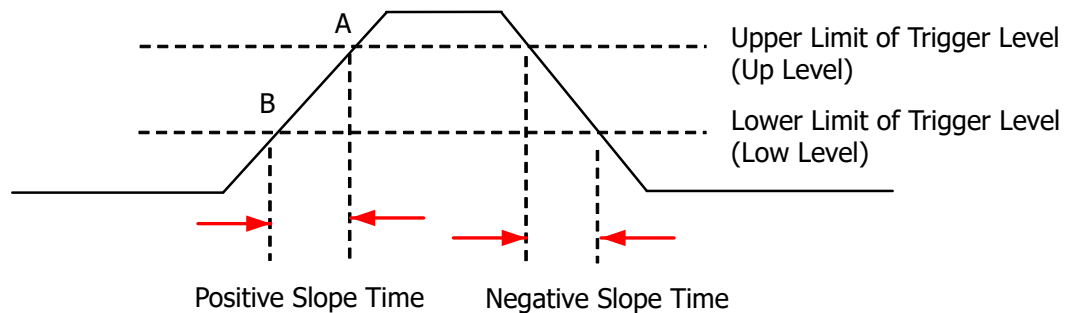

3.32.10.1 :TRIGger:SLOPe:SOURce

Syntax

```
:TRIGger:SLOPe:SOURce <channel>
```

```
:TRIGger:SLOPe:SOURce?
```

Description

Sets or queries the trigger source of Slope trigger.

Parameter

Name	Type	Range	Default
<channel>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

N/A

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4.

Example

```
:TRIGger:SLOPe:SOURce CHANnel2 /*Sets the trigger source to
CHANnel2.*/
:TRIGger:SLOPe:SOURce? /*The query returns CHAN2.*/
```

3.32.10.2 :TRIGger:SLOPe:POLarity**Syntax**

```
:TRIGger:SLOPe:POLarity <polarity>
```

```
:TRIGger:SLOPe:POLarity?
```

Description

Sets or queries the edge type of Slope trigger.

Parameter

Name	Type	Range	Default
<polarity>	Discrete	{POSitive NEGative}	POSitive

Remarks

- **POSitive:** triggers on the rising edge.
- **NEGative:** triggers on the falling edge.

Return Format

The query returns POS or NEG.

Example

```
:TRIGger:SLOPe:POLarity POSitive /*Sets the polarity of Slope
trigger to POSitive.*/
:TRIGger:SLOPe:POLarity? /*The query returns POS.*/
```

3.32.10.3 :TRIGger:SLOPe:WHEN**Syntax**

```
:TRIGger:SLOPe:WHEN <when>
```

```
:TRIGger:SLOPe:WHEN?
```

Description

Sets or queries the trigger condition of Slope trigger.

Parameter

Name	Type	Range	Default
<when>	Discrete	{GREater LESS GLESS}	GREater

Remarks

- **GREater:** the positive slope time of the input signal is greater than the specified time.
- **LESS:** the positive slope time of the input signal is smaller than the specified time.
- **GLESS:** the positive slope time of the input signal is greater than the specified lower time limit and smaller than the specified upper time limit.

Return Format

The query returns GRE, LESS, or GLESS.

Example

```
:TRIGger:SLOPe:WHEN LESS /*Sets the trigger condition to LESS.*/
:TRIGger:SLOPe:WHEN? /*The query returns LESS.*/
```

3.32.10.4 :TRIGger:SLOPe:TUPPer**Syntax**

:TRIGger:SLOPe:TUPPer <time>

:TRIGger:SLOPe:TUPPer?

Description

Sets or queries the upper time limit value of the Slope trigger. The default unit s.

Parameter

Name	Type	Range	Default
<time>	Real	Lower limit to 10 s	2 μs

Remarks

This command is only available when the trigger condition is set to LESS or GLESS. To set or query the trigger condition of the Slope trigger, send the **:TRIGger:SLOPe:WHEN** command.

When the trigger condition is set to GLESS, if the set upper time limit value is smaller than the lower limit, the lower limit will be automatically changed. You can use the **:TRIGger:SLOPe:TLOWer** command to set or query the lower time limit value of the Slope trigger.

Return Format

The query returns the upper time limit in scientific notation.

Example

```
:TRIGger:SLOPe:TUPPer 0.000003 /*Sets the upper time limit to 3
µs.*/
:TRIGger:SLOPe:TUPPer? /*The query returns 3.000000E-6.*/
```

3.32.10.5 :TRIGger:SLOPe:TLOWer**Syntax**

```
:TRIGger:SLOPe:TLOWer <time>
```

```
:TRIGger:SLOPe:TLOWer?
```

Description

Sets or queries the lower time limit value of the Slope trigger. The default unit s.

Parameter

Name	Type	Range	Default
<time>	Real	1 ns to upper limit	1 µs

Remarks

This command is only available when the trigger condition is set to GREater or GLESS. To set or query the trigger condition of the Slope trigger, send the *:TRIGger:SLOPe:WHEN* command.

When the trigger condition is set to GLESS, if the set lower time limit value is greater than the upper limit, the upper limit will be automatically changed. You can send the *:TRIGger:SLOPe:TUPPer* command to set or query the upper time limit value of the Slope trigger.

Return Format

The query returns the lower time limit in scientific notation.

Example

```
:TRIGger:SLOPe:TLOWer 0.000000020 /*Sets the lower time limit
to 20 ns.*/
:TRIGger:SLOPe:TLOWer? /*The query returns 2.000000E-8.*/
```

3.32.10.6 :TRIGger:SLOPe:WINDow**Syntax**

```
:TRIGger:SLOPe:WINDow <window>
```

```
:TRIGger:SLOPe:WINDow?
```

Description

Sets or queries the vertical window type of Slope trigger.

Parameter

Name	Type	Range	Default
<window>	Discrete	{TA TB TAB}	TA

Remarks

- **TA:** only adjusts the upper limit of the trigger level.
- **TB:** only adjust the lower limit of the trigger level.
- **TAB:** adjusts the upper and lower limits of the trigger level at the same time.

Return Format

The query returns TA, TB, or TAB.

Example

```
:TRIGger:SLOPe:WINDow TB /*Sets the vertical window type to
TB.*/
:TRIGger:SLOPe:WINDow? /*The query returns TB.*/
```

3.32.10.7 :TRIGger:SLOPe:ALEVel**Syntax**

```
:TRIGger:SLOPe:ALEVel <level>
:TRIGger:SLOPe:ALEVel?
```

Description

Sets or queries the upper limit of the trigger level of Slope trigger. The unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	Trigger level lower limit to (4.5 x VerticalScale - OFFSet)	0 V

Remarks

For VerticalScale, refer to the *:CHANnel<n>:SCALE* command. For OFFSet, refer to the *:CHANnel<n>:OFFSet* command.

Return Format

The query returns the upper limit of the trigger level in scientific notation.

Example

```
:TRIGger:SLOPe:ALEVel 0.16 /*Sets the upper limit of the trigger
level to 160 mV.*/
:TRIGger:SLOPe:ALEVel? /*The query returns 1.600000E-1.*/
```

3.32.10.8 :TRIGger:SLOPe:BLEVel**Syntax**

```
:TRIGger:SLOPe:BLEVel <level>
:TRIGger:SLOPe:BLEVel?
```

Description

Sets or queries the lower limit of the trigger level of Slope trigger. The unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	(-4.5 x VerticalScale - OFFSet) to trigger level upper limit	0 V

Remarks

For VerticalScale, refer to the **:CHANnel<n>:SCALE** command. For OFFSet, refer to the **:CHANnel<n>:OFFSet** command.

Return Format

The query returns the lower limit of the trigger level in scientific notation.

Example

```
:TRIGger:SLOPe:BLEVel 0.16 /*Sets the lower limit of the trigger
level to 160 mV.*/
:TRIGger:SLOPe:BLEVel? /*The query returns 1.600000E-1.*/
```

3.32.11 :TRIGger:VIDeo

The video signal can include image information and timing information, which adopts different standards and formats. This series can trigger on the standard video signal field or line of NTSC (National Television Standards Committee), PAL (Phase Alternating Line), or SECAM (Sequential Couleur A Memoire).

3.32.11.1 :TRIGger:VIDeo:SOURce**Syntax**

```
:TRIGger:VIDeo:SOURce <source>
:TRIGger:VIDeo:SOURce?
```

Description

Sets or queries the trigger source of Video trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

N/A

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4.

Example

```
:TRIGger:VIDeo:SOURce CHANnel2      /*Sets the trigger source to  
CHANnel2.*/  
:TRIGger:VIDeo:SOURce?              /*The query returns CHAN2.*/
```

3.32.11.2 :TRIGger:VIDeo:POLarity**Syntax**

```
:TRIGger:VIDeo:POLarity <polarity>
```

```
:TRIGger:VIDeo:POLarity?
```

Description

Sets or queries the video polarity of Video trigger.

Parameter

Name	Type	Range	Default
<polarity>	Discrete	{POSitive NEGative}	POSitive

Remarks

N/A

Return Format

The query returns POS or NEG.

Example

```
:TRIGger:VIDeo:POLarity NEGative    /*Sets the video polarity to  
NEGative.*/  
:TRIGger:VIDeo:POLarity?            /*The query returns NEG.*/
```

3.32.11.3 :TRIGger:VIDeo:MODE

Syntax

`:TRIGger:VIDeo:MODE <mode>`

`:TRIGger:VIDeo:MODE?`

Description

Sets or queries the sync type of Video trigger.

Parameter

Name	Type	Range	Default
<mode>	Discrete	{ODDField EVENfield LINE ALINes}	ALINes

Remarks

- **ODDField:** indicates the odd field. The oscilloscope triggers on the rising edge of the first ramp waveform in the odd field. It is available when the video standard is NTSC, PAL/SECAM, or 1080i.
- **EVENfield:** indicates the even field. The oscilloscope triggers on the rising edge of the first ramp waveform in the even field. It is available when the video standard is NTSC, PAL/SECAM, or 1080i.
- **LINE:** for NTSC and PAL/SECAM video standards, the oscilloscope triggers on the specified line in the odd or even field. For 480p, 576p, 720p, 480p and 1080i video standards, the oscilloscope triggers on the specified line.
- **ALINes:** triggers on all the horizontal sync pulses.

Return Format

The query returns ODDF, EVEN, LINE, or ALIN.

Example

```
:TRIGger:VIDeo:MODE ODDField    /*Sets the sync type to ODDField.*/  
:TRIGger:VIDeo:MODE?           /*The query returns ODDF.*/
```

3.32.11.4 :TRIGger:VIDeo:LINE

Syntax

`:TRIGger:VIDeo:LINE <line>`

:TRIGger:VIDeo:LINE?

Description

Sets or queries the line number when the sync type of Video trigger is set to Line.

Parameter

Name	Type	Range	Default
<line>	Integer	Refer to <i>Remarks</i>	1

Remarks

- **PAL/SECAM:** 1 to 625
- **NTSC:** 1 to 525
- **480P:** 1 to 525
- **576P:** 1 to 625
- **720P60:** 1 to 750
- **720P50:** 1 to 750
- **720P30:** 1 to 750
- **720P25:** 1 to 750
- **720P24:** 1 to 750
- **1080P60:** 1 to 1125
- **1080P50:** 1 to 1125
- **1080P30:** 1 to 1125
- **1080P25:** 1 to 1125
- **1080P24:** 1 to 1125
- **1080I60:** 1 to 1125
- **1080I50:** 1 to 1125

Return Format

The query returns an integer.

Example

```
:TRIGger:VIDeo:LINE 100      /*Sets the line number to 100.*/
:TRIGger:VIDeo:LINE?         /*The query returns 100.*/
```

3.32.11.5 :TRIGger:VIDeo:STANdard

Syntax

```
:TRIGger:VIDeo:STANdard <standard>
```

```
:TRIGger:VIDeo:STANdard?
```

Description

Sets or queries the video standard of Video trigger.

Parameter

Name	Type	Range	Default
<standard>	Discrete	{PALSecam NTSC 480P 576P 720P60 720P50 720P30 720P25 720P24 1080P60 1080P50 1080P30 1080P25 1080P24 1080I60 1080I50}	NTSC

Remarks

Video Standard	Frame Frequency (Frame)	Sweep Function	TV Scan Line
PALSecam	25	Interlaced Scan	625
NTSC	30	Interlaced Scan	525
480P	60	Progressive Scan	525
576P	50	Progressive Scan	625
720P60	60	Progressive Scan	750
720P50	50	Progressive Scan	750
720P30	30	Progressive Scan	750
720P25	25	Progressive Scan	750
720P24	24	Progressive Scan	750
1080P60	60	Progressive Scan	1125
1080P50	50	Progressive Scan	1125
1080P30	30	Progressive Scan	1125
1080P25	25	Progressive Scan	1125
1080P24	24	Progressive Scan	1125
1080I60	60	Interlaced Scan	1125
1080I50	50	Interlaced Scan	1125

Return Format

The query returns PALS, NTSC, 480P, 576P, 720P60, 720P50, 720P30, 720P25, 720P24, 1080P60, 1080P50, 1080P30, 1080P25, 1080P24, 1080I60, or 1080I50.

Example

```
:TRIGger:VIDeo:STANdard NTSC /*Sets the video standard to
NTSC.*/
:TRIGger:VIDeo:STANdard? /*The query returns NTSC.*/
```

3.32.11.6 :TRIGger:VIDeo:LEVel**Syntax**

```
:TRIGger:VIDeo:LEVel <level>
:TRIGger:VIDeo:LEVel?
```

Description

Sets or queries the trigger level of Video trigger. The unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	(-4.5 x VerticalScale - OFFSet) to (4.5 x VerticalScale - OFFSet)	0 V

Remarks

For VerticalScale, refer to the `:CHANnel<n>:SCALe` command. For OFFSet, refer to the `:CHANnel<n>:OFFSet` command.

Return Format

 
The query returns the trigger level in scientific notation.

Example

```
:TRIGger:VIDeo:LEVel 0.16 /*Sets the trigger level to 160 mV.*/
:TRIGger:VIDeo:LEVel? /*The query returns 1.600000E-1.*/
```

3.32.12 :TRIGger:PATtern

The pattern trigger identifies a trigger condition by looking for a specified pattern. This pattern is a logical "AND" combination of channels. Each channel can be set to H (high), L (low), or X (don't care). A rising or falling edge (you can only specify a single edge) can be specified for one channel included in the pattern. When an edge is specified, the oscilloscope will trigger at the edge specified if the pattern set for the other channels are true (namely the actual pattern of the channel is the same as the preset pattern). If no edge is specified, the oscilloscope will trigger on the last edge that makes the pattern true. If all the channels in the pattern are set to "X", the oscilloscope will not trigger.

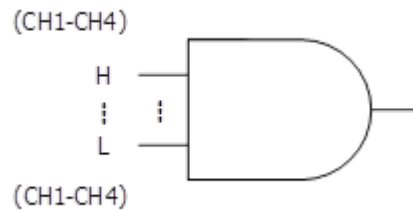

3.32.12.1 :TRIGger:PATtern:PATtern

Syntax

```
:TRIGger:PATtern:PATtern <pch1>[,<pch2>[,<pch3>[,<pch4>]]]
```

```
:TRIGger:PATtern:PATtern?
```

Description

Sets or queries the channel pattern of Pattern trigger.

Parameter

Name	Type	Range	Default
<pch1>	Discrete	{H L X R F}	X
<pch2>	Discrete	{H L X R F}	X
<pch3>	Discrete	{H L X R F}	X
<pch4>	Discrete	{H L X R F}	X

Remarks

- The parameter "<pch1> to <pch4>" sets the patterns of the analog channels "CHANnel1 to CHANnel4".
- In the parameter range, H indicates high level (higher than the threshold level of the channel), L indicates low level (lower than the threshold level of the channel), and X indicates omitting the channel (This channel is not used as a part of the pattern. When all the channels are set to X, the oscilloscope will not trigger.) R indicates rising edge, and F indicates falling edge.
- In the pattern, you can only specify one edge (rising edge or falling edge). If one edge item is currently defined and then another edge item is defined in

another channel in the pattern, then a prompt message "Invalid input" is displayed. Then, the latter defined edge item will be replaced by X.

Return Format

The query returns the currently set pattern of all the channels. The channels are separated by commas.

Example

```
:TRIGger:PATtern:PATtern H,R,L,X /*Sets the patterns of "CHANnel1
to CHANnel4" to H,R,L,X.*/
:TRIGger:PATtern:PATtern? /*The query returns H,R,L,X.*/
```

3.32.12.2 :TRIGger:PATtern:SOURce

Syntax

```
:TRIGger:PATtern:SOURce <source>
```

```
:TRIGger:PATtern:SOURce?
```

Description

Sets or queries the trigger source of Pattern trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TRIGger:PATtern:SOURce CHANnel2 /*Sets the trigger source to
CHANnel2.*/
:TRIGger:PATtern:SOURce? /*The query returns CHAN2.*/
```

3.32.12.3 :TRIGger:PATtern:LEVel

Syntax

```
:TRIGger:PATtern:LEVel <source>,<level>
```

```
:TRIGger:PATtern:LEVel? <source>
```

Description

Sets or queries the trigger level of the specified channel in Pattern trigger. The unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1
<level>	Real	Analog channel: (-4.5 x VerticalScale - Offset) to (4.5 x VerticalScale - Offset)	0 V

Remarks

For VerticalScale, refer to the `:CHANnel<n>:SCALE` command. For OFFSet, refer to the `:CHANnel<n>:OFFSet` command.

Return Format

 
The query returns the trigger level in scientific notation.

Example

```
:TRIGger:PATtern:LEVel CHANnel2,0.16 /*Sets the trigger level of
CHANnel2 to 160 mV.*/
:TRIGger:PATtern:LEVel? CHANnel2 /*The query returns
1.600000E-1.*/
```

3.32.13 :TRIGger:DURation

In Duration trigger, the oscilloscope identifies a trigger condition by searching for the duration of a specified pattern. This pattern is a logical "AND" combination of the channels. Each channel can be set to 1 (high), 0 (low), or X (don't care). The instrument triggers when the duration (ΔT) of this pattern meets the preset time, as shown in the figure below.

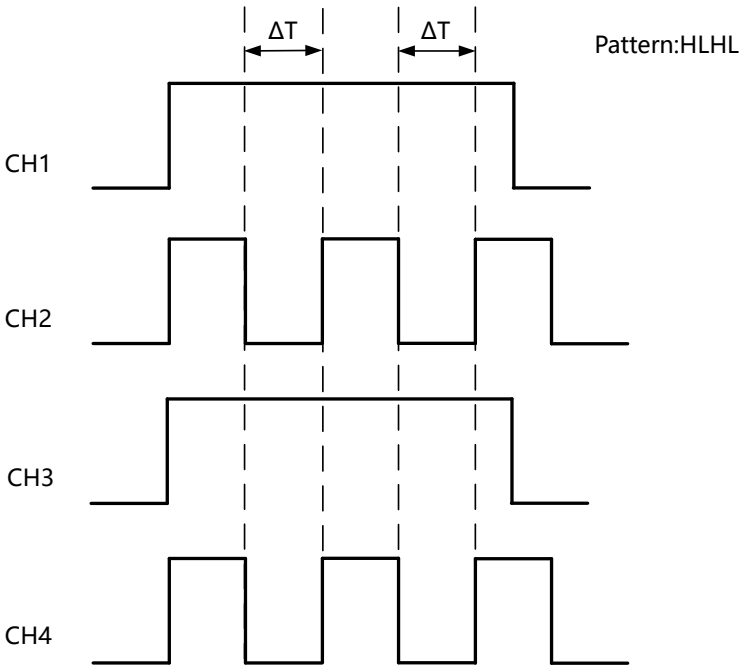

3.32.13.1 :TRIGger:DURation:SOURce

Syntax

```
:TRIGger:DURation:SOURce <source>
:TRIGger:DURation:SOURce?
```

Description

Sets or queries the trigger source of Duration trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TRIGger:DURation:SOURce CHANnel2    /*Sets the trigger source to
CHANnel2.*/
:TRIGger:DURation:SOURce?            /*The query returns CHAN2.*/
```

3.32.13.2 :TRIGger:DURation:TYPE**Syntax**

```
:TRIGger:DURation:TYPE <pch1>[,<pch2>[,<pch3>[,<pch4>]]]
:TRIGger:DURation:TYPE?
```

Description

Sets or queries the channel pattern of Duration trigger.

Parameter

Name	Type	Range	Default
<pch1>	Discrete	{H L X}	X
<pch2>	Discrete	{H L X}	X
<pch3>	Discrete	{H L X}	X
<pch4>	Discrete	{H L X}	X

Remarks

- The parameter "<pch1> to <pch4>" sets the patterns of the analog channels "CHANnel1 to CHANnel4".
- In the parameter range, H indicates high level (higher than the threshold level of the channel), L indicates low level (lower than the threshold level of the channel), and X indicates omitting the channel (This channel is not used as a part of the pattern. When all the channels are set to X, the oscilloscope will not trigger.)

Return Format

The query returns the currently set pattern of all the channels. The channels are separated by commas.

Example

```
:TRIGger:DURation:TYPE L,X,H,L /*Sets the patterns of "CHANnel1 to
CHANnel4" to L,X,H,L.*/
:TRIGger:DURation:TYPE? /*The query returns L,X,H,L.*/
```

3.32.13.3 :TRIGger:DURation:WHEN

Syntax

:TRIGger:DURation:WHEN *<when>*

:TRIGger:DURation:WHEN?

Description

Sets or queries the trigger condition of Duration trigger.

Parameter

Name	Type	Range	Default
<when>	Discrete	{GREater LESS GLESS UNGLess}	GREater

Remarks

- **GREater:** triggers when the set duration time of the pattern is greater than the preset time.
- **LESS:** triggers when the set duration time of the pattern is smaller than the preset time.
- **GLESS:** triggers when the set duration time of the pattern is smaller than the preset upper time limit and greater than the preset lower time limit.
- **UNGLess:** triggers when the set duration time of the pattern is greater than the preset upper time limit or smaller than the preset lower time limit.

Return Format

The query returns GRE, LESS, GLEs, or UNGL.

Example

```
:TRIGger:DURation:WHEN LESS /*Sets the trigger condition to
LESS.*/
:TRIGger:DURation:WHEN? /*The query returns LESS.*/
```

3.32.13.4 :TRIGger:DURation:TUPPer

Syntax

:TRIGger:DURation:TUPPer *<time>*

:TRIGger:DURation:TUPPer?

Description

Sets or queries the upper limit of the duration time of Duration trigger. The default unit is s.

Parameter

Name	Type	Range	Default
<time>	Real	Refer to <i>Remarks</i>	2 μ s

Remarks

This command is only available when the trigger condition is set to LESS, GLEs, or UNGLEs. To set or query the trigger condition of the Duration trigger, send the *:TRIGger:DURation:WHEN* command.

When the trigger condition is set to GLEs or UNGLEs, if the set upper limit of the duration time value is smaller than the lower limit, the lower limit will be automatically changed. You can send the *:TRIGger:DURation:TLOWer* command to set or query the lower limit of the duration time value of the Duration trigger.

Return Format

The query returns the upper limit of the duration time in scientific notation.

Example

```
:TRIGger:DURation:TUPPer 0.000003 /*Sets the upper limit of the
duration time to 3  $\mu$ s.*/
:TRIGger:DURation:TUPPer?          /*The query returns
3.000000E-6.*/
```

3.32.13.5 :TRIGger:DURation:TLOWer**Syntax**

:TRIGger:DURation:TLOWer <time>

:TRIGger:DURation:TLOWer?

Description

Sets or queries the lower limit of the duration time of Duration trigger. The default unit is s.

Parameter

Name	Type	Range	Default
<time>	Real	Refer to <i>Remarks</i>	1 μ s

Remarks

This command is only available when the trigger condition is set to GREater, GLESS, or UNGLess. To set or query the trigger condition of the Duration trigger, send the **:TRIGger:DURation:WHEN** command.

When the trigger condition is set to GLESS or UNGLess, if the set lower limit of the duration time value is greater than the upper limit, the upper limit will be automatically changed. You can send the **:TRIGger:DURation:TUPPer** command to set or query the upper limit of the duration time value of the Duration trigger.

Return Format

The query returns the lower limit of the duration time in scientific notation.

Example

```
:TRIGger:DURation:TLOWer 0.000003 /*Sets the lower limit of the
duration time to 3 μs.*/
:TRIGger:DURation:TLOWer? /*The query returns
3.000000E-6.*/
```

3.32.13.6 :TRIGger:DURation:LEVel

Syntax

:TRIGger:DURation:LEVel <source>,<level>

:TRIGger:DURation:LEVel? <source>

Description

Sets or queries the trigger level of the specified channel in Duration trigger. The unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1
<level>	Real	Analog channel: (-4.5 x VerticalScale - Offset) to (4.5 x VerticalScale - Offset)	0 V

Remarks

For VerticalScale, refer to the **:CHANnel<n>:SCALE** command. For OFFSet, refer to the **:CHANnel<n>:OFFSet** command.

Return Format

 
The query returns the trigger level in scientific notation.

Example

```
:TRIGger:DURation:LEVel CHANnel2,0.16 /*Sets the trigger level of
CHANnel2 to 160 mV.*/
:TRIGger:DURation:LEVel? CHANnel2 /*The query returns
1.600000E-1.*/
```

3.32.14 :TRIGger:TIMEout

In Timeout trigger, the oscilloscope triggers when the time interval (ΔT) (the time from when the rising edge (or falling edge) of the input signal passes through the trigger level to the time from when the neighboring falling edge (or rising edge) passes through the trigger level) is greater than the preset timeout value, as shown in the figure below.

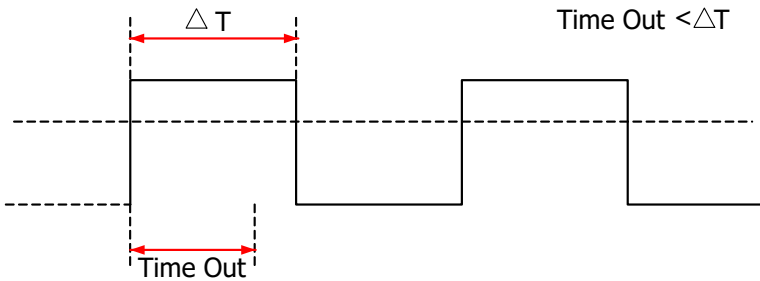

3.32.14.1 :TRIGger:TIMEout:SOURce

Syntax

```
:TRIGger:TIMEout:SOURce <source>
:TRIGger:TIMEout:SOURce?
```

Description

Sets or queries the trigger source of Timeout trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TRIGger:TIMEout:SOURce CHANnel2 /*Sets the trigger source to
CHANnel2.*/
:TRIGger:TIMEout:SOURce? /*The query returns CHAN2.*/
```

3.32.14.2 :TRIGger:TIMEout:SLOPe

Syntax

```
:TRIGger:TIMEout:SLOPe <slope>
:TRIGger:TIMEout:SLOPe?
```

Description

Sets or queries the edge type of Timeout trigger.

Parameter

Name	Type	Range	Default
<slope>	Discrete	{POSitive NEGative RFALL}	POSitive

Remarks

- **POSitive:** starts timing when the rising edge of the input signal passes through the trigger level.
- **NEGative:** starts timing when the falling edge of the input signal passes through the trigger level.
- **RFALL:** starts timing when any edge of the input signal passes through the trigger level.

Return Format

The query returns POS, NEG, or RFAL.

Example

```
:TRIGger:TIMEout:SLOPe NEGative /*Sets the edge type to
NEGative.*/
:TRIGger:TIMEout:SLOPe? /*The query returns NEG.*/
```

3.32.14.3 :TRIGger:TIMEout:TIME**Syntax**

```
:TRIGger:TIMEout:TIME <time>
```

```
:TRIGger:TIMEout:TIME?
```

Description

Sets or queries the timeout value of Timeout trigger. The default unit is s.

Parameter

Name	Type	Range	Default
<time>	Real	16 ns to 10 s	1 μ s

Remarks

N/A

Return Format

The query returns the timeout value in scientific notation.

Example

```
:TRIGger:TIMEout:TIME 0.002 /*Sets the timeout value to 2 ms.*/
:TRIGger:TIMEout:TIME? /*The query returns
2.000000E-3.*/
```

3.32.14.4 :TRIGger:TIMEout:LEVel**Syntax**

```
:TRIGger:TIMEout:LEVel <level>
```

```
:TRIGger:TIMEout:LEVel?
```

Description

Sets or queries the trigger level of Timeout trigger. The unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	Analog channel: (-4.5 x VerticalScale - OFFSET) to (4.5 x VerticalScale - OFFSET)	0 V

Remarks

For VerticalScale, refer to the `:CHANnel<n>:SCALE` command. For OFFSet, refer to the `:CHANnel<n>:OFFSet` command.

Return Format

 
The query returns the trigger level in scientific notation.

Example

```
:TRIGger:TIMEout:LEVel 0.16 /*Sets the trigger level to 160
mV.*/
:TRIGger:TIMEout:LEVel? /*The query returns 1.600000E-1.*/
```

3.32.15 :TRIGger:RUNT

The runt trigger sets the oscilloscope to trigger pulses that cross one trigger level but not another, as shown in the figure below.

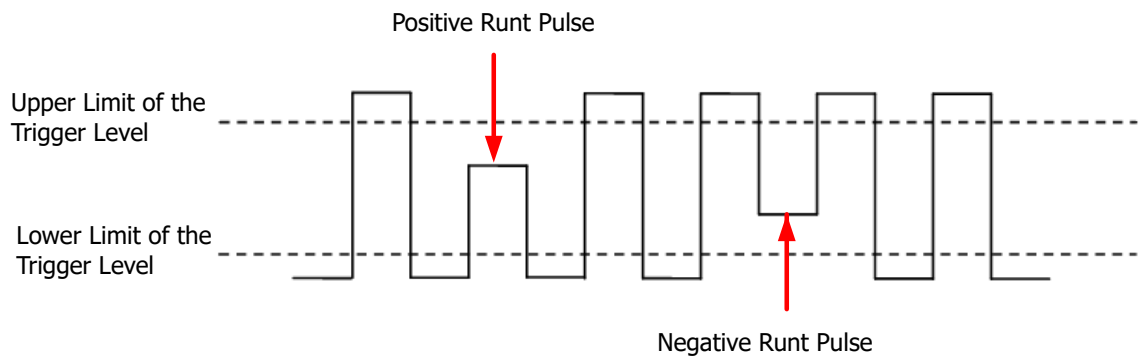

3.32.15.1 :TRIGger:RUNT:SOURce

Syntax

```
:TRIGger:RUNT:SOURce <source>
```

```
:TRIGger:RUNT:SOURce?
```

Description

Sets or queries the trigger source of Runt trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

N/A

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4.

Example

```
:TRIGger:RUNT:SOURce CHANnel2 /*Sets the trigger source to
CHANnel2.*/
:TRIGger:RUNT:SOURce? /*The query returns CHAN2.*/
```

3.32.15.2 :TRIGger:RUNT:POLarity**Syntax**

```
:TRIGger:RUNT:POLarity <polarity>
```

```
:TRIGger:RUNT:POLarity?
```

Description

Sets or queries the polarity of Runt trigger.

Parameter

Name	Type	Range	Default
<polarity>	Discrete	{POSitive NEGative}	POSitive

Remarks

- **POSitive:** indicates the positive polarity. The oscilloscope triggers on the positive polarity of Runt trigger.
- **NEGative:** indicates the negative polarity. The oscilloscope triggers on the negative polarity of Runt trigger.

Return Format

The query returns POS or NEG.

Example

```
:TRIGger:RUNT:POLarity NEGative /*Sets the polarity of Runt
trigger to NEGative.*/
:TRIGger:RUNT:POLarity? /*The query returns NEG.*/
```

3.32.15.3 :TRIGger:RUNT:WHEN**Syntax**

```
:TRIGger:RUNT:WHEN <when>
```

```
:TRIGger:RUNT:WHEN?
```

Description

Sets or queries the trigger conditions of Runt trigger.

Parameter

Name	Type	Range	Default
<when>	Discrete	{NONE GREater LESS GLESS}	NONE

Remarks

- **NONE:** indicates not setting the trigger condition of Runt trigger.
- **GREater:** triggers when the runt pulse width is greater than the lower limit of pulse width.
- **LESS:** triggers when the runt pulse width is smaller than the upper limit of pulse width.
- **GLESS:** triggers when the runt pulse width is greater than the lower limit and smaller than the upper limit of pulse width.

The lower limit of the pulse width must be smaller than the upper limit.

Return Format

The query returns NONE, GRE, LESS, or GLESS.

Example

```
:TRIGger:RUNT:WHEN LESS      /*Sets the trigger condition of Runt
trigger to LESS.*/
:TRIGger:RUNT:WHEN?          /*The query returns LESS.*/
```

3.32.15.4 :TRIGger:RUNT:WUPPer**Syntax**

```
:TRIGger:RUNT:WUPPer <width>
```

```
:TRIGger:RUNT:WUPPer?
```

Description

Sets or queries the upper limit of the pulse width of Runt trigger. The default unit is s.

Parameter

Name	Type	Range	Default
<width>	Real	Refer to <i>Remarks</i>	2 μ s

Remarks

This command is only available when the trigger condition is set to LESS or GLESS. To set or query the trigger condition of the Runt trigger, send the **:TRIGger:RUNT:WHEN** command.

When the trigger condition is set to GLESS, if the set upper limit of the pulse width is smaller than the lower limit, the lower limit will be automatically changed. You can send the **:TRIGger:RUNT:WLOWer** command to set or query the lower limit of the pulse width of Runt trigger.

Return Format

The query returns the pulse upper limit in scientific notation.

Example

```
:TRIGger:RUNT:WUPPer 0.02 /*Sets the upper limit of the pulse
width to 20 ms.*/
:TRIGger:RUNT:WUPPer? /*The query returns 2.000000E-2.*/
```

3.32.15.5 :TRIGger:RUNT:WLOWer**Syntax**

:TRIGger:RUNT:WLOWer <width>

:TRIGger:RUNT:WLOWer?

Description

Sets or queries the lower limit of the pulse width of Runt trigger. The default unit is s.

Parameter

Name	Type	Range	Default
<width>	Real	Refer to <i>Remarks</i>	1 μs

Remarks

This command is only available when the trigger condition is set to GREater or GLESS. To set or query the trigger condition of the Runt trigger, send the **:TRIGger:RUNT:WHEN** command.

When the trigger condition is set to GLESS, if the set lower limit of the pulse width is greater than the lower limit, the upper limit will be automatically changed. You can send the **:TRIGger:RUNT:WUPPer** command to set or query the upper limit of the pulse width of Runt trigger.

Return Format

The query returns the pulse lower limit in scientific notation.

Example

```
:TRIGger:RUNT:WLOWer 0.01 /*Sets the lower limit of the pulse
width to 10 ms.*/
:TRIGger:RUNT:WLOWer? /*The query returns 1.000000E-2.*/
```

3.32.15.6 :TRIGger:RUNT:ALEVEL**Syntax**

```
:TRIGger:RUNT:ALEVEL <level>
:TRIGger:RUNT:ALEVEL?
```

Description

Sets or queries the upper limit of the trigger level of Runt trigger. The unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	Lower limit to (4.5 x VerticalScale - OFFSet)	0 V

Remarks

For VerticalScale, refer to the *:CHANnel<n>:SCALE* command. For OFFSet, refer to the *:CHANnel<n>:OFFSet* command.

Return Format

The query returns the upper limit of the trigger level in scientific notation.

Example

```
:TRIGger:RUNT:ALEVEL 0.16 /*Sets the upper limit of the trigger
level to 160 mV.*/
:TRIGger:RUNT:ALEVEL? /*The query returns 1.600000E-1.*/
```

3.32.15.7 :TRIGger:RUNT:BLEVEL**Syntax**

```
:TRIGger:RUNT:BLEVEL <level>
:TRIGger:RUNT:BLEVEL?
```

Description

Sets or queries the lower limit of the trigger level of Runt trigger. The unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	(-4.5 x VerticalScale - OFFSet) to upper limit	0 V

Remarks

For VerticalScale, refer to the `:CHANnel<n>:SCALE` command. For OFFSet, refer to the `:CHANnel<n>:OFFSet` command.

Return Format

The query returns the lower limit of the trigger level in scientific notation.

Example

```
:TRIGger:RUNT:BLEVel 0.16 /*Sets the lower limit of the trigger
level to 160 mV.*/
:TRIGger:RUNT:BLEVel? /*The query returns 1.600000E-1.*/
```

3.32.16 :TRIGger:WINDows

Window trigger provides a high trigger level and a low trigger level. The instrument triggers when the input signal passes through the high trigger level or the low trigger level.

3.32.16.1 :TRIGger:WINDows:SOURce

Syntax

```
:TRIGger:WINDows:SOURce <source>
```

```
:TRIGger:WINDows:SOURce?
```

Description

Sets or queries the trigger source of Window trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

N/A

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4.

Example

```
:TRIGger:WINDows:SOURce CHANnel2      /*Sets the trigger source to
CHANnel2.*/
:TRIGger:WINDows:SOURce?                /*The query returns CHAN2.*/
```

3.32.16.2 :TRIGger:WINDows:SLOPe**Syntax**

```
:TRIGger:WINDows:SLOPe <type>
```

```
:TRIGger:WINDows:SLOPe?
```

Description

Sets or queries the edge type of Windows trigger.

Parameter

Name	Type	Range	Default
<type>	Discrete	{POSitive NEGative RFALI}	POSitive

Remarks

- **POSitive:** triggers on the rising edge of the input signal when the voltage level is greater than the preset high trigger level.
- **NEGative:** triggers on the falling edge of the input signal when the voltage level is smaller than the preset low trigger level.
- **RFALI:** triggers on either the rising or falling edge of the input signal when the voltage level meets the preset trigger level.

Return Format

The query returns POS, NEG, or RFAL.

Example

```
:TRIGger:WINDows:SLOPe NEGative      /*Sets the edge type of Windows
trigger to NEGative.*/
:TRIGger:WINDows:SLOPe?                /*The query returns NEG.*/
```

3.32.16.3 :TRIGger:WINDows:POSition**Syntax**

```
:TRIGger:WINDows:POSition <pos>
```

```
:TRIGger:WINDows:POSition?
```

Description

Sets or queries the trigger position of Window trigger.

Parameter

Name	Type	Range	Default
<pos>	Discrete	{EXIT ENTER TIME}	ENTER

Remarks

- **EXIT:** triggers when the input signal exits the specified trigger level range.
- **ENTER:** triggers when the input signal enters the specified trigger level range.
- **TIME:** triggers when the accumulated hold time after the trigger signal enters the specified trigger level range is equal to the window time.

Return Format

The query returns EXIT, ENT, or TIME.

Example

```
:TRIGger:WINDows:POSition ENTER /*Sets the trigger position to
ENT.*/
:TRIGger:WINDows:POSition? /*The query returns ENT.*/
```

3.32.16.4 :TRIGger:WINDows:TIME**Syntax**

```
:TRIGger:WINDows:TIME <time>
```

```
:TRIGger:WINDows:TIME?
```

Description

Sets or queries the window time of Window trigger.

Parameter

Name	Type	Range	Default
<time>	Real	1 ns to 10 s	1μs

Remarks

N/A

Return Format

The query returns the window time in scientific notation.

Example

```
:TRIGger:WINDows:TIME 0.002 /*Sets the window time to 2 ms.*/
:TRIGger:WINDows:TIME? /*The query returns
2.000000E-3.*/
```

3.32.16.5 :TRIGger:WINDows:ALEVel**Syntax**

```
:TRIGger:WINDows:ALEVel <level>
```

```
:TRIGger:WINDows:ALEVel?
```

Description

Sets or queries the upper limit of the trigger level of Window trigger. The unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	Lower limit to (4.5 x VerticalScale - OFFSet)	0 V

Remarks

For VerticalScale, refer to the `:CHANnel<n>:SCALE` command. For OFFSet, refer to the `:CHANnel<n>:OFFSet` command.

Return Format

The query returns the upper limit of the trigger level in scientific notation.

Example

```
:TRIGger:WINDows:ALEVel 0.16 /*Sets the upper limit of the
trigger level to 160 mV.*/
:TRIGger:WINDows:ALEVel? /*The query returns 1.600000E-1.*/
```

3.32.16.6 :TRIGger:WINDows:BLEVel**Syntax**

```
:TRIGger:WINDows:BLEVel <level>
```

```
:TRIGger:WINDows:BLEVel?
```

Description

Sets or queries the lower limit of the trigger level of Window trigger. The unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	(-4.5 x VerticalScale - OFFSet) to upper limit	0 V

Remarks

For VerticalScale, refer to the `:CHANnel<n>:SCALE` command. For OFFSet, refer to the `:CHANnel<n>:OFFSet` command.

Return Format

 
The query returns the lower limit of the trigger level in scientific notation.

Example

```
:TRIGger:WINDows:BLEVel 0.05 /*Sets the lower limit of the
trigger level to 50 mV.*/
:TRIGger:WINDows:BLEVel? /*The query returns 5.000000E-2.*/
```

3.32.17 :TRIGger:DELaY

In Delay trigger, you need to set Source A and Source B. The oscilloscope triggers when the time difference (ΔT) between the specified edges (Edge A and Edge B) of Source A and Source B meets the preset time limit, as shown in the figure below. Edge A and Edge B must be two neighboring edges. See the figure below.

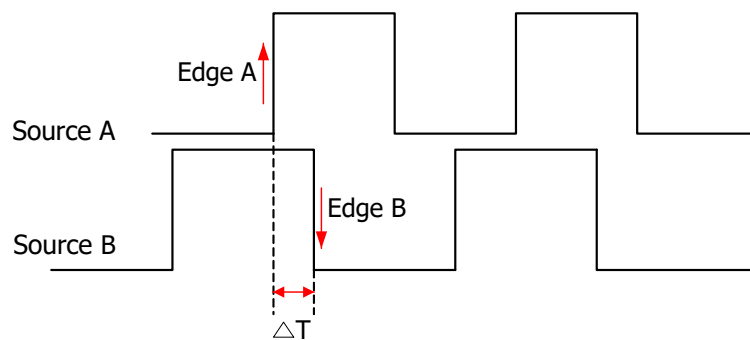

3.32.17.1 :TRIGger:DELaY:SA

Syntax

```
:TRIGger:DELaY:SA <source>
```

```
:TRIGger:DELaY:SA?
```

Description

Sets or queries the trigger source of Source A in Delay trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

N/A

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TRIGger:DElay:SA CHANnel2 /*Sets the trigger source A to
CHANnel2.*/
:TRIGger:DElay:SA?          /*The query returns CHAN2.*/
```

3.32.17.2 :TRIGger:DElay:ASLop**Syntax**

```
:TRIGger:DElay:ASLop <slope>
```

```
:TRIGger:DElay:ASLop?
```

Description

Sets or queries the edge type of Edge A in Delay trigger.

Parameter

Name	Type	Range	Default
<slope>	Discrete	{POSitive NEGative}	POSitive

Remarks

N/A

Return Format

The query returns POS or NEG.

Example

```
:TRIGger:DElay:ASLop NEGative /*Sets the edge type of Edge A to
NEGative.*/
:TRIGger:DElay:ASLop?          /*The query returns NEG.*/
```

3.32.17.3 :TRIGger:DElay:SB**Syntax**

```
:TRIGger:DElay:SB <source>
```

```
:TRIGger:DElay:SB?
```

Description

Sets or queries the trigger source of Source B in Delay trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel2

Remarks

N/A

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TRIGger:DElay:SB CHANnel4 /*Sets the trigger source B to
CHANnel4.*/
:TRIGger:DElay:SB? /*The query returns CHAN4.*/
```

3.32.17.4 :TRIGger:DElay:BSLop**Syntax**

```
:TRIGger:DElay:BSLop <slope>
```

```
:TRIGger:DElay:BSLop?
```

Description

Sets or queries the edge type of Edge B in Delay trigger.

Parameter

Name	Type	Range	Default
<slope>	Discrete	{POSitive NEGative}	POSitive

Remarks

N/A

Return Format

The query returns POS or NEG.

Example

```
:TRIGger:DElay:BSLop NEGative    /*Sets the edge type of Edge B to
NEGative.*/
:TRIGger:DElay:BSLop?             /*The query returns NEG.*/
```

3.32.17.5 :TRIGger:DElay:TYPE**Syntax****:TRIGger:DElay:TYPE** <type>**:TRIGger:DElay:TYPE?****Description**

Sets or queries the trigger condition of the Delay trigger.

Parameter

Name	Type	Range	Default
<type>	Discrete	{GREater LESS GLESS GOUT}	GREater

Remarks

- **GREater:** triggers when the time difference (ΔT) between the specified edges of Source A and Source B is greater than the preset time limit.
- **LESS:** triggers when the time difference (ΔT) between the specified edges of Source A and Source B is smaller than the preset time limit.
- **GLESS:** triggers when the time difference (ΔT) between the specified edges of Source A and Source B is greater than the lower limit of the preset time and smaller than the upper limit of the preset time.
- **GOUT:** triggers when the time difference (ΔT) between the specified edges of Source A and Source B is smaller than the lower limit of the preset time or greater than the upper limit of the preset time.

Return Format

The query returns GRE, LESS, GLEs, or GOUT.

Example

```
:TRIGger:DElay:TYPE GOUT /*Sets the trigger condition to GOUT.*/
:TRIGger:DElay:TYPE? /*The query returns GOUT.*/
```

3.32.17.6 :TRIGger:DElay:TUPPer

Syntax

:TRIGger:DElay:TUPPer <time>

:TRIGger:DElay:TUPPer?

Description

Sets or queries the upper limit of delay time of the Delay trigger. The default unit is s.

Parameter

Name	Type	Range	Default
<time>	Real	Refer to <i>Remarks</i>	2 μs

Remarks

This command is only available when the trigger condition is set to LESS, GLEs, or GOUT. To set or query the trigger condition of the Delay trigger, send the :TRIGger:DElay:TYPE command.

When the trigger condition is set to GLEs or GOUT, if the set upper limit of the delay time is smaller than the lower limit, the lower limit will be automatically changed. You can send the :TRIGger:DElay:TLOWer command to set or query the lower limit of the delay time of the Delay trigger.

Return Format

The query returns the upper limit of delay time in scientific notation.

Example

```
:TRIGger:DElay:TUPPer 0.002 /*Sets the upper limit of delay time
to 2 ms.*/
:TRIGger:DElay:TUPPer? /*The query returns 2.000000E-3.*/
```

3.32.17.7 :TRIGger:DElay:TLOWer

Syntax

:TRIGger:DElay:TLOWer <time>

:TRIGger:DElay:TLOWer?

Description

Sets or queries the lower limit of delay time of the Delay trigger. The default unit is s.

Parameter

Name	Type	Range	Default
<time>	Real	Refer to <i>Remarks</i>	1μs

Remarks

This command is only available when the trigger condition is set to GREater, GLEsS, or GOUT. To set or query the trigger condition of the Delay trigger, send the *:TRIGger:DElay:TYPE* command.

The range of <time> is from 1 ns to 10 s. Note that the lower limit cannot be greater than the upper limit. When the trigger condition is set to GLEsS or GOUT, if the set lower limit of the delay time is greater than the upper limit, the upper limit will be automatically changed. You can send the *:TRIGger:DElay:TUPPer* command to set or query the upper limit of the delay time of the Delay trigger.

Return Format

The query returns the lower limit of delay time in scientific notation.

Example

```
:TRIGger:DElay:TLOWer 0.002 /*Sets the lower limit of delay time
to 2 ms.*/
:TRIGger:DElay:TLOWer? /*The query returns 2.000000E-3.*/
```

3.32.17.8 :TRIGger:DElay:ALEVel

Syntax

```
:TRIGger:DElay:ALEVel <level>
```

```
:TRIGger:DElay:ALEVel?
```

Description

Sets or queries the threshold level of Source A of Delay trigger. The unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	Analog channel:	0 V

Remarks

For VerticalScale, refer to the *:CHANnel<n>:SCALE* command. For OFFSet, refer to the *:CHANnel<n>:OFFSet* command.

Return Format

The query returns the threshold level of Source A in scientific notation.

Example

```
:TRIGger:DElay:ALEvel 0.16 /*Sets the threshold level of Source
A to 160 mV.*/
:TRIGger:DElay:ALEvel? /*The query returns 1.600000E-1.*/
```

3.32.17.9 :TRIGger:DElay:BLEvel**Syntax**

```
:TRIGger:DElay:BLEvel <level>
```

```
:TRIGger:DElay:BLEvel?
```

Description

Sets or queries the threshold level of Source B of Delay trigger. The unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	Analog channel:	0 V

Remarks

For VerticalScale, refer to the **:CHANnel<n>:SCALE** command. For OFFSet, refer to the **:CHANnel<n>:OFFSet** command.

Return Format

 
The query returns the threshold level of Source B in scientific notation.

Example

```
:TRIGger:DElay:BLEvel 0.05 /*Sets the threshold level of Source
B to 50 mV.*/
:TRIGger:DElay:BLEvel? /*The query returns 5.000000E-2.*/
```

3.32.18 :TRIGger:SHOLd

In setup&hold trigger, you need to set the clock source and data source. The setup time starts when the data signal passes the trigger level and ends at the coming of the specified clock edge; the hold time starts at the coming of the specified clock edge and ends when the data signal crosses the trigger level again, as shown in the figure below. The oscilloscope triggers when the setup time or hold time is smaller than the preset time.

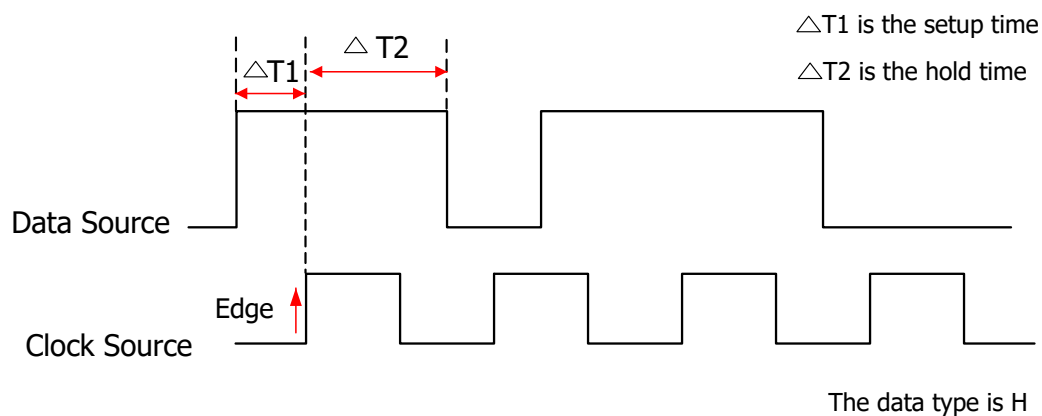

3.32.18.1 :TRIGger:SHOLd:DSRC

Syntax

```
:TRIGger:SHOLd:DSRC <source>
```

```
:TRIGger:SHOLd:DSRC?
```

Description

Sets or queries the data source of Setup&Hold trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel2

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TRIGger:SHOLd:DSRC CHANnel1 /*Sets the data source to
CHANnel1.*/
:TRIGger:SHOLd:DSRC? /*The query returns CHAN1.*/
```

3.32.18.2 :TRIGger:SHOLd:CSRC**Syntax**

```
:TRIGger:SHOLd:CSRC <source>
```

```
:TRIGger:SHOLd:CSRC?
```

Description

Sets or queries the clock source of Setup&Hold trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TRIGger:SHOLd:CSRC CHANnel2 /*Sets the clock source to
CHANnel2.*/
:TRIGger:SHOLd:CSRC? /*The query returns CHAN2.*/
```

3.32.18.3 :TRIGger:SHOLd:SLOPe**Syntax**

```
:TRIGger:SHOLd:SLOPe <slope>
```

```
:TRIGger:SHOLd:SLOPe?
```

Description

Sets or queries the edge type of Setup&Hold trigger.

Parameter

Name	Type	Range	Default
<slope>	Discrete	{POSitive NEGative}	POSitive

Remarks

N/A

Return Format

The query returns POS or NEG.

Example

```
:TRIGger:SHOLd:SLOPe NEGative /*Sets the edge type to
NEGative.*/
:TRIGger:SHOLd:SLOPe? /*The query returns NEG.*/
```

3.32.18.4 :TRIGger:SHOLd:PATtern**Syntax**

```
:TRIGger:SHOLd:PATtern <pattern>
```

```
:TRIGger:SHOLd:PATtern?
```

Description

Sets or queries the data type of Setup&Hold trigger.

Parameter

Name	Type	Range	Default
<pattern>	Discrete	{H L}	H

Remarks

- **H:** indicates high level.
- **L:** indicates low level.

Return Format

The query returns H or L.

Example

```
:TRIGger:SHOLd:PATtern L /*Sets data type to L.*/
:TRIGger:SHOLd:PATtern? /*The query returns L.*/
```

3.32.18.5 :TRIGger:SHOLd:TYPE**Syntax**

```
:TRIGger:SHOLd:TYPE <type>
```

```
:TRIGger:SHOLd:TYPE?
```

Description

Sets or queries the trigger condition of Setup/Hold trigger.

Parameter

Name	Type	Range	Default
<type>	Discrete	{SETup HOLD SETHold}	SETup

Remarks

- **SETup:** the oscilloscope triggers when the setup time is smaller than the specified setup time.
- **HOLD:** the oscilloscope triggers when the hold time is smaller than the specified hold time.
- **SETHold:** the oscilloscope triggers when the setup time or hold time is smaller than the specified time value.

Return Format

The query returns SET, HOLD, or SETH.

Example

```
:TRIGger:SHOLd:TYPE SETHold /*Sets the trigger condition to
SETHold.*/
:TRIGger:SHOLd:TYPE? /*The query returns SETH.*/
```

3.32.18.6 :TRIGger:SHOLd:STIME**Syntax**

```
:TRIGger:SHOLd:STIME <time>
```

```
:TRIGger:SHOLd:STIME?
```

Description

Sets or queries the setup time of Setup&Hold trigger. The default unit is s.

Parameter

Name	Type	Range	Default
<time>	Real	1 ns to 10 s	2 μ s

Remarks

- Setup time indicates the time that the data remain stable and unchanged before the specified clock edge arrives.
- This command is only available when the hold type is SETup or SETHOLD.

Return Format

The query returns the setup time value in scientific notation.

Example

```
:TRIGger:SHOLd:STIME 0.002 /*Sets the setup time to 2 ms.*/
:TRIGger:SHOLd:STIME? /*The query returns 2.000000E-3.*/
```

3.32.18.7 :TRIGger:SHOLd:HTIME**Syntax**

```
:TRIGger:SHOLd:HTIME <time>
```

```
:TRIGger:SHOLd:HTIME?
```

Description

Sets or queries the hold time of Setup&Hold trigger. The default unit is s.

Parameter

Name	Type	Range	Default
<time>	Real	1 ns to 10 s	1 μ s

Remarks

- Hold time indicates the time that the data remain stable and unchanged after the specified clock edge arrives.
- This command is only available when the hold type is HOLD or SETHOLD.

Return Format

The query returns the hold time value in scientific notation.

Example

```
:TRIGger:SHOLd:HTIME 0.002 /*Sets the hold time to 2 ms.*/
:TRIGger:SHOLd:HTIME? /*The query returns 2.000000E-3.*/
```

3.32.18.8 :TRIGger:SHOLd:DLEVel**Syntax**

```
:TRIGger:SHOLd:DLEVel <level>
```

```
:TRIGger:SHOLd:DLEVel?
```

Description

Sets or queries the trigger level of the data source. The unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	Analog channel: (-4.5 x VerticalScale - Offset) to (4.5 x VerticalScale - Offset)	0 V

Remarks

For VerticalScale, refer to the `:CHANnel<n>:SCALE` command. For OFFSet, refer to the `:CHANnel<n>:OFFSet` command.

Return Format

The query returns the trigger level of the data source in scientific notation.

Example

```
:TRIGger:SHOLd:DLEVel 0.16      /*Sets the trigger level of the data
source to 160 mV.*/
:TRIGger:SHOLd:DLEVel?          /*The query returns 1.600000E-1.*/
```

3.32.18.9 :TRIGger:SHOLd:CLEVel**Syntax**

```
:TRIGger:SHOLd:CLEVel <level>
```

```
:TRIGger:SHOLd:CLEVel?
```

Description

Sets or queries the trigger level of the clock source. The unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	Analog channel: (-4.5 x VerticalScale - Offset) to (4.5 x VerticalScale - Offset)	0 V

Remarks

For VerticalScale, refer to the `:CHANnel<n>:SCALE` command. For Offset, refer to the `:CHANnel<n>:OFFSET` command.

Return Format

 
The query returns the trigger level of the clock source in scientific notation.

Example

```
:TRIGger:SHOLd:CLEVel 0.05 /*Sets the trigger level of the
clock source to 50 mV.*/
:TRIGger:SHOLd:CLEVel? /*The query returns 5.000000E-2.*/
```

3.32.19 :TRIGger:NEDGE

The Nth edge trigger lets you to trigger on the Nth edge that occurs after a specified idle time. For example, in the waveform as shown in the figure below, the instrument should trigger on the second rising edge after the specified idle time (the time between two neighboring rising edges), and the idle time should be within the range between P and M ($P < \text{Idle Time} < M$). Wherein, M is the time between the first rising edge and its previous rising edge; P is the maximum time between the rising edges that participate in counting.

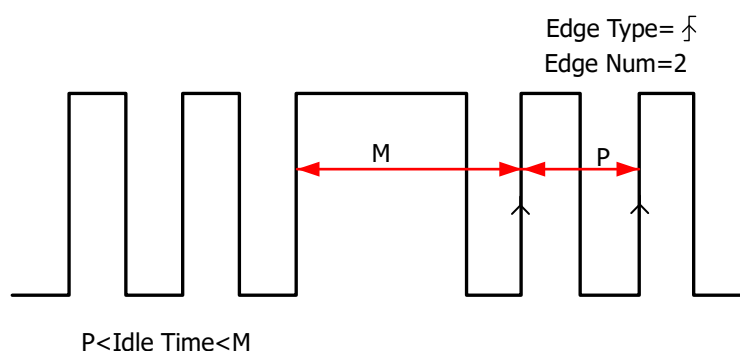

3.32.19.1 :TRIGger:NEDGE:SOURce

Syntax

```
:TRIGger:NEDGE:SOURce <source>
```

:TRIGger:NEDGE:SOURce?

Description

Sets or queries the trigger source of Edge trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

N/A

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TRIGger:NEDGE:SOURce CHANnel2 /*Sets the trigger source to
CHANnel2.*/
:TRIGger:NEDGE:SOURce? /*The query returns CHAN2.*/
```

3.32.19.2 :TRIGger:NEDGE:SLOPe

Syntax

:TRIGger:NEDGE:SLOPe <slope>

:TRIGger:NEDGE:SLOPe?

Description

Sets or queries the edge type of the Nth Edge trigger.

Parameter

Name	Type	Range	Default
<slope>	Discrete	{POSitive NEGative}	POSitive

Remarks

- **POSitive:** indicates that the oscilloscope triggers on the rising edge of the input signal when the voltage level meets the preset trigger level.

- **NEGative:** indicates that the oscilloscope triggers on the falling edge of the input signal when the voltage level meets the preset trigger level.

Return Format

The query returns POS or NEG.

Example

```
:TRIGger:NEDGE:SLOPe NEGative /*Sets the edge type to
NEGative */
:TRIGger:NEDGE:SLOPe? /*The query returns NEG.*/
```

3.32.19.3 :TRIGger:NEDGE:IDLE

Syntax

```
:TRIGger:NEDGE:IDLE <time>
```

```
:TRIGger:NEDGE:IDLE?
```

Description

Sets or queries the idle time of the Nth Edge trigger. The default unit is s.

Parameter

Name	Type	Range	Default
<time>	Real	16 ns to 10 s	1μs

Remarks

N/A

Return Format

The query returns the idle time in scientific notation.

Example

```
:TRIGger:NEDGE:IDLE 0.002 /*Sets the idle time to 2 ms.*/
:TRIGger:NEDGE:IDLE? /*The query returns 2.000000E-3.*/
```

3.32.19.4 :TRIGger:NEDGE:EDGE

Syntax

```
:TRIGger:NEDGE:EDGE <edge>
```

```
:TRIGger:NEDGE:EDGE?
```

Description

Sets or queries the number of edges of the Nth Edge trigger.

Parameter

Name	Type	Range	Default
<edge>	Integer	1 to 65535	1

Remarks

N/A

Return Format

The query returns an integer ranging from 1 to 65535.

Example

```
:TRIGger:NEDGE:EDGE 20      /*Sets the number of edges to 20.*/
:TRIGger:NEDGE:EDGE?        /*The query returns 20.*/
```

3.32.19.5 :TRIGger:NEDGE:LEVel**Syntax**

```
:TRIGger:NEDGE:LEVel <level>
```

```
:TRIGger:NEDGE:LEVel?
```

Description

Sets or queries the trigger level of the Nth Edge trigger. The unit is the same as that of current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	Analog channel: (-4.5 x VerticalScale - Offset) to (4.5 x VerticalScale - Offset)	0 V

Remarks

For VerticalScale, refer to the `:CHANnel<n>:SCALE` command. For OFFSet, refer to the `:CHANnel<n>:OFFSet` command.

Return Format

The query returns the trigger level in scientific notation.

Example

```
:TRIGger:NEDGE:LEVel 0.16    /*Sets the trigger level to 160 mV.*/
:TRIGger:NEDGE:LEVel?        /*The query returns 1.600000E-1.*/
```

3.32.20 :TRIGger:RS232

RS232 bus is a serial communication mode used in data transmission between PCs or between a PC and a terminal. In RS232 serial protocol, a character is transmitted as a frame of data. The frame consists of 1 start bit, 5-8 data bits, 1 check bit, and 1-2 stop bits. Its format is as shown in the figure below. This series oscilloscope triggers when the start frame, error frame, check error, or the specified data of the RS232 signal is detected.

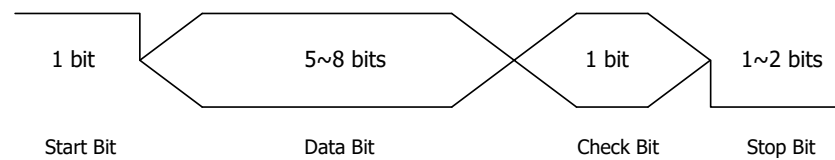 


Figure 3.8 Schematic Diagram of RS232 Frame Format

3.32.20.1 :TRIGger:RS232:SOURce

Syntax

```
:TRIGger:RS232:SOURce <source>

:TRIGger:RS232:SOURce?
```

Description

Sets or queries the trigger source of RS232 trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TRIGger:RS232:SOURce CHANnel2    /*Sets the trigger source to
CHANnel2.*/
:TRIGger:RS232:SOURce?            /*The query returns CHAN2.*/
```

3.32.20.2 :TRIGger:RS232:LEVel**Syntax**

```
:TRIGger:RS232:LEVel <level>
```

```
:TRIGger:RS232:LEVel?
```

Description

Sets or queries the trigger level of RS232 trigger. The unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	Analog channel: (-4.5 x VerticalScale - Offset) to (4.5 x VerticalScale - Offset)	0 V

Remarks

For VerticalScale, refer to the `:CHANnel<n>:SCALE` command. For OFFSet, refer to the `:CHANnel<n>:OFFSet` command.

Return Format

The query returns the trigger level in scientific notation.

Example

```
:TRIGger:RS232:LEVel 0.16    /*Sets the trigger level to 160 mV.*/
:TRIGger:RS232:LEVel?        /*The query returns 1.600000E-1.*/
```

3.32.20.3 :TRIGger:RS232:POLarity**Syntax**

```
:TRIGger:RS232:POLarity <polarity>
```

```
:TRIGger:RS232:POLarity?
```

Description

Sets or queries the pulse polarity of RS232 trigger.

Parameter

Name	Type	Range	Default
<polarity>	Discrete	{POSitive NEGative}	POSitive

Remarks

N/A

Return Format

The query returns POS or NEG.

Example

```
:TRIGger:RS232:POLarity POSitive /*Sets the pulse polarity of
RS232 trigger to POSitive.*/
:TRIGger:RS232:POLarity? /*The query returns POS.*/
```

3.32.20.4 :TRIGger:RS232:WHEN**Syntax**

```
:TRIGger:RS232:WHEN <when>
```

```
:TRIGger:RS232:WHEN?
```

Description

Sets or queries the trigger condition of RS232 trigger.

Parameter

Name	Type	Range	Default
<when>	Discrete	{START ERRor CERRor DATA}	START

Remarks

- **START:** triggers at the start of a frame.
- **ERRor:** triggers when an error frame is found.
- **CERRor:** triggers when a check error is found.
- **DATA:** triggers on the last bit of the preset data bits.

Return Format

The query returns STAR, ERR, CERR, or DATA.

Example

```
:TRIGger:RS232:WHEN ERRor /*Sets the trigger condition to
ERRor.*/
:TRIGger:RS232:WHEN? /*The query returns ERR.*/
```

3.32.20.5 :TRIGger:RS232:DATA**Syntax**

```
:TRIGger:RS232:DATA <data>
```

```
:TRIGger:RS232:DATA?
```

Description

Sets or queries the data value of RS232 trigger when the trigger condition is "Data".

Parameter

Name	Type	Range	Default
<data>	Integer	0 to 2^n-1	0

Remarks

In the expression 2^n-1 , n indicates the current data bits, and its available value can be 5, 6, 7, and 8. You can send the `:TRIGger:RS232:WIDTH` command to set or query the data bits.

Return Format

The query returns an integer.

Example

```
:TRIGger:RS232:DATA 10      /*Sets the data value to 10.*/
:TRIGger:RS232:DATA?        /*The query returns 10.*/
```

3.32.20.6 :TRIGger:RS232:BAUD**Syntax**

```
:TRIGger:RS232:BAUD <baud>
```

```
:TRIGger:RS232:BAUD?
```

Description

Sets or queries the baud rate of RS232 trigger. The default unit is bps.

Parameter

Name	Type	Range	Default
<baud>	Integer	1bps to 20Mbps	9600 bps

Remarks

N/A

Return Format

The query returns an integer ranging from 1 bps to 20 Mbps.

Example

```
:TRIGger:RS232:BAUD 4800 /*Sets the baud rate to 4800 bps.*/
:TRIGger:RS232:BAUD? /*The query returns 4800.*/
```

3.32.20.7 :TRIGger:RS232:BUSer**Syntax**

```
:TRIGger:RS232:BUSer <baud>
```

```
:TRIGger:RS232:BUSer?
```

Description

Sets or queries the baud rate of RS232 trigger. The default unit is bps.

Parameter

Name	Type	Range	Default
<baud>	Integer	1bps to 20Mbps	9600 bps

Remarks

This command exists for backwards compatibility. Use the command *:TRIGger:RS232:BAUD*.

Return Format

The query returns an integer ranging from 1 bps to 20 Mbps.

Example

```
:TRIGger:RS232:BUSer 4800 /*Sets the baud rate to 4800 bps.*/
:TRIGger:RS232:BUSer? /*The query returns 4800.*/
```

3.32.20.8 :TRIGger:RS232:WIDTh**Syntax**

```
:TRIGger:RS232:WIDTh <width>
```

```
:TRIGger:RS232:WIDTh?
```

Description

Sets or queries the data width of RS232 trigger when the trigger condition is "Data".

Parameter

Name	Type	Range	Default
<width>	Discrete	{5 6 7 8}	8

Remarks

N/A

Return Format

The query returns 5, 6, 7, or 8.

Example

```
:TRIGger:RS232:WIDTh 6 /*Sets the data width to 6.*/
:TRIGger:RS232:WIDTh? /*The query returns 6.*/
```

3.32.20.9 :TRIGger:RS232:STOP**Syntax**

```
:TRIGger:RS232:STOP <bit>
```

```
:TRIGger:RS232:STOP?
```

Description

Sets or queries the stop bits of RS232 trigger.

Parameter

Name	Type	Range	Default
<bit>	Discrete	{1 1.5 2}	1

Remarks

N/A

Return Format

The query returns 1, 1.5, or 2.

Example

```
:TRIGger:RS232:STOP 2 /*Sets the stop bits to 2.*/
:TRIGger:RS232:STOP? /*The query returns 2.*/
```

3.32.20.10 :TRIGger:RS232:PARity**Syntax**

```
:TRIGger:RS232:PARity <parity>
```

```
:TRIGger:RS232:PARity?
```

Description

Sets or queries the check mode of RS232 trigger.

Parameter

Name	Type	Range	Default
<parity>	Discrete	{EVEN ODD NONE}	NONE

Remarks

N/A

Return Format

The query returns EVEN, ODD, or NONE.

Example

```
:TRIGger:RS232:PARity EVEN /*Sets the check mode to EVEN.*/
:TRIGger:RS232:PARity? /*The query returns EVEN.*/
```

3.32.21 :TRIGger:IIC

I2C is a 2-wire serial bus used to connect the microcontroller and its peripheral device. It is a bus standard widely used in the microelectronic communication control field.

The I2C serial bus consists of SCL and SDA. Its transmission rate is determined by SCL, and its transmission data is determined by SDA, as shown in the figure below. The instrument series triggers on the start condition, restart, stop, missing acknowledgment, specific device address, or data value. Besides, it can also trigger on the specific device address and data values at the same time.

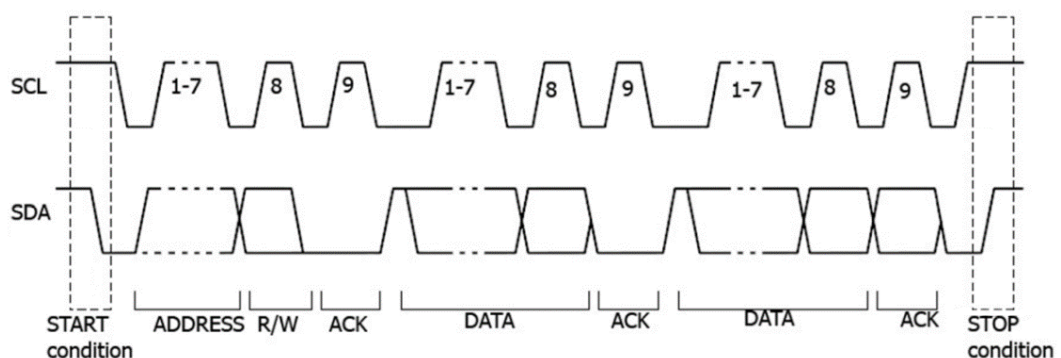 


Figure 3.9 Schematic Diagram of I2C Frame Format

3.32.21.1 :TRIGger:IIC:SCL

Syntax

```
:TRIGger:IIC:SCL <source>
```

:TRIGger:IIC:SCL?

Description

Sets or queries the source channel of the clock line of I2C trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TRIGger:IIC:SCL CHANnel2 /*Sets the clock source to CHANnel2.*/
:TRIGger:IIC:SCL? /*The query returns CHAN2.*/
```

3.32.21.2 :TRIGger:IIC:CLeVel

Syntax

:TRIGger:IIC:CLeVel <level>

:TRIGger:IIC:CLeVel?

Description

Sets or queries the trigger level of the clock line in I2C trigger. The unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	Analog channel: (-4.5 x VerticalScale - Offset) to (4.5 x VerticalScale - Offset)	0 V

Remarks

For VerticalScale, refer to the **:CHANnel<n>:SCALe** command. For OFFSet, refer to the **:CHANnel<n>:OFFSet** command.

Return Format

The query returns the trigger level in scientific notation.

Example

```
:TRIGger:IIC:CLeVel 0.16 /*Sets the trigger level to 160 mV.*/
:TRIGger:IIC:CLeVel? /*The query returns 1.600000E-1.*/
```

3.32.21.3 :TRIGger:IIC:SDA

Syntax

```
:TRIGger:IIC:SDA <source>
```

```
:TRIGger:IIC:SDA?
```

Description

Sets or queries the source channel of the data line of I2C trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel2

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TRIGger:IIC:SDA CHANnel2 /*Sets the data source to CHANnel2.*/
:TRIGger:IIC:SDA? /*The query returns CHAN2.*/
```

3.32.21.4 :TRIGger:IIC:DLeVel

Syntax

```
:TRIGger:IIC:DLeVel </eve/>
```

```
:TRIGger:IIC:DLeVel?
```

Description

Sets or queries the trigger level of the data line in I2C trigger. The unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	Analog channel: (-4.5 x VerticalScale - Offset) to (4.5 x VerticalScale - Offset)	0 V

Remarks

For VerticalScale, refer to the `:CHANnel<n>:SCALE` command. For OFFSet, refer to the `:CHANnel<n>:OFFSet` command.

Return Format

The query returns the trigger level in scientific notation.

Example

```
:TRIGger:IIC:DLEVel 0.16      /*Sets the trigger level to 160 mV.*/
:TRIGger:IIC:DLEVel?          /*The query returns 1.600000E-1.*/
```

3.32.21.5 :TRIGger:IIC:WHEN**Syntax**

```
:TRIGger:IIC:WHEN <when>
```

```
:TRIGger:IIC:WHEN?
```

Description

Sets or queries the trigger condition of I2C trigger.

Parameter

Name	Type	Range	Default
<when>	Discrete	{START REStart STOP NACKnowledge ADDResS DATA ADATa}	START

Remarks

- **START:** indicates that the oscilloscope triggers when SCL is high level and SDA transitions from high level to low level.

- **REStart:** indicates that the oscilloscope triggers when another start condition occurs before a stop condition.
- **STOP:** indicates that the oscilloscope triggers when SCL is high level and SDA transitions from low level to high level.
- **NACKnowledge:** indicates missing acknowledgment. The oscilloscope triggers when SDA is high level during the acknowledgment of the SCL bit.
- **ADDRess:** indicates that the oscilloscope searches for the specified address and triggers on the read/write bit.
- **DATA:** indicates that the oscilloscope searches for the specified data on the data line (SDA) and triggers on the clock line (SCL) of the jumping edge of the last bit of the data.
- **ADATa:** indicates that the oscilloscope searches for the specified address and data, and then triggers when both the address and data meet the conditions.

Return Format

The query returns STAR, REST, STOP, NACK, ADDR, DATA, or ADAT.

Example

```
:TRIGger:IIC:WHEN REStart /*Sets the trigger condition to
REStart.*/
:TRIGger:IIC:WHEN? /*The query returns REST.*/
```

3.32.21.6 :TRIGger:IIC:AWIDth

Syntax

```
:TRIGger:IIC:AWIDth <bits>
```

```
:TRIGger:IIC:AWIDth?
```

Description

Sets or queries the address width of I2C trigger when the trigger condition is "ADDRess" or "ADATa".

Parameter

Name	Type	Range	Default
<bits>	Discrete	{7 8 10}	7

Remarks

N/A

Return Format

The query returns 7, 8, or 10.

Example

```
:TRIGger:IIC:AWIDth 10      /*Sets the address width to 10.*/
:TRIGger:IIC:AWIDth?        /*The query returns 10.*/
```

3.32.21.7 :TRIGger:IIC:ADDRess**Syntax**

```
:TRIGger:IIC:ADDRess <address>
```

```
:TRIGger:IIC:ADDRess?
```

Description

Sets or queries the address of I2C trigger when the trigger condition is "ADDRess" or "ADATa".

Parameter

Name	Type	Range	Default
<address>	Integer	0 to 2^n-1	0

Remarks

In the expression 2^n-1 , n indicates the current address width. Its range is from 0 to 127, 0 to 255, or 0 to 1,023.

Return Format

The query returns the address in integer.

Example

```
:TRIGger:IIC:ADDRess 100    /*Sets the address to 100.*/
:TRIGger:IIC:ADDRess?       /*The query returns 100.*/
```

3.32.21.8 :TRIGger:IIC:DIRection**Syntax**

```
:TRIGger:IIC:DIRection <direction>
```

```
:TRIGger:IIC:DIRection?
```

Description

Sets or queries the data direction of I2C trigger when the trigger condition is "ADDRESS" or "ADATa".

Parameter

Name	Type	Range	Default
<dir>	Discrete	{READ WRITe RWRite}	WRITe

Remarks

This command is unavailable when the address width is set to 8.

Return Format

The query returns READ, WRIT, or RWR.

Example

```
:TRIGger:IIC:DIRection RWRite    /*Sets the data direction to
RWRite.*/
:TRIGger:IIC:DIRection?          /*The query returns RWR.*/
```

3.32.21.9 :TRIGger:IIC:DBYTes**Syntax**

```
:TRIGger:IIC:DBYTes <bytes>
```

```
:TRIGger:IIC:DBYTes?
```

Description

Sets or queries of the data bytes of I2C trigger when the trigger condition is "DATA" or "ADATa".

Parameter

Name	Type	Range	Default
<bytes>	Real	1 to 5	1

Remarks

N/A

Return Format

The query returns the data bytes in scientific notation.

Example

```
:TRIGger:IIC:DBYTes 3    /*Sets the data bytes to 3 when the
trigger condition is "DATA" or "ADATa".*/
:TRIGger:IIC:DBYTes?      /*The query returns 3.*/
```

3.32.21.10 :TRIGger:IIC:DATA**Syntax**

```
:TRIGger:IIC:DATA <data>
```

```
:TRIGger:IIC:DATA?
```

Description

Sets or queries the data value of I2C trigger when the trigger condition is "DATA" or "ADATa".

Parameter

Name	Type	Range	Default
<data>	Integer	0 to $2^{40}-1$	0

Remarks

The settable range of <data> is affected by the data bytes. You can send the *:TRIGger:IIC:DBYTes* command to set the data bytes. The maximum byte length can be set to 5, that is, 40-bit binary data. Therefore, the range of <data> is from 0 to $2^{40}-1$.

Return Format

The query returns an integer.

Example

```
:TRIGger:IIC:DATA 64 /*Sets the data value to 64.*/
:TRIGger:IIC:DATA? /*The query returns 64.*/
```

3.32.21.11 :TRIGger:IIC:CURREbit**Syntax**

```
:TRIGger:IIC:CURREbit <currbit>
```

```
:TRIGger:IIC:CURREbit?
```

Description

Sets or queries the current bit of the I2C trigger data.

Parameter

Name	Type	Range	Default
<currbit>	Integer	0 to 39	0

Remarks

After configuring the settings for this command, you can send the **:TRIGger:IIC:CODE** command to set or modify the set bit data.

Return Format

The query returns an integer ranging from 0 to 39.

Example

```
:TRIGger:IIC:CURRbit 8 /*Sets the current bit of I2C trigger
data to 8. That is, the oscilloscope triggers on the 9th bit of
I2C trigger data.*/
:TRIGger:IIC:CURRbit? /*The query returns 8.*/
```

3.32.21.12 :TRIGger:IIC:CODE**Syntax**

:TRIGger:IIC:CODE <code>

:TRIGger:IIC:CODE?

Description

Sets or queries the data value of a certain bit of I2C trigger.

Parameter

Name	Type	Range	Default
<code>	Discrete	{0 1 255}	255

Remarks

When <code> is set to 255, it indicates the data value can be any value.

After sending the **:TRIGger:IIC:CURRbit** command to set the specified bit, you can send this command to query or modify the value of the specified data bit.

Return Format

The query returns 0, 1, or 255.

Example

```
:TRIGger:IIC:CODE 0 /*Sets the data value to 0.*/
:TRIGger:IIC:CODE? /*The query returns 0.*/
```

3.32.22 :TRIGger:SPI

In SPI trigger, after the CS or timeout condition is satisfied, the oscilloscope triggers when the specified data is found. When using SPI trigger, you need to specify the CLK clock sources and MISO data sources.

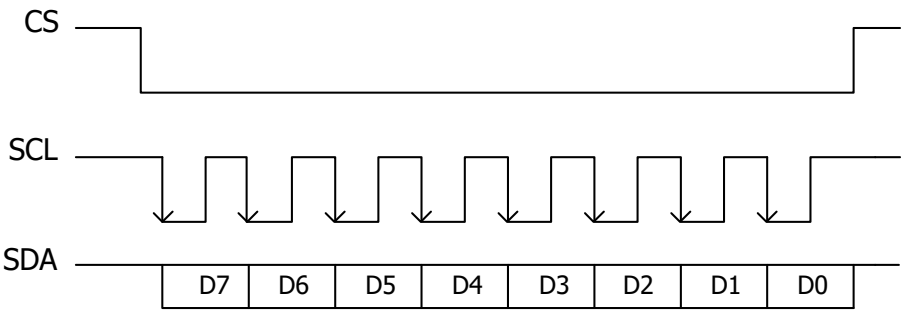 


Figure 3.10 Sequential Chart of SPI Bus

3.32.22.1 :TRIGger:SPI:CLK

Syntax

```
:TRIGger:SPI:CLK <source>
:TRIGger:SPI:CLK?
```

Description

Sets or queries the channel source of the clock line of SPI trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

N/A

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TRIGger:SPI:CLK CHANnel3 /*Sets the channel source of the data
line of SPI trigger to CHANnel3.*/
:TRIGger:SPI:CLK?          /*The query returns CHAN3.*/
```

3.32.22.2 :TRIGger:SPI:SCL

Syntax

```
:TRIGger:SPI:SCL <source>
```

:TRIGger:SPI:SCL?

Description

Sets or queries the channel source of the clock line of SPI trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TRIGger:SPI:SCL CHANnel1 /*Sets the channel source of the clock
line to CHANnel1.*/
:TRIGger:SPI:SCL? /*The query returns CHAN1.*/
```

3.32.22.3 :TRIGger:SPI:CLeVel

Syntax

:TRIGger:SPI:CLeVel <level>

:TRIGger:SPI:CLeVel?

Description

Sets or queries the trigger level of the clock channel of SPI trigger. The unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	Analog channel: (-4.5 x VerticalScale - OFFSet) to (4.5 x VerticalScale - OFFSet)	0 V

Remarks

For VerticalScale, refer to the **:CHANnel<n>:SCALe** command. For OFFSet, refer to the **:CHANnel<n>:OFFSet** command.

Return Format

The query returns the trigger level in scientific notation.

Example

```
:TRIGger:SPI:CLeVel 0.16      /*Sets the trigger level to 160 mV.*/
:TRIGger:SPI:CLeVel?          /*The query returns 1.600000E-1.*/
```

3.32.22.4 :TRIGger:SPI:SLOPe**Syntax**

```
:TRIGger:SPI:SLOPe <slope>
```

```
:TRIGger:SPI:SLOPe?
```

Description

Sets or queries the type of the clock edge of SPI trigger.

Parameter

Name	Type	Range	Default
<slope>	Discrete	{POSitive NEGative}	POSitive

Remarks

- **POSitive:** samples the data on the rising edge of the clock.
- **NEGative:** samples the data on the falling edge of the clock.

Return Format

The query returns POS or NEG.

Example

```
:TRIGger:SPI:SLOPe POSitive    /*Sets the clock edge to POSitive.*/
:TRIGger:SPI:SLOPe?            /*The query returns POS.*/
```

3.32.22.5 :TRIGger:SPI:MISO**Syntax**

```
:TRIGger:SPI:MISO <source>
```

```
:TRIGger:SPI:MISO?
```

Description

Sets or queries the channel source of the data line of SPI trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel2

Remarks

N/A

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TRIGger:SPI:MISO CHANnel3 /*Sets the channel source of the data
line of SPI trigger to CHANnel3.*/
:TRIGger:SPI:MISO? /*The query returns CHAN3.*/
```

3.32.22.6 :TRIGger:SPI:SDA**Syntax**

```
:TRIGger:SPI:SDA <source>
```

```
:TRIGger:SPI:SDA?
```

Description

Sets or queries the channel source of the data line of SPI trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel2

Remarks

N/A

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TRIGger:SPI:SDA CHANnel2 /*Sets the channel source of the data
line of SPI trigger to CHANnel2.*/
:TRIGger:SPI:SDA? /*The query returns CHAN2.*/
```

3.32.22.7 :TRIGger:SPI:DLEVel**Syntax**

```
:TRIGger:SPI:DLEVel <level>
```

```
:TRIGger:SPI:DLEVel?
```

Description

Sets or queries the trigger level of the data channel of SPI trigger. The unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	Analog channel: (-4.5 x VerticalScale - Offset) to (4.5 x VerticalScale - Offset)	0 V

Remarks

For VerticalScale, refer to the **:CHANnel<n>:SCALE** command. For OFFSet, refer to the **:CHANnel<n>:OFFSet** command.

Return Format

The query returns the trigger level in scientific notation.

Example

```
:TRIGger:SPI:DLEVel 0.16 /*Sets the trigger level to 160 mV.*/
:TRIGger:SPI:DLEVel? /*The query returns 1.600000E-1.*/
```

3.32.22.8 :TRIGger:SPI:WHEN**Syntax**

```
:TRIGger:SPI:WHEN <when>
```

```
:TRIGger:SPI:WHEN?
```

Description

Sets or queries the trigger condition of SPI trigger.

Parameter

Name	Type	Range	Default
<when>	Discrete	{CS TIMEout}	CS

Remarks

- CS: if the CS signal is valid, the oscilloscope will trigger when the data (SDA) satisfying the trigger conditions is found.
- TIMEout: the oscilloscope starts to search for the data (MISO) on which to trigger after the clock signal (CLK) stays in the idle state for a specified period of time.

Return Format

The query returns CS or TIM.

Example

```
:TRIGger:SPI:WHEN TIMEout /*Sets the trigger condition to
TIMEout.*/
:TRIGger:SPI:WHEN? /*The query returns TIM.*/
```

3.32.22.9 :TRIGger:SPI:CS**Syntax**

```
:TRIGger:SPI:CS <source>
```

```
:TRIGger:SPI:CS?
```

Description

Sets or queries the source channel of the CS line when the trigger condition of SPI is set to CS.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel3

Remarks

This command is valid only when the trigger condition of SPI is set to CS. You can send **:TRIGger:SPI:WHEN** to set or query the trigger condition of SPI trigger.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TRIGger:SPI:CS CHANnel2 /*Sets the source channel of the CS line
to CHANnel2 when the trigger condition of SPI is set to CS.*/
:TRIGger:SPI:CS? /*The query returns CHAN2.*/
```

3.32.22.10 :TRIGger:SPI:SLEVel

Syntax

```
:TRIGger:SPI:SLEVel <level>
```

```
:TRIGger:SPI:SLEVel?
```

Description

Sets or queries the trigger level of the CS channel of SPI trigger. The unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	Analog channel: (-4.5 x VerticalScale - OFFSet) to (4.5 x VerticalScale - OFFSet)	0 V

Remarks

- This setting command is valid only when the trigger condition of SPI trigger is CS. You can run the *:TRIGger:SPI:WHEN* command to set or query the trigger condition of SPI trigger.
- For VerticalScale, refer to the *:CHANnel<n>:SCALE* command. For OFFSet, refer to the *:CHANnel<n>:OFFSet* command.

Return Format

The query returns the trigger level in scientific notation.

Example

```
:TRIGger:SPI:SLEVel 0.16 /*Sets the trigger level to 160 mV.*/
:TRIGger:SPI:SLEVel? /*The query returns 1.600000E-1.*/
```

3.32.22.11 :TRIGger:SPI:MODE

Syntax

`:TRIGger:SPI:MODE <mode>`

`:TRIGger:SPI:MODE?`

Description

Sets or queries the CS mode of SPI trigger when the trigger condition is "CS".

Parameter

Name	Type	Range	Default
<mode>	Discrete	{HIGH LOW}	LOW

Remarks

This setting command is only valid in CS mode. You can send `:TRIGger:SPI:WHEN` to set or query the trigger condition of SPI trigger.

Return Format

The query returns HIGH or LOW.

Example

```
:TRIGger:SPI:MODE LOW /*Sets the CS mode to LOW.*/  
:TRIGger:SPI:MODE? /*The query returns LOW.*/
```

3.32.22.12 :TRIGger:SPI:TIMEout

Syntax

`:TRIGger:SPI:TIMEout <time>`

`:TRIGger:SPI:TIMEout?`

Description

Sets or queries the timeout value when the trigger condition of SPI trigger is "Timeout". The default unit is s.

Parameter

Name	Type	Range	Default
<time>	Real	8 ns to 10 s	1 μ s

Remarks

This setting command is valid only when the trigger condition of SPI trigger is Timeout. You can run the `:TRIGger:SPI:WHEN` command to set or query the trigger condition of SPI trigger.

Return Format

The query returns the timeout value in scientific notation.

Example

```
:TRIGger:SPI:TIMEout 0.001 /*Sets the timeout value to 1 ms.*/
:TRIGger:SPI:TIMEout? /*The query returns 1.000000E-3.*/
```

3.32.22.13 :TRIGger:SPI:WIDTh**Syntax**

```
:TRIGger:SPI:WIDTh <width>
```

```
:TRIGger:SPI:WIDTh?
```

Description

Sets or queries the data width of data channel in SPI trigger.

Parameter

Name	Type	Range	Default
<width>	Integer	4 to 32	8

Remarks

N/A

Return Format

The query returns an integer ranging from 4 to 32.

Example

```
:TRIGger:SPI:WIDTh 10 /*Sets the data width to 10.*/
:TRIGger:SPI:WIDTh? /*The query returns 10.*/
```

3.32.22.14 :TRIGger:SPI:DATA**Syntax**

```
:TRIGger:SPI:DATA <data>
```

```
:TRIGger:SPI:DATA?
```

Description

Sets or queries the data value of SPI trigger.

Parameter

Name	Type	Range	Default
<data>	Integer	0 to $2^{32}-1$	0

Remarks

The range of the parameter <data> is related to the current data width. You can send the *:TRIGger:SPI:WIDTH* command to set or query the data width. The available maximum data width is 32. Therefore, the range of <data> is from 0 to $2^{32}-1$.

Return Format

The query returns an integer.

Example

```
:TRIGger:SPI:DATA 5      /*Sets the data value to 5.*/
:TRIGger:SPI:DATA?      /*The query returns 5.*/
```

3.32.22.15 :TRIGger:SPI:CURREbit**Syntax**

```
:TRIGger:SPI:CURREbit <currbit>
```

```
:TRIGger:SPI:CURREbit?
```

Description

Sets or queries the current bit of the SPI trigger data.

Parameter

Name	Type	Range	Default
<currbit>	Integer	0 to 39	0

Remarks

After configuring the settings for this command, you can send the *:TRIGger:SPI:CODE* command to set or modify the set bit data.

Return Format

The query returns an integer ranging from 0 to 39.

Example

```
:TRIGger:SPI:CURREbit 8 /*Sets the current bit of SPI trigger
data to 8. That is, the oscilloscope triggers on the 9th bit of
SPI trigger data.*/
:TRIGger:SPI:CURREbit? /*The query returns 8.*/
```

3.32.22.16 :TRIGger:SPI:CODE**Syntax**

```
:TRIGger:SPI:CODE <code>
```

```
:TRIGger:SPI:CODE?
```

Description

Sets or queries the data value of a certain bit of SPI trigger.

Parameter

Name	Type	Range	Default
<code>	Discrete	{0 1 255}	255

Remarks

When <code> is set to 255, it indicates the data value can be any value.

After sending the *:TRIGger:SPI:CURRbit* command to set the specified bit, you can send this command to query or modify the value of the specified data bit.

Return Format

The query returns 0, 1, or 255.

Example

```
:TRIGger:SPI:CODE 0      /*Sets the data value to 0.*/
:TRIGger:SPI:CODE?       /*The query returns 0.*/
```

3.32.23 :TRIGger:CAN

The :TRIGger:CAN commands are used to set relevant parameters for the CAN trigger.

This oscilloscope can trigger on the start of a frame, end of a frame, frame of the specified type (e.g. Remote, Overload, Data, etc.), or error frame of the specified type (e.g. Answer Error, Check Error, Format Error, etc.) of the CAN signal.

The data frame format of the CAN bus is as shown in the figure below.

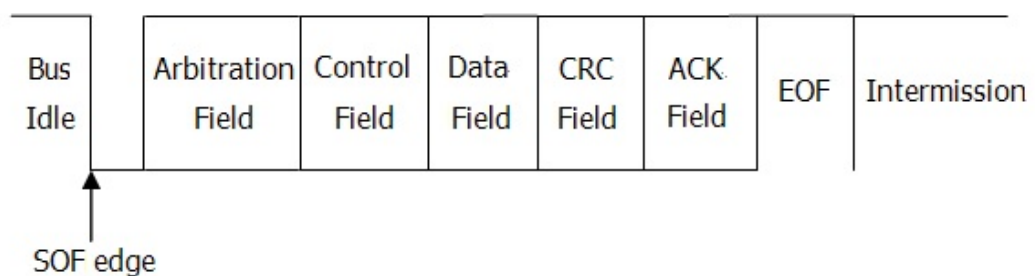 


Figure 3.11 Data Frame Format of the CAN Bus

3.32.23.1 :TRIGger:CAN:BAUD

Syntax

```
:TRIGger:CAN:BAUD <baud>
```

```
:TRIGger:CAN:BAUD?
```


Description

Sets or queries the signal rate of CAN trigger. The unit is bps.

Parameter

Name	Type	Range	Default
<baud>	Integer	10 kbps to 5 Mbps	1 Mbps

Remarks

N/A

Return Format

The query returns an integer ranging from 10 kbps to 5 Mbps.

Example

```
:TRIGger:CAN:BAUD 125000 /*Sets the signal rate to 125000 bps.*/
:TRIGger:CAN:BAUD? /*The query returns 125000.*/
```

3.32.23.2 :TRIGger:CAN:SOURce**Syntax**

```
:TRIGger:CAN:SOURce <source>
```

```
:TRIGger:CAN:SOURce?
```

Description

Sets or queries the trigger source of CAN trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

N/A

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TRIGger:CAN:SOURce CHANnel2 /*Sets the trigger source to
CHANnel2.*/
:TRIGger:CAN:SOURce? /*The query returns CHAN2.*/
```

3.32.23.3 :TRIGger:CAN:STYPe**Syntax**

```
:TRIGger:CAN:STYPe <stype>
```

```
:TRIGger:CAN:STYPe?
```

Description

Sets or queries the signal type of CAN trigger.

Parameter

Name	Type	Range	Default
<stype>	Discrete	{H L RXTX DIFFerential}	H

Remarks

- **H:** indicates the actual CAN_H differential bus signal.
- **L:** indicates the actual CAN_L differential bus signal.
- **RXTX:** indicates the Receive or Transmit signal from the CAN bus transceiver.
- **DIFFerential:** indicates the CAN differential bus signal connected to an analog channel by using a differential probe. Connect the differential probe's positive lead to the CAN_H bus signal and connect the negative lead to the CAN_L bus signal.

Return Format

The query returns H, L, RXTX, or DIFF.

Example

```
:TRIGger:CAN:STYPe L /*Sets the signal type to CAN_L
differential bus signal.*/
:TRIGger:CAN:STYPe? /*The query returns L.*/
```

3.32.23.4 :TRIGger:CAN:WHEN**Syntax**

```
:TRIGger:CAN:WHEN <cond>
```

```
:TRIGger:CAN:WHEN?
```

Description

Sets or queries the trigger condition of CAN trigger.

Parameter

Name	Type	Range	Default
<cond>	Discrete	{SOF EOF IDRemote OVERload IDFrame DATAframe IDData ERFrame ERANswer ERCheck ERFormat ERRandom ERBit}	SOF

Remarks

- **SOF:** indicates start of frame. It indicates that the oscilloscope triggers at the start of a data frame.
- **EOF:** indicates end of frame. It indicates that the oscilloscope triggers at the end of a data frame.

Frame Type

- **IDRemote:** indicates remote ID. It indicates that the oscilloscope triggers on the remote frame with the specified ID.
- **OVERload:** indicates overload frame. It indicates that the oscilloscope triggers on the CAN overload frames.
- **IDFrame:** indicates frame ID. It indicates that the oscilloscope triggers on the data frames with the specified ID.
- **DATAframe:** indicates frame data. It indicates that the oscilloscope triggers on the data frames with specified data.
- **IDData:** indicates Data & ID. It indicates that the oscilloscope triggers on the data frames with the specified ID and data.

Frame Error

- **ERFrame:** indicates frame error. It indicates that the oscilloscope triggers on the error frame.
- **ERANswer:** indicates answer error. It indicates that the oscilloscope triggers on the answer error frame.

- **ERCheck:** indicates check error. It indicates that the oscilloscope triggers on the check error frame.
- **ERFormat:** indicates format error. It indicates that the oscilloscope triggers on the format error frame.
- **ERRandom:** indicates random error. It indicates that the oscilloscope triggers on the random error frame, such as the format error frame, answer error frame, etc.
- **ERBit:** indicates bit fill. It indicates that the oscilloscope triggers on the error frame with the bit fill.

Return Format

The query returns SOF, EOF, IDR, OVER, IDFR, DAT, IDD, ERFR, ERAN, ERCH, ERF, ERR, or ERB.

Example

```
:TRIGger:CAN:WHEN EOF      /*Sets the trigger condition to EOF.*/
:TRIGger:CAN:WHEN?         /*The query returns EOF.*/
```

3.32.23.5 :TRIGger:CAN:SPOint

Syntax

```
:TRIGger:CAN:SPOint <spoint>
```

```
:TRIGger:CAN:SPOint?
```

Description

Sets or queries the sample point position of CAN trigger (expressed in %).

Parameter

Name	Type	Range	Default
<spoint>	Integer	10 to 90	50

Remarks

The sample point is within the range of the bit time. The oscilloscope samples the bit level at the sample point. The sample point position is expressed as the ratio of "time from the bit start to the sample point" to "bit time", in %.

Return Format

The query returns an integer ranging from 10 to 90.

Example

```
:TRIGger:CAN:SPoint 60          /*Sets the sample point position of
CAN trigger to 60%.*/
:TRIGger:CAN:SPoint?           /*The query returns 60.*/
```

3.32.23.6 :TRIGger:CAN:EXTended**Syntax**

```
:TRIGger:CAN:EXTended <bool>
```

```
:TRIGger:CAN:EXTended?
```

Description

Enables or disables the extended ID when the trigger condition of CAN trigger is "Remote ID" or "Frame ID"; queries whether the extended ID is enabled when the trigger condition of CAN trigger is "Remote ID" or "Frame ID".

Parameter

Name	Type	Range	Default
<bool>	Bool	{0 1 OFF ON FALSE TRUE}	0 OFF FALSE

Remarks

- **0|OFF|FALSE:** disables the extended ID.
- **1|ON|TRUE:** enables the extended ID.

To set or query the trigger condition of CAN trigger, send the *:TRIGger:CAN:WHEN* command.

Return Format

The query returns 0 or 1.

Example

```
:TRIGger:CAN:EXTended ON /*Enables the extended ID.*/
:TRIGger:CAN:EXTended    /*The query returns 1.*/
```

3.32.23.7 :TRIGger:CAN:DEFine**Syntax**

```
:TRIGger:CAN:DEFine <type>
```

```
:TRIGger:CAN:DEFine?
```

Description

Sets to define ID or Data when the trigger condition of CAN trigger is set to Data&ID; queries to define ID or Data when the trigger condition of CAN trigger is set to Data&ID.

Parameter

Name	Type	Range	Default
<type>	Discrete	{DATA ID FALSE TRUE}	DATA FALSE

Remarks

- **DATA|FALSE:** sets Define to Data.
- **ID|TRUE:** sets Define to ID.

To set or query the trigger condition of CAN trigger, send the *:TRIGger:CAN:WHEN* command.

Return Format

The query returns DATA, ID, FALS, or TRUE.

Example

```
:TRIGger:CAN:DEFine ID /*Sets to define ID.*/
:TRIGger:CAN:DEFine? /*The query returns ID.*/
```

3.32.23.8 :TRIGger:CAN:DWIDth**Syntax**

:TRIGger:CAN:DWIDth <data>

:TRIGger:CAN:DWIDth?

Description

Sets or queries the data width of CAN trigger when the trigger condition is "DATAframe" or "IDData".

Parameter

Name	Type	Range	Default
<data>	Integer	1 to 8	1

Remarks

N/A

Return Format

The query returns an integer ranging from 1 to 8.

Example

```
:TRIGger:CAN:DWIDth 5 /*Sets the data width of CAN trigger to 5  
when the trigger condition is "DATAframe" or "IDData".*/  
:TRIGger:CAN:DWIDth? /*The query returns 5.*/
```

3.32.23.9 :TRIGger:CAN:DATA

Syntax

:TRIGger:CAN:DATA <data>

:TRIGger:CAN:DATA?

Description

Sets or queries the data value of CAN trigger.

Parameter

Name	Type	Range	Default
<data>	Integer	0 to $2^{40}-1$	0

Remarks

The settable range of <data> is affected by the data bytes. You can send the *:TRIGger:IIC:DBYTes* command to set the data bytes. The maximum byte length can be set to 5, i.g. 40-bit binary data. Therefore, the range of <data> is from 0 to $2^{40}-1$.

This command is valid when the trigger condition is set to "Frame Data" or "Data & ID" (send *:TRIGger:CAN:WHEN* command to set or query).

- When the trigger condition is "Frame Data", the setting command is used to set the data value.
- When the trigger condition is "Data & ID", the value to be set by sending the setting command is based on the *:TRIGger:CAN:DEFine* command.
 - When Define is set to "ID", the setting command is used to set the ID value.
 - When Define is set to "Data", the setting command is used to set the data value.

Return Format

The query returns an integer.

Example

```
:TRIGger:CAN:DATA 100 /*Sets the data value of CAN trigger to 100.*/
:TRIGger:CAN:DATA? /*The query returns 100.*/
```

3.32.23.10 :TRIGger:CAN:CURREbit**Syntax**

```
:TRIGger:CAN:CURREbit <currbit>
:TRIGger:CAN:CURREbit?
```

Description

Sets or queries the current bit of the CAN trigger data.

Parameter

Name	Type	Range	Default
<currbit>	Integer	0 to 39	0

Remarks

After configuring the settings for this command, you can send the *:TRIGger:CAN:CODE* command to set or modify the set bit data.

Return Format

The query returns an integer ranging from 0 to 39.

Example

```
:TRIGger:CAN:CURREbit 8 /*Sets the current bit of CAN trigger data to 8. That is, the oscilloscope triggers on the 9th bit of CAN trigger data.*/
:TRIGger:CAN:CURREbit? /*The query returns 8.*/
```

3.32.23.11 :TRIGger:CAN:CODE**Syntax**

```
:TRIGger:CAN:CODE <code>
:TRIGger:CAN:CODE?
```

Description

Sets or queries the data value of a certain bit of CAN trigger.

Parameter

Name	Type	Range	Default
<code>	Discrete	{0 1 255}	255

Remarks

When `<code>` is set to 255, it indicates the data value can be any value.

After sending the `:TRIGger:CAN:CURRbit` command to set the specified bit, you can send this command to query or modify the value of the specified data bit.

Return Format

The query returns 0, 1, or 255.

Example

```
:TRIGger:CAN:CODE 0      /*Sets the data value to 0.*/
:TRIGger:CAN:CODE?      /*The query returns 0.*/
```

3.32.23.12 :TRIGger:CAN:LEVel**Syntax**

```
:TRIGger:CAN:LEVel <level>
```

```
:TRIGger:CAN:LEVel?
```

Description

Sets or queries the trigger level of CAN trigger. Its unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	Analog channel: (-4.5 x VerticalScale - Offset) to (4.5 x VerticalScale - Offset)	0 V

Remarks

For VerticalScale, refer to the `:CHANnel<n>:SCALE` command. For OFFSet, refer to the `:CHANnel<n>:OFFSet` command.

Return Format

The query returns the trigger level in scientific notation.

Example

```
:TRIGger:CAN:LEVel 0.16    /*Sets the trigger level to 160 mV.*/
:TRIGger:CAN:LEVel?        /*The query returns 1.600000E-1.*/
```

3.32.23.13 :TRIGger:CAN:FDBaud (Option)**Syntax**

```
:TRIGger:CAN:FDBaud <fdbaud>
```

:TRIGger:CAN:FDBaud?

Description

Sets or queries the CAN-FD baud rate of CAN trigger. The unit is bps.

Parameter

Name	Type	Range	Name
<fdbaud>	Integer	1Mbps 至 10Mbps	1Mbps

Remarks

N/A

Return Format

The query returns an integer ranging from 1M to 10M.

Example

```
:TRIGger:CAN:FDBaud 120000 /*Sets the CAN-FD baud rate of
CAN trigger to 120000bps.*/
:TRIGger:CAN:FDBaud? /*The query returns 120000.*/
```

3.32.23.14 :TRIGger:CAN:FDSPoint (Option)

Syntax

:TRIGger:CAN:FDSPoint <fdspoint>

:TRIGger:CAN:FDSPoint?

Description

Sets or queries the FD sample position of CAN trigger (expressed in percentage).

Parameter

Name	Type	Range	Default
<fdspoint>	Integer	10 to 90	50

Remarks

The sample point is within the range of the bit time. The oscilloscope samples the bit level at the sample point. The sample point position is expressed as the ratio of "time from the bit start to the sample point" to "bit time", in %.

Return Format

The query returns an integer ranging from 10 to 90.

Example

```
:TRIGger:CAN:FDSPoint 70          /*Sets the FD sample position of
CAN trigger to 70%.*/
:TRIGger:CAN:FDSPoint?           /*The query returns 70.*/
```

3.32.24 :TRIGger:LIN (Option)

The :TRIGger:LIN commands are used to set relevant parameters for the LIN trigger. The oscilloscope can trigger on the sync field of LIN signal, and can also trigger on the specified identifier, data, or frame.

The data frame format of the LIN bus is as shown in the figure below.

 


Figure 3.12 Data Frame Format of the LIN Bus

3.32.24.1 :TRIGger:LIN:SOURce

Syntax

```
:TRIGger:LIN:SOURce <source>
:TRIGger:LIN:SOURce?
```

Description

Sets or queries the trigger source of LIN trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TRIGger:LIN:SOURce CHANnel2    /*Sets the trigger source to
CHANnel2.*/
:TRIGger:LIN:SOURce?            /*The query returns CHAN2.*/
```

3.32.24.2 :TRIGger:LIN:LEVel**Syntax**

```
:TRIGger:LIN:LEVel <level>
```

```
:TRIGger:LIN:LEVel?
```

Description

Sets or queries the trigger level of LIN trigger. Its unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	Analog channel: (-4.5 x VerticalScale - Offset) to (4.5 x VerticalScale - Offset)	0 V

Remarks

For VerticalScale, refer to the *:CHANnel<n>:SCALE* command. For OFFSet, refer to the *:CHANnel<n>:OFFSet* command.

Return Format

The query returns the trigger level in scientific notation.

Example

```
:TRIGger:LIN:LEVel 0.16    /*Sets the trigger level to 160 mV.*/
:TRIGger:LIN:LEVel?        /*The query returns 1.600000E-1.*/
```

3.32.24.3 :TRIGger:LIN:STANdard**Syntax**

```
:TRIGger:LIN:STANdard <std>
```

```
:TRIGger:LIN:STANdard?
```

Description

Sets or queries the protocol version of LIN trigger.

Parameter

Name	Type	Range	Default
<std>	Discrete	{1X 2X BOTH}	BOTH

Remarks

N/A

Return Format

The query returns 1X, 2X, or BOTH.

Example

```
:TRIGger:LIN:STANdard 2X          /*Sets the protocol version of
LIN trigger to 2X.*/
:TRIGger:LIN:STANdard?           /*The query returns 2X.*/
```

3.32.24.4 :TRIGger:LIN:BAUD**Syntax**

```
:TRIGger:LIN:BAUD <baud>
```

```
:TRIGger:LIN:BAUD?
```

Description

Sets or queries the baud rate of LIN trigger. The default unit is bps.

Parameter

Name	Type	Range	Default
<baud>	Integer	1 kbps to 20 Mbps	9600 bps

Remarks

N/A

Return Format

The query returns an integer ranging from 1000 to 20000000. The unit is bps.

Example

```
:TRIGger:LIN:BAUD 19200          /*Sets the baud rate of LIN trigger
to 19.2 kbps.*/
:TRIGger:LIN:BAUD?               /*The query returns 19200.*/
```

3.32.24.5 :TRIGger:LIN:SAMPlepoint**Syntax**

```
:TRIGger:LIN:SAMPlepoint <value>
```

:TRIGger:LIN:SAMPlpoint?

Description

Sets or queries the sample position of LIN trigger.

Parameter

Name	Type	Range	Default
<value>	Integer	10 to 90	50

Remarks

The sample position is expressed as the ratio of "time from the bit start to the sample point" to "bit time", in %.

Return Format

The query returns an integer ranging from 10 to 90.

Example

```
:TRIGger:LIN:SAMPlpoint 40      /*Sets the sample point
position of LIN trigger to 40%.*/
:TRIGger:LIN:SAMPlpoint?        /*The query returns 40.*/
```

3.32.24.6 :TRIGger:LIN:WHEN

Syntax

:TRIGger:LIN:WHEN <when>

:TRIGger:LIN:WHEN?

Description

Sets or queries the trigger condition of LIN trigger.

Parameter

Name	Type	Range	Default
<when>	Discrete	{SYNCbreak ID DATA IDData SLEep WAKeup ERRor}	SYNCbreak

Remarks

- **SYNCbreak:** triggers on the last bit of the sync field.
- **ID:** triggers when the frames with the specified ID are found.
- **DATA:** triggers when the data that meet the preset conditions are found.

- **IDData:** triggers when the frames with the specified ID and data that meet the preset conditions are both found.
- **SLEep:** triggers when the sleep frame is found.
- **WAKEup:** triggers when the wakeup frame is found.
- **ERRor:** triggers on the specified type of error frame.

Return Format

The query returns SYNC, ID, DATA, IDD, SLE, WAK, or ERR.

Example

```
:TRIGger:LIN:WHEN SYNCbreak /*Sets the trigger condition to
SYNCbreak.*/
:TRIGger:LIN:WHEN? /*The query returns SYNC.*/
```

3.32.24.7 :TRIGger:LIN:ERRor

Syntax

```
:TRIGger:LIN:ERRor <value>
```

```
:TRIGger:LIN:ERRor?
```

Description

Sets or queries the error type of LIN trigger when the trigger condition is "Error".

Parameter

Name	Type	Range	Default
<value>	Discrete	{SYNC ID CHECK}	SYNC

Remarks

- **SYNC:** indicates Sync error.
- **ID:** indicates Even Odd error.
- **CHECK:** check sum error.

Return Format

The query returns SYNC, ID, or CHEC.

Example

```
:TRIGger:LIN:ERRor ID /*Sets the LIN trigger error type to
ID.*/
:TRIGger:LIN:ERRor? /*The query returns ID.*/
```

3.32.24.8 :TRIGger:LIN:ID**Syntax**

```
:TRIGger:LIN:ID <id>
```

```
:TRIGger:LIN:ID?
```

Description

Sets or queries the ID value of LIN trigger when the trigger condition is "Data & ID" or "ID".

Parameter

Name	Type	Range	Default
<id>	Integer	0 to 63	0

Remarks

N/A

Return Format

The query returns an integer ranging from 0 to 63.

Example

```
:TRIGger:LIN:ID 4          /*Sets the ID value of LIN trigger
to 4.*/
:TRIGger:LIN:ID?          /*The query returns 4.*/
```

3.32.24.9 :TRIGger:LIN:DATA**Syntax**

```
:TRIGger:LIN:DATA <data>
```

```
:TRIGger:LIN:DATA?
```

Description

Sets or queries the data value of LIN trigger when the trigger condition is "Data" or "Data&ID".

Parameter

Name	Type	Range	Default
<data>	Integer	Refer to <i>Remarks</i>	0

Remarks

The range of the data value of LIN trigger is related to the value of data bytes. The maximum number of bytes can be set to 8, i.e. 64-bit binary data. Therefore, the range of <data> is from 0 to $2^{64}-1$.

Return Format

The query returns an integer ranging from 0 to $2^{64}-1$.

Example

```
:TRIGger:LIN:DATA 100 /*Sets the data value of LIN trigger to
100 when the trigger condition is "Data".*/
:TRIGger:LIN:DATA? /*The query returns 100.*/
```

3.32.24.10 :TRIGger:LIN:CURREbit**Syntax**

:TRIGger:LIN:CURREbit <currbit>

:TRIGger:LIN:CURREbit?

Description

Sets or queries the current bit of the LIN trigger data.

Parameter

Name	Type	Range	Default
<currbit>	Integer	0 to 39	0

Remarks

After configuring the settings for this command, you can send the **:TRIGger:LIN:CODE** command to set or modify the set bit data.

Return Format

The query returns an integer ranging from 0 to 39.

Example

```
:TRIGger:LIN:CURREbit 8 /*Sets the current bit of LIN trigger
data to 8. That is, the oscilloscope triggers on the 9th bit of
LIN trigger data.*/
:TRIGger:LIN:CURREbit? /*The query returns 8.*/
```

3.32.24.11 :TRIGger:LIN:CODE**Syntax**

:TRIGger:LIN:CODE <code>

:TRIGger:LIN:CODE?

Description

Sets or queries the data value of a certain bit of LIN trigger.

Parameter

Name	Type	Range	Default
<code>	Discrete	{0 1 255}	255

Remarks

When <code> is set to 255, it indicates the data value can be any value.

After sending the `:TRIGger:LIN:CURRbit` command to set the specified bit, you can send this command to query or modify the value of the specified data bit.

Return Format

The query returns 0, 1, or 255.

Example

```
:TRIGger:LIN:CODE 0      /*Sets the data value to 0.*/
:TRIGger:LIN:CODE?       /*The query returns 0.*/
```

3.32.24.12 :TRIGger:LIN:LEVel**Syntax**

```
:TRIGger:LIN:LEVel </level>
```

```
:TRIGger:LIN:LEVel?
```

Description

Sets or queries the trigger level of LIN trigger. Its unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	Analog channel: (-4.5 x VerticalScale - Offset) to (4.5 x VerticalScale - Offset)	0 V

Remarks

For VerticalScale, refer to the `:CHANnel<n>:SCALe` command. For OFFSet, refer to the `:CHANnel<n>:OFFSet` command.

Return Format

The query returns the trigger level in scientific notation.

Example

```
:TRIGger:LIN:LEVel 0.16 /*Sets the trigger level to 160 mV.*/
:TRIGger:LIN:LEVel? /*The query returns 1.600000E-1.*/
```

3.32.25 :TRIGger:IIS (Option)

The :TRIGger:IIS commands are used to set the relevant parameters for the I2S trigger.

In I2S trigger, the oscilloscope searches for the specified data value and take it as the condition for identifying the trigger. You need to specify the serial clock line (SCLK, 1 pulse is found on the clock line once 1 bit of digital audio data is sent), frame clock line (WS, used for switch the audio channel data), and serial data line (SDA, used for transmitting audio data represented in binary (2's complement)).

Below is the sequential chart of I2S bus.

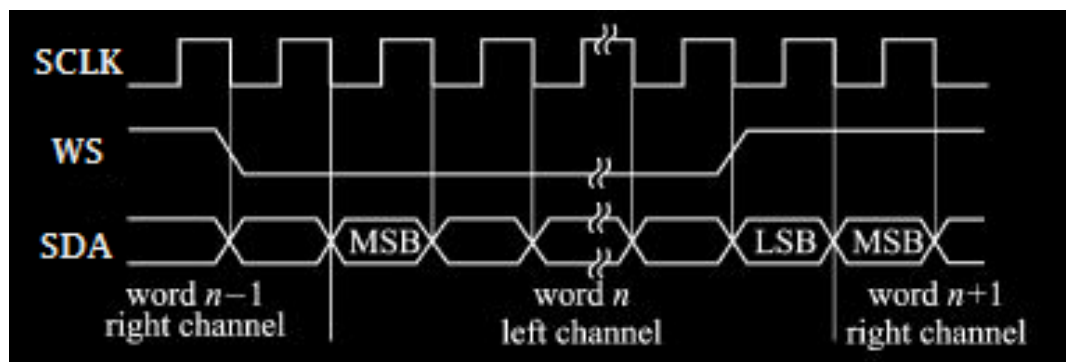 


Figure 3.13 Sequential Chart of I2S Bus

3.32.25.1 :TRIGger:IIS:SOURce:CLOCK**Syntax**

```
:TRIGger:IIS:SOURce:CLOCK <source>
```

```
:TRIGger:IIS:SOURce:CLOCK?
```

Description

Sets or queries the clock source of the I2S trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TRIGger:IIS:SOURce:CLOCK CHANnel2      /*Sets clock source to
CHANnel2.*/
:TRIGger:IIS:SOURce:CLOCK?              /*The query returns CHAN2.*/
```

3.32.25.2 :TRIGger:IIS:CLEVel**Syntax**

```
:TRIGger:IIS:CLEVel <level>
```

```
:TRIGger:IIS:CLEVel?
```

Description

Sets or queries the trigger level of the clock line source in I2S trigger. The unit is V.

Parameter

Name	Type	Range	Default
<level>	Real	Analog channel: $(-4.5 \times \text{VerticalScale} - \text{OFFSet})$ to $(4.5 \times \text{VerticalScale} - \text{OFFSet})$	0

Remarks

For VerticalScale, refer to the `:CHANnel<n>:SCALE` command. For OFFSet, refer to the `:CHANnel<n>:OFFSet` command.

Return Format

The query returns the trigger level of the clock line source in I2S trigger in scientific notation.

Example

```
:TRIGger:IIS:CLEVel 0.01      /*Sets the trigger level of trigger
level of the clock line source in I2S trigger to 0.01 V.*/
:TRIGger:IIS:CLEVel?          /*The query returns 1.000000E-2.*/
```

3.32.25.3 :TRIGger:IIS:SOURce:WSElect

Syntax

```
:TRIGger:IIS:SOURce:WSElect <source>
```

```
:TRIGger:IIS:SOURce:WSElect?
```

Description

Sets or queries the audio channel of the I2S trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel2

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TRIGger:IIS:SOURce:WSElect CHANnel2 /*Sets the audio channel
to CHANnel2.*/
:TRIGger:IIS:SOURce:WSElect? /*The query returns
CHAN2.*/
```

3.32.25.4 :TRIGger:IIS:SLEVel

Syntax

```
:TRIGger:IIS:SLEVel <level>
```

```
:TRIGger:IIS:SLEVel?
```

Description

Sets or queries the trigger level of the frame clock line source in I2S trigger. The unit is V.

Parameter

Name	Type	Range	Default
<level>	Real	Analog channel: $(-4.5 \times \text{VerticalScale} - \text{OFFSet})$ to $(4.5 \times \text{VerticalScale} - \text{OFFSet})$	0

Remarks

For VerticalScale, refer to the `:CHANnel<n>:SCALE` command. For OFFSet, refer to the `:CHANnel<n>:OFFSet` command.

Return Format

The query returns the trigger level of the frame clock line source in I2S trigger in scientific notation.

Example

```
:TRIGger:IIS:SLEVel 0.01 /*Sets the trigger level of the frame
clock line source in I2S trigger to 10 mV.*/
:TRIGger:IIS:SLEVel? /*The query returns 1.000000E-2.*/
```

3.32.25.5 :TRIGger:IIS:SOURce:DATA**Syntax**

`:TRIGger:IIS:SOURce:DATA <source>`

`:TRIGger:IIS:SOURce:DATA?`

Description

Sets or queries the data source of the I2S trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel3

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TRIGger:IIS:SOURce:DATA CHANnel2      /*Sets data source to
CHANnel2.*/
:TRIGger:IIS:SOURce:DATA?              /*The query returns CHAN2.*/
```

3.32.25.6 :TRIGger:IIS:DLEVel**Syntax**

```
:TRIGger:IIS:DLEVel <level>
:TRIGger:IIS:DLEVel?
```

Description

Sets or queries the trigger level of the data line source in I2S trigger. The unit is V.

Parameter

Name	Type	Range	Default
<level>	Real	Analog channel: $(-4.5 \times \text{VerticalScale} - \text{OFFSet})$ to $(4.5 \times \text{VerticalScale} - \text{OFFSet})$	0

Remarks

For VerticalScale, refer to the `:CHANnel<n>:SCALE` command. For OFFSet, refer to the `:CHANnel<n>:OFFSet` command.

Return Format

The query returns the trigger level of data line source in I2S trigger in scientific notation.

Example

```
:TRIGger:IIS:DLEVel 0.16      /*Sets the trigger level of data line
source in I2S trigger to 160 mV.*/
:TRIGger:IIS:DLEVel?          /*The query returns 1.600000E-1.*/
```

3.32.25.7 :TRIGger:IIS:CLOCK:SLOPe**Syntax**

```
:TRIGger:IIS:CLOCK:SLOPe <slope>
:TRIGger:IIS:CLOCK:SLOPe?
```

Description

Sets or queries the type of the clock edge of I2S trigger.

Parameter

Name	Type	Range	Default
<slope>	Discrete	{NEGative POSitive}	POSitive

Remarks

N/A

Return Format

The query returns NEG or POS.

Example

```
:TRIGger:IIS:CLOCK:SLOPe NEGative /*Sets the clock edge to  
NEGative.*/  
:TRIGger:IIS:CLOCK:SLOPe? /*The query returns NEG.*/
```

3.32.25.8 :TRIGger:IIS:AUDio**Syntax**

```
:TRIGger:IIS:AUDio <audio>
```

```
:TRIGger:IIS:AUDio?
```

Description

Sets or queries the audio state of I2S trigger.

Parameter

Name	Type	Range	Default
<audio>	Discrete	{RIGHT LEFT EITHer}	LEFT

Remarks

- **RIGHT:** data of the right channel.
- **LEFT:** data of the left channel.
- **EITHer:** data of either of the channel.

Return Format

The query returns RIGH, LEFT, or EITH.

Example

```
:TRIGger:IIS:AUDio RIGHT /*Sets the I2S audio to RIGHT.*/  
:TRIGger:IIS:AUDio? /*The query returns RIGH.*/
```


3.32.25.9 :TRIGger:IIS:WHEN

Syntax

```
:TRIGger:IIS:WHEN <operator>
```

```
:TRIGger:IIS:WHEN?
```

Description

Sets or queries the trigger condition of I2S trigger.

Parameter

Name	Type	Range	Default
<operator>	Discrete	{EQUAL NOTequal LESSthan GREaterthan INRange OUTRange}	EQUAL

Remarks

- **EQUAL:** triggers when the channel's data value equals the set value.
- **NOTequal:** triggers when the channel's data value does not equal the set value.
- **LESSthan:** triggers when the channel's data value is smaller than the set value.
- **GREaterthan:** triggers when the channel's data value is greater than the set value.
- **INRange:** triggers when the channel's data value is smaller than the set upper limit value and greater than the set lower limit value.
- **OUTRange:** triggers when the channel's data value is greater than the set upper limit value or smaller than the set lower limit value.

Return Format

The query returns EQU, NOT, LESS, GRE, INR, or OUTR.

Example

```
:TRIGger:IIS:WHEN NOTequal /*Sets the trigger condition of
I2S trigger to NOTequal.*/
:TRIGger:IIS:WHEN? /*The query returns NOT.*/
```

3.32.25.10 :TRIGger:IIS:UWIDTH

Syntax

```
:TRIGger:IIS:UWIDTH <uwidth>
```

:TRIGger:IIS:UWIDth?

Description

Sets or queries the user width of I2S trigger.

Parameter

Name	Type	Range	Default
<uwidth>	Integer	Refer to <i>Remarks</i>	-

Remarks

The user width ranges from 4 to width of I2S trigger. To set or query the width of I2S trigger, send the **:TRIGger:IIS:WIDTh** command.

Return Format

The query returns an integer ranging from 4 to 32.

Example

```
:TRIGger:IIS:UWIDth 10    /*Sets the user width of I2S trigger to
10.*/
:TRIGger:IIS:UWIDth?      /*The query returns 10.*/
```

3.32.25.11 :TRIGger:IIS:WIDTh

Syntax

:TRIGger:IIS:WIDTh <uwidth>

:TRIGger:IIS:WIDTh?

Description

Sets or queries the width of I2S trigger.

Parameter

Name	Type	Range	Default
<uwidth>	Integer	4 to 32	4

Remarks

N/A

Return Format

The query returns an integer ranging from 4 to 32.

Example

```
:TRIGger:IIS:WIDTh 10    /*Sets the width of I2S trigger to 10.*/
:TRIGger:IIS:WIDTh?      /*The query returns 10.*/
```

3.32.25.12 :TRIGger:IIS:ALIGNment

Syntax

```
:TRIGger:IIS:ALIGNment <setting>
```

```
:TRIGger:IIS:ALIGNment?
```

Description

Sets or queries the alignment mode of the I2S trigger.

Parameter

Name	Type	Range	Default
<setting>	Discrete	{LJ RJ IIS}	IIS

Remarks

- **LJ:** data transmission (MSB first) begins at the edge of the WS transition.
- **RJ:** data transmission (MSB first) is right-justified to the WS transition.
- **IIS:** data transmission (MSB first) begins at the second edge of the WS transition.

Return Format

The query returns LJ, RJ, or IIS.

Example

```
:TRIGger:IIS:ALIGNment LJ          /*Sets the alignment mode of
I2S trigger to LJ.*/
:TRIGger:IIS:ALIGNment?           /*The query returns LJ.*/
```

3.32.25.13 :TRIGger:IIS:DATA

Syntax

```
:TRIGger:IIS:DATA <data>
```

```
:TRIGger:IIS:DATA?
```

Description

Sets or queries the data value of I2S trigger when the trigger condition is "=" or "≠".

Parameter

Name	Type	Range	Default
<data>	Integer	0 to $2^{32}-1$	0

Remarks

The settable range of <data> is affected by the byte length. The maximum byte length can be set to 4, that is, 32-bit binary data. Therefore, the range of <data> is from 0 to $2^{32}-1$.

Return Format

The query returns an integer ranging from 0 to $2^{32}-1$.

Example

```
:TRIGger:IIS:DATA 10 /*Sets the data value of I2S trigger to 10
when the trigger condition is "=" or "!=".*/
:TRIGger:IIS:DATA? /*The query returns 10.*/
```

3.32.25.14 :TRIGger:IIS:DMIN**Syntax**

:TRIGger:IIS:DMIN <datamin>

:TRIGger:IIS:DMIN?

Description

Sets or queries the specified bit for the data min. of I2S trigger.

Parameter

Name	Type	Range	Default
<datamin>	Integer	Refer to <i>Remarks</i>	0

Remarks

The range of the parameter is related to the user width of I2S trigger set by the :TRIGger:IIS:UWIDTH command.

After running this command, you can send the :TRIGger:IIS:CODE command to set or query the specified bit of the data min. value.

Return Format

The query returns an integer ranging from 0 to 39.

Example

```
:TRIGger:IIS:DMIN 3 /*Sets the current bit for the data min. of
I2S trigger to 3.*/
:TRIGger:IIS:DMIN? /*The query returns 3.*/
```

3.32.25.15 :TRIGger:IIS:DMAX**Syntax**

:TRIGger:IIS:DMAX <datamax>

:TRIGger:IIS:DMAX?

Description

Sets or queries the data max. value of the I2S trigger.

Parameter

Name	Type	Range	Default
<datamax>	Integer	Refer to <i>Remarks</i>	0

Remarks

The range of the parameter is related to the user width of I2S trigger set by the *:TRIGger:IIS:UWIDTH* command.

After running this command, you can send the *:TRIGger:IIS:CODE* command to set or query the specified bit of the data max. value.

Return Format

The query returns an integer ranging from 0 to 39.

Example

```
:TRIGger:IIS:DMAX 3 /*Sets the data max. value to 3.*/
:TRIGger:IIS:DMAX? /*The query returns 3.*/
```

3.32.25.16 :TRIGger:IIS:CODE

Syntax

:TRIGger:IIS:CODE <code>

:TRIGger:IIS:CODE?

Description

Sets or queries the data value of a certain bit of I2S trigger.

Parameter

Name	Type	Range	Default
<code>	Discrete	{0 1 255}	255

Remarks

When <code> is set to 255, it indicates the data value can be any value.

After sending the *:TRIGger:IIS:DMAX* or *:TRIGger:IIS:DMIN* command to set the specified bit, you can send this command to query or modify the value of the specified data bit.

Return Format

The query returns 0, 1, or 255.

Example

```
:TRIGger:IIS:CODE 0 /*Sets the data value to 0.*/
:TRIGger:IIS:CODE? /*The query returns 0.*/
```

3.32.26 :TRIGger:FLEXray (Option)

The :TRIGger:FLEXray commands are used to set the relevant parameters for the FlexRay trigger.

The oscilloscope can trigger on the specified frame, symbol, error, or position of the FlexRay bus. FlexRay is a type of differential serial bus configured with three consecutive segments (i.e. packet header, payload, and packet trailer). Its data transmission rate is up to 10 Mb/s. Each frame contains a static segment and a dynamic segment, and ends with the bus idle time.

Its format is as shown in the figure below.

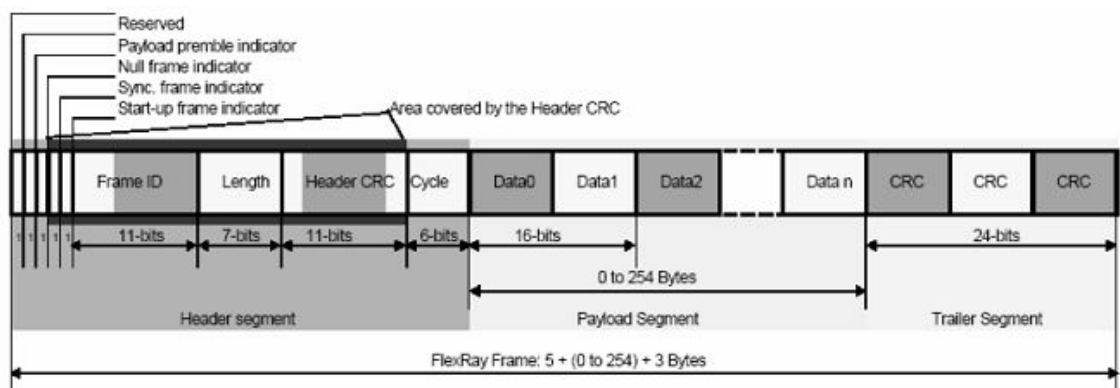 


Figure 3.14 Frame Format of FlexRay Bus

3.32.26.1 :TRIGger:FLEXray:SOURce

Syntax

```
:TRIGger:FLEXray:SOURce <source>
```

```
:TRIGger:FLEXray:SOURce?
```

Description

Sets or queries the trigger source of FlexRay trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

The digital channels are available to choose when the logic analyzer probe is connected.

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TRIGger:FLEXray:SOURce CHANnel2      /*Sets the trigger source of
FlexRay trigger to CHANnel2.*/
:TRIGger:FLEXray:SOURce?                /*The query returns CHAN2.*/
```

3.32.26.2 :TRIGger:FLEXray:LEVel**Syntax**

```
:TRIGger:FLEXray:LEVel </level>
```

```
:TRIGger:FLEXray:LEVel?
```

Description

Sets or queries the trigger level of FlexRay trigger. Its unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	Analog channel: (-4.5 x VerticalScale - Offset) to (4.5 x VerticalScale - Offset)	0 V

Remarks

For VerticalScale, refer to the *:CHANnel<n>:SCALE* command. For OFFSet, refer to the *:CHANnel<n>:OFFSet* command.

Return Format

The query returns the trigger level in scientific notation.

Example

```
:TRIGger:FLEXray:LEVel 0.16      /*Sets the trigger level to 160
mV.*/
:TRIGger:FLEXray:LEVel?          /*The query returns 1.600000E-1.*/
```

3.32.26.3 :TRIGger:FLEXray:BAUD**Syntax**

```
:TRIGger:FLEXray:BAUD <baud>
:TRIGger:FLEXray:BAUD?
```

Description

Sets or queries the signal rate of FlexRay trigger. The default unit is bps.

Parameter

Name	Type	Range	Default
<baud>	Discrete	{2500000 5000000 10000000}	10000000

Remarks

N/A

Return Format

The query returns 2500000, 5000000, or 10000000.

Example

```
:TRIGger:FLEXray:BAUD 5000000    /*Sets the signal rate to
5000000 bps.*/
:TRIGger:FLEXray:BAUD?            /*The query returns 5000000.*/
```

3.32.26.4 :TRIGger:FLEXray:CH**Syntax**

```
:TRIGger:FLEXray:CH <ch>
:TRIGger:FLEXray:CH?
```

Description

Sets or queries the channel of FlexRay trigger.

Parameter

Name	Type	Range	Default
<ch>	Discrete	{A B}	A

Remarks

N/A

Return Format

The query returns A or B.

Example

```
:TRIGger:FLEXray:CH B          /*Sets the channel of FlexRay trigger
to Channel B.*/
:TRIGger:FLEXray:CH?           /*The query returns B.*/
```

3.32.26.5 :TRIGger:FLEXray:WHEN**Syntax**

```
:TRIGger:FLEXray:WHEN <cond>
```

```
:TRIGger:FLEXray:WHEN?
```

Description

Sets or queries the trigger condition of FLEXray trigger.

Parameter

Name	Type	Range	Default
<cond>	Discrete	{FRAME ERRor TSS}	FRAMe

Remarks

- **FRAME:** triggers on the frame of the FlexRay bus.
- **ERRor:** triggers when an error occurs to the FlexRay bus, including Head CRC Err, Tail CRC Err, Decode Err, and Random Err.
- **TSS:** triggers on the transmission start sequence of the FlexRay bus.

Return Format

The query returns FRAM, ERR, or TSS.

Example

```
:TRIGger:FLEXray:WHEN TSS      /*Sets the trigger condition to
TSS.*/
:TRIGger:FLEXray:WHEN?         /*The query returns TSS.*/
```

3.32.26.6 :TRIGger:FLEXray:POS**Syntax**

```
:TRIGger:FLEXray:POS <pos>
```

:TRIGger:FLEXray:POS?

Description

Sets or queries the position of FlexRay trigger when the trigger condition is Position.

Parameter

Name	Type	Range	Default
<pos>	Discrete	{TSS FSS FES DTS}	TSS

Remarks

- **TSS:** Transmit Start Sequence.
- **FSS:** Frame Start Sequence.
- **FES:** Frame End Sequence.
- **DTS:** Dynamic Trailing Sequence.

Return Format

The query returns TSS, FSS, FES, or DTS.

Example

```
:TRIGger:FLEXray:POS TSS /*Sets the position of FlexRay
trigger to TSS when the trigger condition is Position.*/
:TRIGger:FLEXray:POS? /*The query returns TSS.*/
```

3.32.26.7 :TRIGger:FLEXray:FRAME

Syntax

:TRIGger:FLEXray:FRAME? <frame>

:TRIGger:FLEXray:FRAME?

Description

Sets or queries the frame type of FlexRay trigger.

Parameter

Name	Type	Range	Default
<frame>	Discrete	{NULL SYNC STAR ANY}	NULL

Remarks

N/A

Return Format

The query returns NULL, SYNC, STAR, or ANY.

Example

```
:TRIGger:FLEXray:FRAME SYNC          /*Sets the frame type of
FlexRay trigger to SYNC.*/
:TRIGger:FLEXray:FRAME?              /*The query returns SYNC.*/
```

3.32.26.8 :TRIGger:FLEXray:ERRor**Syntax**

```
:TRIGger:FLEXray:ERRor <err>
```

```
:TRIGger:FLEXray:ERRor?
```

Description

Sets or queries the error type of FlexRay trigger when the trigger condition is Error.

Parameter

Name	Type	Range	Default
<err>	Discrete	{HEAD TRAIler DECode ANY}	HEAD

Remarks

N/A

Return Format

The query returns HEAD, TRAIler, DECode, or ANY.

Example

```
:TRIGger:FLEXray:ERRor DECode        /*Sets the error type of
FlexRay trigger to DECode when the trigger condition is Error.*/
:TRIGger:FLEXray:ERRor?              /*The query DECode.*/
```

3.32.26.9 :TRIGger:FLEXray:DEFine**Syntax**

```
:TRIGger:FLEXray:DEFine <define>
```

```
:TRIGger:FLEXray:DEFine?
```

Description

Sets or queries to use ID or Cyc Count to define the trigger condition of FlexRay trigger when the trigger condition is set to Frame.

Parameter

Name	Type	Range	Default
<define>	Discrete	{CYCLE ID TRUE FALSe}	ID FALSe

Remarks

- **CYCLE|TRUE:** indicates Cyc Count.
- **ID|FALSE:** indicates Frame ID.

Return Format

The query returns CYCL or ID.

Example

```
:TRIGger:FLEXray:DEFine CYCLe /*Sets to use Cyc Count to define
the trigger condition of FlexRay trigger.*/
:TRIGger:FLEXray:DEFine? /*The query returns CYCL.*/
```

3.32.26.10 :TRIGger:FLEXray:CYCComp**Syntax**

:TRIGger:FLEXray:CYCComp < cycmax >

:TRIGger:FLEXray:CYCComp?

Description

Sets or queries the CYC comparison condition of FlexRay trigger when the trigger condition is set to Frame.

Parameter

Name	Type	Range	Default
<cycmax>	Discrete	{EQUAL NOTequal GREaterthan LESSthan INRange OUTRange}	EQU

Remarks

- **EQUAL:** =
- **NOTequal:** ≠
- **GREaterthan:** >
- **LESSthan:** <
- **INRange:** > <
- **OUTRange:** < >

Return Format

The query returns EQU, NOT, GRE, LESS, INR, or OUTR.

Example

```
:TRIGger:FLEXray:CYCComp NOT          /*Sets the CYC comparison
condition of FlexRay trigger to NOT.*/
:TRIGger:FLEXray:CYCComp?             /*The query returns NOT.*/
```

3.32.26.11 :TRIGger:FLEXray:MAXCy**Syntax**

```
:TRIGger:FLEXray:MAXCy <cycmax>
```

```
:TRIGger:FLEXray:MAXCy?
```

Description

Sets or queries the upper limit of cycle count of FlexRay trigger.

Parameter

Name	Type	Range	Default
<cycmax>	Integer	0 to 63	0

Remarks

The upper limit of cycle count of FlexRay trigger configured by this command should be greater than or equal to the cycle count lower limit configured by the *:TRIGger:FLEXray:MINCy* command, otherwise, the lower limit will be changed with the modification of the upper limit.

Return Format

The query returns an integer ranging from 0 to 63.

Example

```
:TRIGger:FLEXray:MAXCy 10             /*Sets the upper limit of cycle
count of FlexRay trigger to 10.*/
:TRIGger:FLEXray:MAXCy?                /*The query returns 10.*/
```

3.32.26.12 :TRIGger:FLEXray:MINCy**Syntax**

```
:TRIGger:FLEXray:MINCy <cycmin>
```

```
:TRIGger:FLEXray:MINCy?
```

Description

Sets or queries the lower limit of cycle count of FlexRay trigger.

Parameter

Name	Type	Range	Default
<cycmin>	Integer	0 to 63	0

Remarks

The lower limit of cycle count of FlexRay trigger configured by this command should be smaller than or equal to the cycle count upper limit configured by the `:TRIGger:FLEXray:MAXCy` command, otherwise, the upper limit will be changed with the modification of the lower limit.

Return Format

The query returns an integer ranging from 0 to 63.

Example

```
:TRIGger:FLEXray:MINCy 10 /*Sets the lower limit of cycle
count of FlexRay trigger to 10.*/
:TRIGger:FLEXray:MINCy? /*The query returns 10.*/
```

3.32.26.13 :TRIGger:FLEXray:IDCMp**Syntax**

```
:TRIGger:FLEXray:IDCMp <idcomp>
```

```
:TRIGger:FLEXray:IDCMp?
```

Description

Sets or queries the ID comparison of FlexRay trigger when the trigger condition is set to Frame or Symbol.

Parameter

Name	Type	Range	Default
<idcomp>	Discrete	{EQUAL NOTEqual GREATERthan LESSthan INRange OUTRange}	EQUAL

Remarks

- **EQUAL:** =
- **NOTEqual:** ≠
- **GREATERthan:** >
- **LESSthan:** <
- **INRange:** > <

- **OUTRange:** <>

Return Format

The query returns EQU, NOT, GRE, LESS, INR, or OUTR.

Example

```
:TRIGger:FLEXray:IDCMp GREaterthan /*Sets the ID comparison
condition of FlexRay trigger to GREaterthan.*/
:TRIGger:FLEXray:IDCMp? /*The query returns GRE.*/
```

3.32.26.14 :TRIGger:FLEXray:MINid

Syntax

:TRIGger:FLEXray:MINid <*datamin*>

:TRIGger:FLEXray:MINid?

Description

Sets or queries the ID Min value of FlexRay trigger when the trigger condition is set to Frame or Symbol.

Parameter

Name	Type	Range	Default
<datamin>	Integer	0 to 1,023	0

Remarks

N/A

Return Format

The returns an integer ranging from 0 to 1,023.

Example

```
:TRIGger:FLEXray:MINid 10 /*Sets the ID Min value of
FlexRay trigger to 10 when the trigger condition is set to Frame
or Symbol.*/
:TRIGger:FLEXray:MINid? /*The query returns 10.*/
```

3.32.26.15 :TRIGger:FLEXray:MAXid

Syntax

:TRIGger:FLEXray:MAXid <*datamax*>

:TRIGger:FLEXray:MAXid?

Description

Sets or queries the ID upper limit of FlexRay trigger.

Parameter

Name	Type	Range	Default
<datamax>	Integer	0 to 1,023	0

Remarks

N/A

Return Format

The returns an integer ranging from 0 to 1,023.

Example

```
:TRIGger:FLEXray:MAXid 100          /*Sets the ID upper limit of
FlexRay trigger to 100.*/
:TRIGger:FLEXray:MAXid?              /*The query returns 10.*/
```

3.32.26.16 :TRIGger:FLEXray:SYMBOL**Syntax**

```
:TRIGger:FLEXray:SYMBOL <symbol>
```

```
:TRIGger:FLEXray:SYMBOL?
```

Description

Sets or queries the symbol type of FlexRay trigger when the trigger condition is set to Symbol.

Parameter

Name	Type	Range	Default
<symbol>	Discrete	{CAS WUS}	CAS

Remarks

N/A

Return Format

The query returns CAS or WUS.

Example

```
:TRIGger:FLEXray:SYMBOL WUS          /*Sets the symbol type of
FlexRay trigger to WUS when the trigger condition is set to
Symbol.*/
:TRIGger:FLEXray:SYMBOL?              /*The query returns WUS.*/
```


3.32.27 :TRIGger:M1553 (Option)

The :TRIGger:M1553 commands are used to set the relevant parameters for the M1553 trigger.

1553B is the abbreviation for the MIL-STD-1553 bus. This oscilloscope can trigger on the sync field of 1553B bus, and can also trigger on the specified data word, command word, status word, or error type.

The command word, data word, and status word format of the 1553B bus is as shown in the figure below.

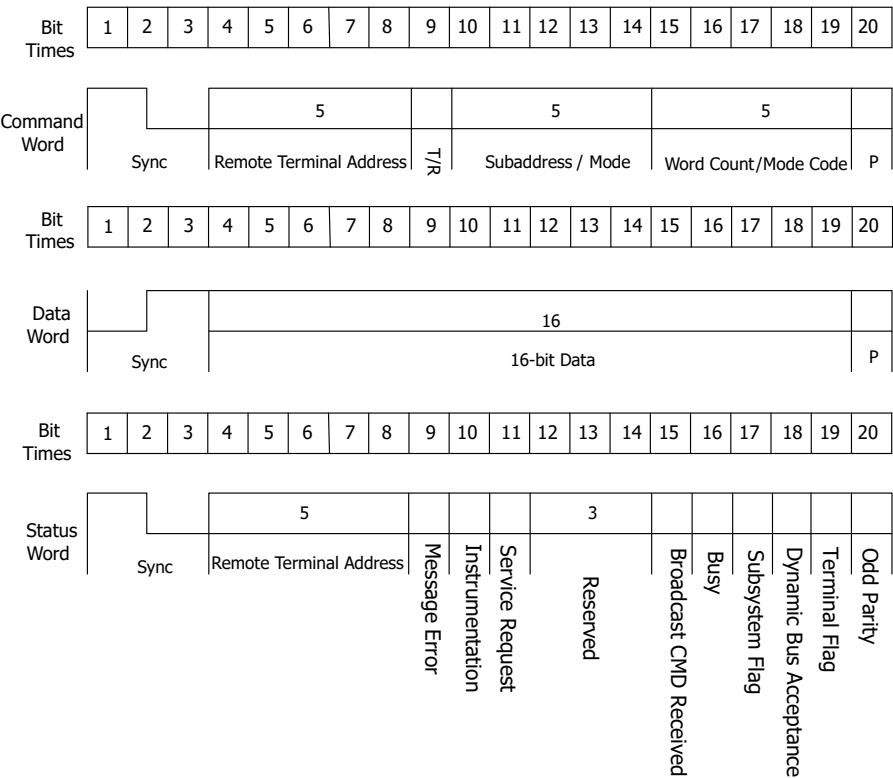 


Figure 3.15 Formats of the Command Word, Data Word, and Status Word of the 1553B Bus

3.32.27.1 :TRIGger:M1553:SOURce

Syntax

```
:TRIGger:M1553:SOURce <source>
:TRIGger:M1553:SOURce?
```

Description

Sets or queries the trigger source of M1553 trigger.

Parameter

Name	Type	Range	Default
<source>	Discrete	{D0 D1 D2 D3 D4 D5 D6 D7 D8 D9 D10 D11 D12 D13 D14 D15 CHANnel1 CHANnel2 CHANnel3 CHANnel4}	CHANnel1

Remarks

N/A

Return Format

The query returns D0, D1, D2, D3, D4, D5, D6, D7, D8, D9, D10, D11, D12, D13, D14, D15, CHAN1, CHAN2, CHAN3, or CHAN4.

Example

```
:TRIGger:M1553:SOURce CHANnel2      /*Sets the trigger source to
CHANnel2.*/*
:TRIGger:M1553:SOURce?              /*The query returns CHAN2.*/*
```

3.32.27.2 :TRIGger:M1553:ALEVel**Syntax**

```
:TRIGger:M1553:ALEVel <level>
```

```
:TRIGger:M1553:ALEVel?
```

Description

Sets or queries Level A of M1553 trigger. The unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	Analog channel: Lower limit to $(4.5 \times \text{VerticalScale} - \text{OFFSet})$	0 V

Remarks

For VerticalScale, refer to the `:CHANnel<n>:SCALE` command. For OFFSet, refer to the `:CHANnel<n>:OFFSet` command.

Return Format

The query returns Level A of M1553 trigger in scientific notation.

Example

```
:TRIGger:M1553:ALEVel 0.16 /*Sets Level A of M1553 trigger to
160 mV.*/
:TRIGger:M1553:ALEVel? /*The query returns 1.600000E-1.*/
```

3.32.27.3 :TRIGger:M1553:BLEVel**Syntax**

```
:TRIGger:M1553:BLEVel <level>
```

```
:TRIGger:M1553:BLEVel?
```

Description

Sets or queries Level B of 1553B trigger. The unit is the same as that of the current amplitude.

Parameter

Name	Type	Range	Default
<level>	Real	Analog channel: $(-4.5 \times \text{VerticalScale} - \text{OFFSet})$ to upper limit	0 V

Remarks

For VerticalScale, refer to the `:CHANnel<n>:SCALE` command. For OFFSet, refer to the `:CHANnel<n>:OFFSet` command.

Return Format

The query returns Level B of 1553B trigger in scientific notation.

Example

```
:TRIGger:M1553:BLEVel 0.05 /*Sets Level B of 1553B trigger to 50
mV.*/
:TRIGger:M1553:BLEVel? /*The query returns 5.000000E-2.*/
```

3.32.27.4 :TRIGger:M1553:POLarity**Syntax**

```
:TRIGger:M1553:POLarity <polarity>
```

```
:TRIGger:M1553:POLarity?
```

Description

Sets or queries the polarity of M1553 trigger.

Parameter

Name	Type	Range	Default
<polarity>	Discrete	{POSitive NEGative}	POSitive

Return Format

The query returns POS or NEG.

Example

```
:TRIGger:M1553:POLarity POSitive /*Sets the polarity of M1553
trigger to POSitive.*/
:TRIGger:M1553:POLarity? /*The query returns POS.*/
```

3.32.27.5 :TRIGger:M1553:WHEN**Syntax**

```
:TRIGger:M1553:WHEN <when>
```

```
:TRIGger:M1553:WHEN?
```

Description

Sets or queries the trigger condition of M1553 trigger.

Parameter

Name	Type	Range	Default
<when>	Discrete	{SYNCbreak DATA CMD STATus ERRor}	SYNCbreak

Remarks

- **SYNCbreak:** triggers on the specified sync type.
- **DATA:** triggers on the specified data word.
- **CMD:** triggers on the specified remote terminal address.
- **STATus:** triggers on the RTA and the remaining 11 bits.
- **ERRor:** triggers on the specified error type.

Return Format

The query returns SYNC, DATA, CMD, STAT, or ERR.

Example

```
:TRIGger:M1553:WHEN CMD /*Sets the trigger condition to
CMD.*/
:TRIGger:M1553:WHEN? /*The query returns CMD.*/
```

3.32.27.6 :TRIGger:M1553:SYNC

Syntax

`:TRIGger:M1553:SYNC <sync>`

`:TRIGger:M1553:SYNC?`

Description

Sets or queries the sync type of M1553 trigger when the trigger condition is Sync.

Parameter

Name	Type	Range	Default
<sync>	Discrete	{DATA STATus ALL}	-

Remarks

- **DATA:** indicates data frame sync.
- **STATus:** indicates commands/status sync.
- **ALL:** indicates the all frame sync.

Return Format

The query returns DATA, STAT, or ALL.

Example

```
:TRIGger:M1553:SYNC DATA /*Sets the sync type of M1553 trigger  
to DATA.*/  
:TRIGger:M1553:SYNC? /*The query returns DATA.*/
```

3.32.27.7 :TRIGger:M1553:ERRor

Syntax

`:TRIGger:M1553:ERRor <err>`

`:TRIGger:M1553:ERRor?`

Description

Sets or queries the M1553 trigger error type.

Parameter

Name	Type	Range	Default
<err>	Discrete	{SYNC ERR}	SYNC

Remarks

N/A

Return Format

The query returns SYNC or ERR.

Example

```
:TRIGger:M1553:ERRor ERR          /*Sets the M1553 trigger error
type to ERR.*/
:TRIGger:M1553:ERRor?              /*The query returns ERR.*/
```

3.32.27.8 :TRIGger:M1553:DATComp**Syntax**

```
:TRIGger:M1553:DATComp <datacomp>
```

```
:TRIGger:M1553:DATComp?
```

Description

Sets or queries the comparison type of M1553 trigger when the trigger condition is "DATA".

Parameter

Name	Type	Range	Default
<datacomp>	Discrete	{EQUAL NOTequal GREaterthan LESSthan INRange OUTRange}	EQUAL

Remarks

- **EQUAL:** =
- **NOTequal:** ≠
- **GREaterthan:** >
- **LESSthan:** <
- **INRange:** > <
- **OUTRange:** < >

Return Format

The query returns EQU, NOT, GRE, LESS, INR, or OUTR.

Example

```
:TRIGger:M1553:DATComp NOTequal    /*Sets the comparison type
of M1553 trigger to NOTequal when the trigger condition is
```

```
"DATA".*/
:TRIGger:M1553:DATComp?           /*The query returns NOT.*/
```

3.32.27.9 :TRIGger:M1553:DATValue

Syntax

```
:TRIGger:M1553:DATValue <data>
:TRIGger:M1553:DATValue?
```

Description

Sets or queries the data value of 1553 trigger.

Parameter

Name	Type	Range	Default
<data>	Integer	0 to 65535	0

Remarks

N/A

Return Format

The query returns an integer ranging from 0 to 65535.

Example

```
:TRIGger:M1553:DATValue 100      /*Sets the data value of M1553
trigger to 100.*/
:TRIGger:M1553:DATValue?          /*The query returns 100.*/
```

3.32.27.10 :TRIGger:M1553:DMAX

Syntax

```
:TRIGger:M1553:DMAX <datamax>
:TRIGger:M1553:DMAX?
```

Description

Sets or queries the bit of data max. of M1553 trigger.

Parameter

Name	Type	Range	Default
<datamax>	Integer	0 to 19	0

Remarks

After configuring the specified bit, you can run the `:TRIGger:M1553:CODE` command to set or query the value of the specified bit.

Return Format

The query returns an integer ranging from 0 to 19.

Example

```
:TRIGger:M1553:DMAX 10      /*Sets the bit of data max. of M1553
trigger to 10.*/
:TRIGger:M1553:DMAX?        /*The query returns 10.*/
```

3.32.27.11 :TRIGger:M1553:DMIN**Syntax**

:TRIGger:M1553:DMIN <datamin>

:TRIGger:M1553:DMIN?

Description

Sets or queries the bit of data min. of M1553 trigger.

Parameter

Name	Type	Range	Default
<datamin>	Integer	0 to 19	0

Remarks

The bit starts from the zero bit of the Binary format and ends at the last bit of the Hex format. The spaces between strings of Binary and Hex format are ignored.

After configuring the specified bit, you can run the **:TRIGger:M1553:CODE** command to set or query the value of the specified bit.

Return Format

The query returns an integer ranging from 0 to 19.

Example

```
:TRIGger:M1553:DMIN 10      /*Sets the bit of data min. of M1553
trigger to 10.*/
:TRIGger:M1553:DMIN?        /*The query returns 10.*/
```

3.32.27.12 :TRIGger:M1553:DRTA**Syntax**

:TRIGger:M1553:DRTA <data>

:TRIGger:M1553:DRTA?

Description

Sets or queries the data value of M1553 trigger.

Parameter

Name	Type	Range	Default
<data>	Integer	0 to 6	0

Remarks

N/A

Return Format

The query returns an integer ranging from 0 to 6.

Example

```
:TRIGger:M1553:DRTA 4      /*Sets the data value of M1553 trigger to 4.*/  
:TRIGger:M1553:DRTA?      /*The query returns 4.*/
```

3.32.27.13 :TRIGger:M1553:DBIT**Syntax**

```
:TRIGger:M1553:DBIT <databit>
```

```
:TRIGger:M1553:DBIT?
```

Description

Sets or queries the bit of bit time of M1553 trigger when the trigger condition is set to "RAT+11Bit".

Parameter

Name	Type	Range	Default
<databit>	Integer	0 to 13	0

Remarks

After configuring the specified bit, you can run the *:TRIGger:M1553:CODE* command to set or query the value of the specified bit.

Return Format

The query returns an integer ranging from 0 to 13.

Example

```
:TRIGger:M1553:DBIT 10     /*Sets the bit of the bit time of M1553 trigger to 10.*/  
:TRIGger:M1553:DBIT?      /*The query returns 10.*/
```

3.32.27.14 :TRIGger:M1553:CODE**Syntax**

```
:TRIGger:M1553:CODE <code>
```

```
:TRIGger:M1553:CODE?
```

Description

Sets or queries the data value of a certain bit of M1553 trigger.

Parameter

Name	Type	Range	Default
<code>	Discrete	{0 1 255}	255

Remarks

When <code> is set to 255, it indicates the data value can be any value.

- When you modify the data max. value of M1553 trigger, first send the `:TRIGger:M1553:DMAX` command to set the bit to be modified, and then send this command to modify the value of the bit.
- When you modify the data min. value of M1553 trigger, first send the `:TRIGger:M1553:DMIN` command to set the bit to be modified, and then send this command to modify the value of the bit.
- When you modify the bit time of M1553 trigger, first send the `:TRIGger:M1553:DBIT` command to set the bit to be modified, and then send this command to modify the value of the bit.

Return Format

The query returns 0, 1, or 255.

Example

```
:TRIGger:M1553:CODE 1 /*Sets the data value of a certain bit of
M1553 trigger to 1.*/
:TRIGger:M1553:CODE? /*The query returns 1.*/
```

3.33 :WAVeform Commands

The **:WAVeform** commands are used to read waveform data and relevant settings. The `:WAVeform:MODE` command is used to set the reading mode of waveform data.

In different modes, the definitions for the parameters are different, as shown in *Figure 3.16* and *Figure 3.17*.

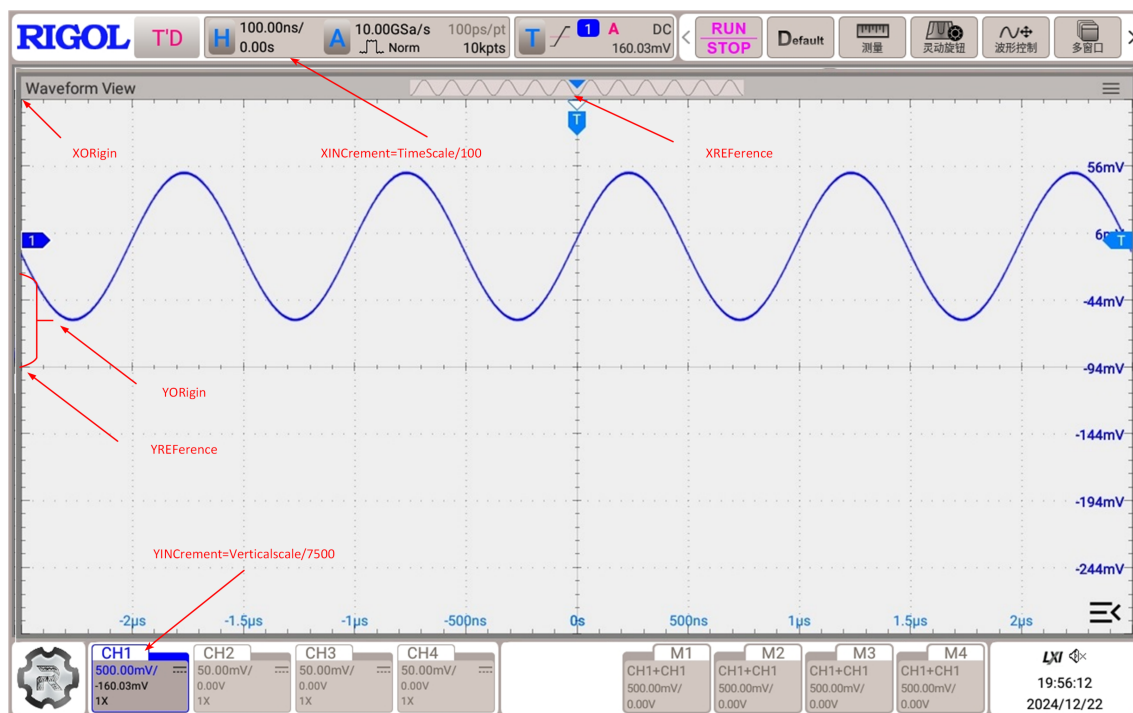 


Figure 3.16 Parameter Definitions in NORMAL Mode

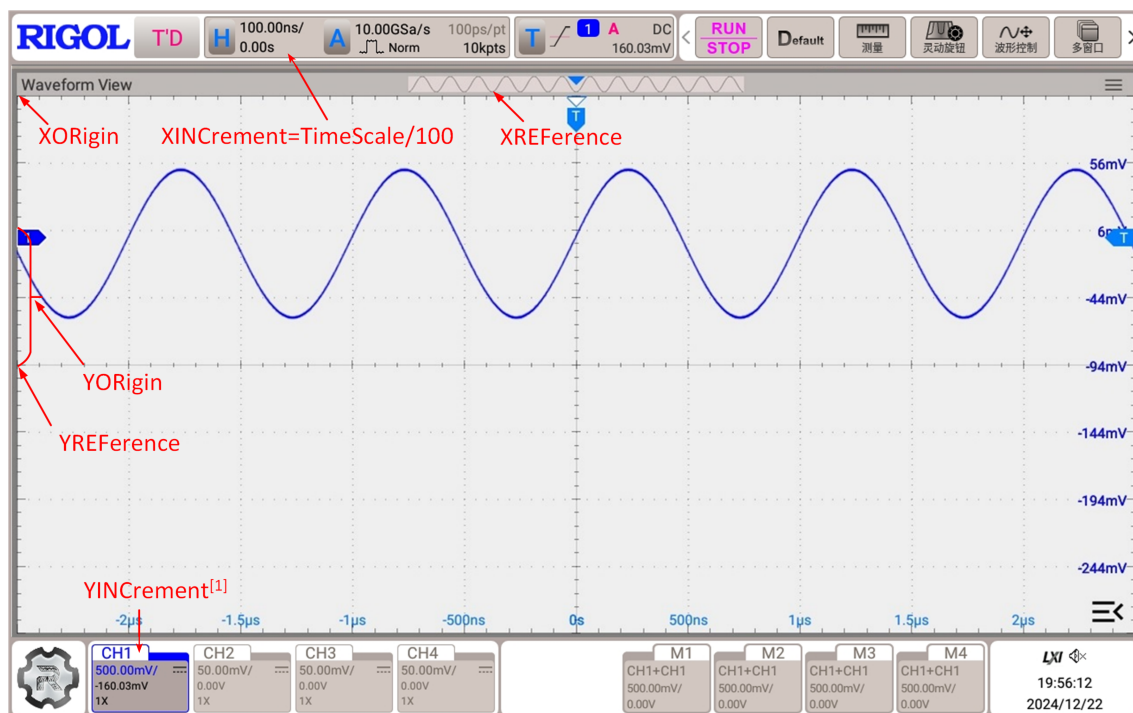 



Figure 3.17 Parameter Definitions in RAW Mode

**NOTE**

 [1]: In RAW mode, YINCrement and Verticalscale of the memory waveforms are related to the currently selected Verticalscale.

Waveform data reading

- **WORD or BYTE format:** The read data format is TMC header + waveform data points + end identifier. The TMC header is in #NXXXXXX format; wherein, # is the TMC header identifier; N following # represents the length of the waveform data; the length of the waveform data points is expressed in ASCII strings, and the terminator represents the ending of communication. For example, the data read for one time is #9000001000XXXX. It indicates that 9 bytes are used to describe the data length. 000001000 indicates the length of waveform data, that is, 1,000 bytes.
- **ASCII format:** The read data format is waveform data points + end identifier. The waveform data point query returns the actual voltage value of each waveform point in scientific notation; and the voltage values are separated by commas.
- When the waveform data in the internal memory are read in batches, the waveform data returned each time might be the data in one area of the internal memory. In "WORD" or "BYTE" return format, each returned data in blocks contain the TMC data block header. Waveform data in two adjacent data blocks are consecutive.
- The figure below shows the waveform data that have been read (in BYTE format). First, select "View as hexadecimal only" from the drop-down list at the right side. Then, the waveform data that have been read are displayed in hexadecimal format. The first 11 bytes denote the "TMC data block header", and beginning from the 12th byte (8E) are the waveform data. You can convert the waveform data read to the voltage value of each point of the waveform by using the formula $(0x8E - YORigin - YREference) \times YINCrement$. For the definitions of the parameters in this formula, refer to *Related Command*.

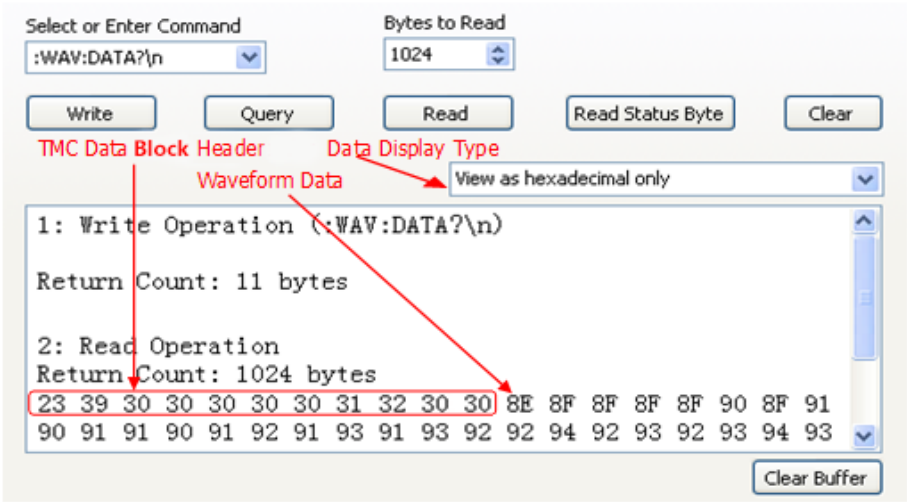

Related Command

- :WAVeform:MODE
- :WAVeform:YINCrement?
- :WAVeform:YORigin?

3.33.1 :WAVeform:SOURce

Syntax

- :WAVeform:SOURce <source>
- :WAVeform:SOURce?

Description

Sets or queries the source channel of waveform data reading.

Parameter

Name	Type	Range	Default
<source>	Discrete	{CHANnel1 CHANnel2 CHANnel3 CHANnel4 MATH1 MATH2 MATH3 MATH4}	CHANnel1

Remarks

When the channel source is set to MATH1~MATH4, :WAVeform:MODE can only select the NORMal mode.

Return Format

The query returns CHAN1, CHAN2, CHAN3, CHAN4, MATH1, MATH2, MATH3, or MATH4.

Example

```
:WAVeform:SOURce CHANnel2 /*Sets the channel source to CHANnel2.*/
:WAVeform:SOURce? /*The query returns CHAN2.*/
```

3.33.2 :WAVeform:MODE**Syntax**

```
:WAVeform:MODE <mode>
```

```
:WAVeform:MODE?
```

Description

Sets or queries the mode of the *:WAVeform:DATA?* command in reading data.

Parameter

Name	Type	Range	Default
<mode>	Discrete	{NORMal MAXimum RAW}	NORMal

Remarks

- **NORMal:** reads the waveform data currently displayed on the screen.
- **MAXimum:** reads the waveform data displayed on the screen when the oscilloscope is in the Run state; reads the waveform data from the internal memory when the oscilloscope is in the Stop state.
- **RAW:** reads the waveform data from the internal memory. Note: The data in the internal memory can only be read when the oscilloscope is in the Stop state. You are not allowed to operate the instrument when it is reading data.
- When the channel source is set to MATH, only the NORMal mode is valid.

Return Format

The query returns NORM, MAX, or RAW.

Example

```
:WAVeform:MODE RAW /*Sets the reading mode of waveform data to
RAW.*/
:WAVeform:MODE? /*The query returns RAW.*/
```

3.33.3 :WAVeform:FORMat**Syntax**

```
:WAVeform:FORMat <format>
```

```
:WAVeform:FORMat?
```

Description

Sets or queries the return format of the waveform data.

Parameter

Name	Type	Range	Default
<format>	Discrete	{WORD BYTE ASCii}	BYTE

Remarks

- **WORD:** Each waveform point occupies two bytes (16 bits).
- **BYTE:** Each waveform point occupies one byte (8 bits).
- **ASCii:** The query returns the actual voltage value of each waveform point in scientific notation; and the voltage values are separated by commas.

Return Format

The query returns WORD, BYTE, or ASC.

Example

```
:WAVeform:FORMat WORD /*Sets the returned format of waveform data
to WORD.*/
:WAVeform:FORMat? /*The query returns WORD.*/
```

3.33.4 :WAVeform:POINts

Syntax

:WAVeform:POINts <point>

:WAVeform:POINts?

Description

Sets or queries the number of the waveform points to be read in the current mode.

Parameter

Name	Type	Range	Default
<point>	Integer	Refer to <i>Remarks</i>	-

Remarks

The range of <point> is related to the current reading mode of the waveform data. You can send the :WAVeform:MODE command to set or query the reading mode of the waveform data.

- **NORMAL:** 1 to 1,000
- **RAW:** 1 to the current maximum memory depth
- **MAXimum:** In RUN state: 1 to the number of effective points on the current screen; In STOP state: 1 to the number of effective points in the current memory

Return Format

The query returns the number of waveform points in integer.

Example

```
:WAVeform:POINts 100 /*Sets the number of waveform points to be
read to 100.*/
:WAVeform:POINts? /*The query returns 100.*/
```

3.33.5 :WAVeform:DATA?**Syntax**

:WAVeform:DATA?

Description

Reads the waveform data.

Parameter

N/A

Remarks

Procedures of reading the waveform data from the screen:

```
:WAV:SOUR CHAN1 /*Sets the channel source to CHANnel1.*/
:WAV:MODE NORMAl /*Sets the waveform reading mode to NORMAl.*/
:WAV:FORM BYTE /*Sets the return format of the waveform data to
BYTE.*/
:WAV:DATA? /*Reads the waveform data on the screen.*/
```

Procedures of reading the waveform data from the internal memory:

```
:STOP /*Sets the instrument to STOP state (you can only read the
waveform data from the internal memory when the oscilloscope is in
STOP state).*/
:WAV:SOUR CHAN1 /*Sets the channel source to CHANnel1.*/
:WAV:MODE RAW /*Sets the waveform reading mode to RAW.*/
:WAV:FORM BYTE /*Sets the return format of the waveform data to
BYTE.*/
:WAV:STAR 1 /*Sets the start point of waveform data reading to
the first waveform point.*/
:WAVeform:STOP 120000 /*Sets the stop point of waveform data
reading to the 120,000th waveform point (last point).*/
```

Return Format

The return format is related to the return format of the currently selected waveform data (:WAVeform:FORMat). For detailed operations, refer to descriptions in *Waveform data reading*.

3.33.6 :WAVeform:XINCrement?**Syntax**

:WAVeform:XINCrement?

Description

Queries the time interval between two neighboring points of the currently selected channel source in the X direction.

Parameter

N/A

Remarks

The returned value is related to the current data reading mode:

- In NORMAL mode, $XINCrement = TimeScale/100$.
- In RAW mode, $XINCrement = 1/SampleRate$.
- In MAX mode, $XINCrement = TimeScale/100$ when the oscilloscope is in the Run state; $XINCrement = 1/SampleRate$ when the oscilloscope is in the Stop state.

The unit is related to the current channel source:

Return Format

The query returns the time difference in scientific notation.

Example

N/A

3.33.7 :WAVeform:XORigin?

Syntax

:WAVeform:XORigin?

Description

Queries the start time of the waveform data of the currently selected channel source in the X direction.

Parameter

N/A

Remarks

The returned value is related to the current data reading mode:

- In NORMAL mode, the query returns the start time of the waveform data displayed on the screen.
- In RAW mode, the query returns the start time of the waveform data in the internal memory.
- In MAX mode, the query returns the start time of the waveform data displayed on the screen when the instrument is in the RUN state; the query returns the

start time of the waveform data in the internal memory when the instrument is in the Stop state.

The unit is related to the current channel source.

Return Format

The query returns the time value in scientific notation.

Example

N/A

3.33.8 :WAVeform:XREFerence?

Syntax

:WAVeform:XREFerence?

Description

Queries the reference time of the waveform points of the currently selected channel source in the X direction.

Parameter

N/A

Remarks

N/A

Return Format

The query returns 0 (namely the first waveform point on the screen or in the internal memory).

Example

N/A

3.33.9 :WAVeform:YINCrement?

Syntax

:WAVeform:YINCrement?

Description

Queries the unit voltage value of the current source channel in the Y direction.

Parameter

N/A

Remarks

The returned value is related to the current data reading mode:

- In NORMAL mode, $YINCrement = VerticalScale/25$ when the returned format is selected as BYTE.
- In RAW mode, $YINCrement$ and $Verticalscale$ of the memory waveforms are related to the currently selected $Verticalscale$.
- In MAX mode, $YINCrement = VerticalScale/25$ when the instrument is in the RUN state and the returned format is selected as BYTE; $YINCrement$ is related to the $VerticalScale$ of the internal waveform and the currently selected $VerticalScale$ when the instrument is in the Stop state.

Return Format

The query returns the unit voltage value in scientific notation.

Example

N/A

3.33.10 :WAVeform:YORigin?

Syntax

:WAVeform:YORigin?

Description

Queries the vertical offset relative to the vertical reference position of the currently selected channel source in the Y direction.

Parameter

N/A

Remarks

The returned value is related to the current data reading mode:

- In NORMAL mode, $YORigin = VerticalOffset/YINCrement$.
- In RAW mode, $YORigin$ is related to the $VerticalScale$ of the memory waveforms and the currently selected $VerticalScale$.
- In MAX mode, $YORigin = VerticalOffset/YINCrement$ when the instrument is in the RUN state; $YORigin$ is related to the $VerticalScale$ of the internal waveform and the currently selected $VerticalScale$ when the instrument is in the Stop state.

Return Format

The query returns an integer.

Example

N/A

3.33.11 :WAVeform:YREference?**Syntax**

:WAVeform:YREference?

Description

Queries the vertical reference position of the currently selected channel source in the Y direction.

Parameter

N/A

Remarks

The value of YREference is related to the configuration of the :WAVeform:FORMat command. The reference position is different for different return formats of waveform data.

Return Format

The query returns an integer.

Example

N/A

3.33.12 :WAVeform:START**Syntax**

:WAVeform:START <sta>

:WAVeform:START?

Description

Sets or queries the start position of waveform data reading.

Parameter

Name	Type	Range	Default
<sta>	Integer	Refer to <i>Remarks</i>	1

Remarks

When reading the waveform data from the internal memory, the actual settable ranges of the start point and stop point of a reading operation are related to the memory depth of the oscilloscope and the return format of the waveform data currently selected.

- In Normal mode, the range is from 1 to 1,000.
- In Max mode, when the oscilloscope is in RUN state, its range is from 1 to 1,000; when the oscilloscope is in STOP state, its range is from 1 to current maximum memory depth.
- In Raw mode, the range is from 1 to the current maximum memory depth.

Return Format

The query returns an integer.

Example

```
:WAVeform:STARTt 100 /*Sets the start point to 100.*/
:WAVeform:START? /*The query returns 100.*/
```

3.33.13 :WAVeform:STOP

Syntax

:WAVeform:STOP <stop>

:WAVeform:STOP?

Description

Sets or queries the stop position of waveform data reading.

Parameter

Name	Type	Range	Default
<stop>	Integer	Refer to <i>Remarks</i>	1,000

Remarks

When reading the waveform data in the internal memory, the actual settable ranges of the start point and stop point of a reading operation are related to the memory depth of the oscilloscope and the return format of the waveform data currently selected.

- In Normal mode, the range is from 1 to 1,000.
- In Max mode, when the oscilloscope is in RUN state, its range is from 1 to 1,000; when the oscilloscope is in STOP state, its range is from 1 to current maximum memory depth.

- In Raw mode, the range is from 1 to the current maximum memory depth.

Return Format

The query returns an integer.

Example

```
:WAVEform:STOP 500 /*Sets the stop point to 500.*/
:WAVEform:STOP? /*The query returns 500.*/
```

3.33.14 :WAVEform:PREamble?

Syntax

:WAVEform:PREamble?

Description

Queries all the waveform parameters.

Parameter

N/A

Remarks

N/A

Return Format

The query returns 10 waveform parameters, separated by commas.

<format>,<type>,<points>,<count>,<xincrement>,<xorigin>,<xreference>,<yincrement>,<yorigin>,<yreference>

Wherein,

<**format**>: indicates 0 (BYTE), 1 (WORD), or 2 (ASC).

<**type**>: indicates 0 (NORMal), 1 (MAXimum), or 2 (RAW).

<**points**>: an integer ranging from 1 to 50,000,000.

<**count**>: indicates the number of averages in the average sample mode. The value of <count> parameter is 1 in other modes.

<**xincrement**>: indicates the time difference between two neighboring points in the X direction.

<**xorigin**>: indicates the start time of the waveform data in the X direction.

<**xreference**>: indicates the reference time of the waveform data in the X direction.

<**yincrement**>: indicates the step value of the waveforms in the Y direction.

<**yorigin**>: indicates the vertical offset relative to the "Vertical Reference Position" in the Y direction.

<yreference>: indicates the vertical reference position in the Y direction.

Example

```
:WAVEform:PREamble?/*The query returns  
0,0,1000,1,1.000000E-8,-5.000000E-6,0.000000E-12,4.000000E-03,0,128.  
*/
```

4 Application Examples

This chapter provides some application examples of the SCPI commands. The main functions of the instrument can be realized through a series of SCPI commands.



NOTE

- The range of certain parameters for different models may be different. Therefore, you need to adjust the parameter range for the model that you use if necessary.
- Before using the examples in this chapter, please select the desired communication interface (USB or LAN) and make correct connections. In addition, you have to install Ultra Sigma or other PC software that can be used to send commands.
- In each example, every command is followed by contents enclosed by two slashes ("/*" and "*/"). They are the descriptions of the command and not part of the command, which help you understand the command better.

4.1 To Configure Basic Parameters

Set the Channel Parameters

Example description: enable CH1, set the vertical scale to 0.1 V/div, and set the coupling mode to AC.

Method

```
:CHANnel1:DISPlay ON      /*Enables CHANnel1.*/
:CHANnel1:SCALe 0.1       /*Sets the vertical scale to 0.1 V/div
for CH1.*/
:CHANnel1:COUPling AC     /*Sets the coupling mode to AC for CH1.*/
```

Set the Horizontal Parameters

Example description: set the memory depth to 1M and the horizontal time base to 200 μ s/div.

Method

```
:ACQuire:MDEPth 1M        /*Sets the memory depth to 1M.*/
:TIMEbase:MODE MAIN       /*Sets the horizontal time base mode
to MAIN.*/
:TIMEbase:MAIN:SCALe 0.0002 /*Sets the main time base to 200  $\mu$ s/
div.*/
```

Set the Trigger Parameters

Example description: set the triggers on the rising edge with the specified voltage threshold (160 mV).

Method

```
:TRIGger:MODE EDGE        /*Selects the edge trigger.*/
:TRIGger:EDGE:SOURce CHANnel2 /*Sets the trigger source to
```



```

CHANnel2.*/
:TRIGger:EDGE:SLOPe POSitive    /*Sets the edge type to rising
edge.*/
:TRIGger:EDGE:LEVel 0.16        /*Sets the trigger level to 160
mV.*/
:TRIGger:STATus?                /*Queries the current trigger
status.*/

```

4.2 To Set Measurements

Read the Statistical Peak-to-Peak Value

Example description: reads the statistical peak-to-peak value for CH2.

Method

```

:MEASure:THReshold:TYPE PERCent /*Sets the threshold type to
PERCent.*/
:MEASure:SETup:MAX 95            /*Sets the upper limit to 95%.*/
:MEASure:SETup:MID 89            /*Sets the middle value to 89%.*/
:MEASure:SETup:MIN 53            /*Sets the lower limit to 53%.*/

:MEASure:ITEM VPP,CHANnel2      /*Adds the CH2 waveform peak-to-peak
value measurement item.*/
:MEASure:ITEM? VPP,CHANnel2     /*Queries the current measurement
results of the CH2 waveform peak-to-peak value.*/

:MEASure:STATistic:RESet        /*Clears the history
statistics data and makes statistics again.*/
:MEASure:STATistic:ITEM VPP,CHANnel2
/*Adds the CH2 waveform peak-to-peak value measurement
item.*/
:MEASure:STATistic:ITEM? CNT,VPP,CHANnel2
/*Queries the count value of the measurement item. */
:MEASure:STATistic:ITEM? MAXimum,VPP,CHANnel2
/*Queries the maximum value of the CH2 peak-to-peak
value.*/
:MEASure:STATistic:ITEM? MINimum,VPP,CHANnel2
/*Queries the minimum value of the CH2 peak-to-peak
value.*/
:MEASure:STATistic:ITEM? AVERages,VPP,CHANnel2
/*Queries the average value of the CH2 peak-to-peak
value.*/
:MEASure:STATistic:ITEM? DEVIation,VPP,CHANnel2
/*Queries the deviation of the CH2 peak-to-peak value.*/

```

Read the Duty Cycle

Example description: read the duty cycle of the periodic pulse at a set percentage.

Method

```

:MEASure:THReshold:TYPE PERCent /*Sets the threshold type to
PERCent.*/
:MEASure:SETup:MAX 95            /*Sets the upper limit to 95%.*/
:MEASure:SETup:MID 89            /*Sets the middle value to 89%.*/
:MEASure:SETup:MIN 53            /*Sets the lower limit to 53%.*/

:MEASure:ITEM PDUTy,CHANnel2    /*Adds the CH2 periodic pulse duty
cycle measurement item.*/

```

```
:MEASure:ITEM? PDUTy,CHANnel2 /*Queries the current duty cycle
value for CH2.*/
```

```
:MEASure:STATistic:RESet /*Clears the history statistics data and
makes statistics again.*/
:MEASure:STATistic:ITEM PDUTy,CHANnel2 /*Adds the CH2 waveform duty
cycle measurement item.*/
```

```
:MEASure:STATistic:ITEM? CNT,PDUTy,CHANnel2
/*Queries the count value of the measurement item. */
:MEASure:STATistic:ITEM? MAXimum,PDUTy,CHANnel2
/*Queries the maximum value of the CH2 duty cycle.*/
:MEASure:STATistic:ITEM? MINimum,PDUTy,CHANnel2
/*Queries the minimum value of the CH2 duty cycle.*/
:MEASure:STATistic:ITEM? AVERages,PDUTy,CHANnel2
/*Queries the average value of the CH2 duty cycle.*/
:MEASure:STATistic:ITEM? DEVIation,PDUTy,CHANnel2
/*Queries the deviation of the CH2 duty cycle value.*/
```

Read the Rise Time

Example description: read the rise time using the set voltage threshold.

Method

```
:MEASure:THReshold:TYPE ABSolute /*Sets the threshold type to
ABSolute.*/
:MEASure:SETup:MAX 0.15 /*Sets the threshold level upper
limit to 0.15 V.*/
:MEASure:SETup:MID 0 /*Sets the threshold level middle
value to 0 V.*/
:MEASure:SETup:MIN -0.15 /*Sets the threshold level lower
limit to -0.15 V.*/
```

```
:MEASure:ITEM RTIME,CHANnel2 /*Adds the CH2 rise time
measurement item.*/
:MEASure:STATistic:ITEM? CURRent,RTIME /*Queries the current
measurement value of the CH2 rise time.*/
```

```
:MEASure:STATistic:RESet /*Clears the history
statistics data and makes statistics again.*/
:MEASure:STATistic:ITEM RTIME,CHANnel2 /*Enables the CH2 rise time
statistic function.*/
:MEASure:STATistic:ITEM? CURRent,RTIME /*Queries the current value
of the CH2 rise time.*/
```

```
:MEASure:STATistic:ITEM? CNT,RTIME,CHANnel2
/*Queries the count value of the measurement item. */
:MEASure:STATistic:ITEM? MAXimum,RTIME,CHANnel2
/*Queries the maximum value of the CH2 rise time.*/
:MEASure:STATistic:ITEM? MINimum,RTIME,CHANnel2
/*Queries the minimum value of the CH2 rise time.*/
:MEASure:STATistic:ITEM? AVERages,RTIME,CHANnel2
/*Queries the average value of the CH2 rise time.*/
:MEASure:STATistic:ITEM? DEVIation,RTIME,CHANnel2
/*Queries the deviation of the CH2 rise time.*/
```

4.3 To Read the Waveform

Read ASCII Data

Example description: read ASCII data and transform the data to actual waveform data.

Method

```
:ACQuire:MDEPth 100k /*Sets the memory depth to 100k.*/  
:RUN /*Sets the oscilloscope to "RUN" state and wait for 5  
s.*/  
:STOP /*Sets the oscilloscope to "STOP" state (the  
oscilloscope can only read the waveform data in internal memory  
when in "STOP" state).*/  
  
:WAV:SOUR CHAN1 /*Sets the channel source to CHANnel1.*/  
:WAV:MODE RAW /*Sets the waveform reading mode to RAW.*/  
:WAV:FORM ASCii /*Sets the return format of the waveform data  
to ASCii.*/  
  
:WAV:STAR 1 /*Sets the start point to read from to the 1st  
point.*/  
:WAV:STOP 100000 /*Sets the stop point to the 100,000th point  
(the last point).*/  
:WAV:DATA? /*Reads the waveform data.*/  
:WAVeform:PREamble? /*The query returns all waveform parameters.*/
```

Read the Waveform Data in Internal Memory

Example description: reads the waveform data from the internal memory.

Method

```
:ACQuire:MDEPth 100k /*Sets the memory depth to 100k.*/  
:RUN /*Sets the oscilloscope to "RUN" state and wait for 5 s.*/  
:STOP /*Set the oscilloscope to "STOP" state (the oscilloscope  
can only read the waveform data in internal memory when in "STOP"  
state).*/  
  
:WAV:SOUR CHAN1 /*Sets the channel source to CHANnel1.*/  
:WAV:MODE RAW /*Sets the waveform reading mode to RAW.*/  
:WAV:FORM BYTE /*Sets the return format of the waveform  
data to BYTE.*/  
:WAV:STAR 1 /*Sets the start point to read from to the  
1st waveform.*/  
:WAVeform:STOP 100000 /*Sets the stop point to the 100,000th point  
(the last point).*/  
:WAV:DATA? /*Reads the waveform data.*/
```

Read the Waveform Data on the Screen

Example description: reads the waveform data on the display.

Method

```
:WAV:SOUR CHAN1 /*Sets the channel source to CHANnel1.*/  
:WAV:MODE NORMAl /*Sets the waveform reading mode to NORMAl.*/  
:WAV:FORM BYTE /*Sets the return format of the waveform data  
to BYTE.*/  
:WAV:DATA? /*Reads the waveform data on the screen.*/
```

5 Programming Examples

This chapter illustrates how to control the instrument by programming in LabVIEW, Visual Basic, and Visual C++. These examples are programmed based on Virtual Instrument Software Architecture (VISA) library.

RIGOL official website (<http://www.rigol.com>) provides the programming examples based on LabVIEW, Visual Basic, Visual C++, Matlab, and Python. You can go to the official website and click **SUPPORT** > **Programming Demo** to obtain the programming examples.

5.1 Programming Preparations

Before programming, you need to prepare the following tasks:

You can log in to the RIGOL official website (<http://www.rigol.com>) to download the software. Then install the software according to the installation wizard. After Ultra Sigma is installed successfully, NI-VISA library will be completely installed automatically. In this manual, the default installation path is C:\Program Files\IVI Foundation\VISA.

In the manual, the instrument communicates with the PC via the USB interface. Connect the USB Device interface on the rear panel of the instrument to the PC by using the USB cable. After the instrument is properly connected to the PC, power on the instrument to start it.

 
The following parts will make a detailed introduction about the programming examples in LabVIEW, Visual Basic, and Visual C++.

5.2 LabVIEW Programming Example


Program used in this example: LabVIEW2010

Function realized in this example: reading the waveform data of CH1 on the screen.

1. Run LabVIEW, and then create a VI file named LabVIEW_Demo.
2. Add controls and create the front panel as shown in the figure below.

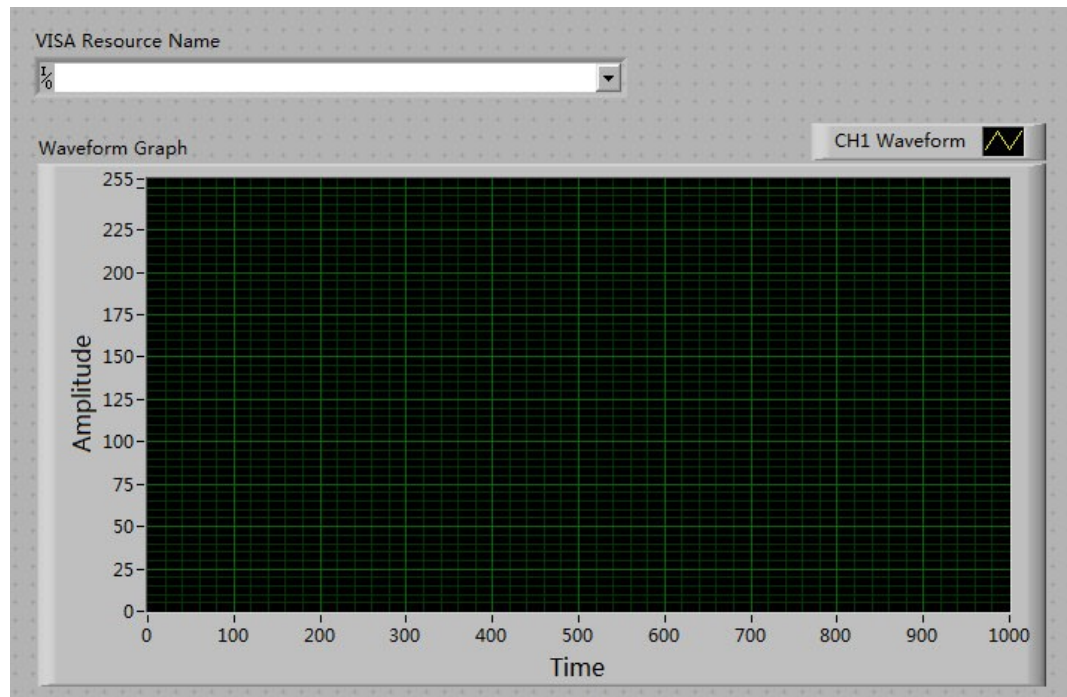

 3. Open the Block Diagram panel. Click **Instrument I/O** > **VISA**. Add the following functions: VISA Open, VISA Read, VISA Write, and VISA Close.

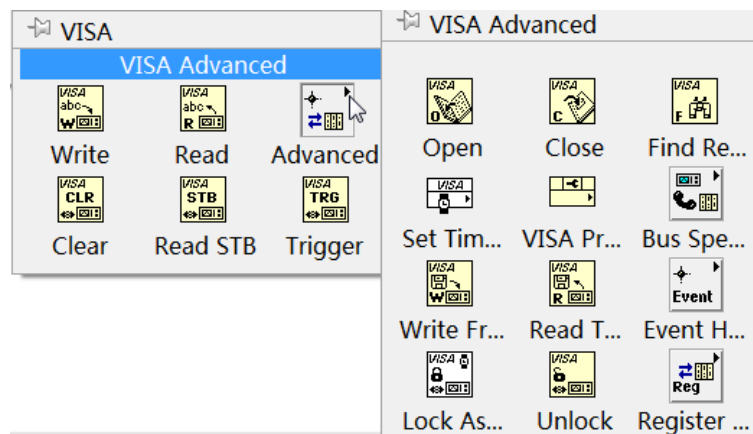


4. Connect the VISA resource name with the VISA Open. Then, connect the VISA resource name outputs of all the functions with the VISA resource name and connect the error output with the error input, as shown in the figure below.




5. Add string constant in the write buffer areas of the VISA Write function and input the following instructions in the figure below. Waveform data is read through the

 VISA Read function which requires users to input the total number of bytes to be read. In this example, the total number of bytes of waveform data to be read is less than 2048. Use the VISA Close function to close the VISA resource after the VISA operation is finished.

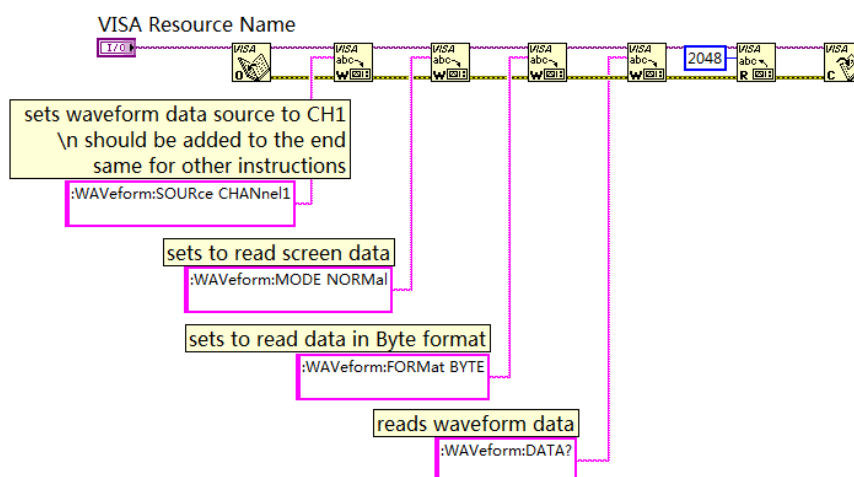


6. The data format is TMC data block header + waveform data + terminator. The TMC header is in #NXXXXXX format; wherein, # is the TMC header identifier; N following # represents the length of the waveform data; the length of the waveform data points is expressed in ASCII strings, and the terminator represents the ending of communication. For example, the data read for one time is #9000001000XXXX. It indicates that 9 bytes are used to describe the data length. 000001000 indicates the length of waveform data, that is, 1,000 bytes. Use the following block diagram to obtain the number of bytes that the TMC header occupies. Ignore the TMC header and delete the terminator at the end of the waveform data, and transfer the waveform data to the byte data and display it on the waveform diagram controls.

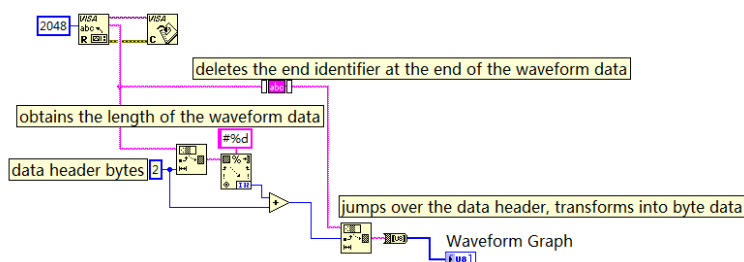 


The available functions used in the above block diagram as as follows:

 String Subset




Used to obtain the TMC header "#N". After obtaining the number of bytes that the TMC header occupies, ignore the data header to obtain the waveform data strings

 Scan From String

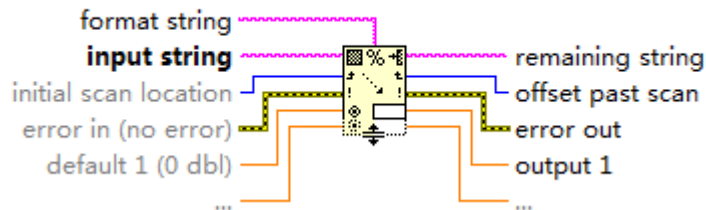

Used to obtain the waveform data length bytes

 Trim Whitespace.vi (4803)




Used to delete the terminator at the end of the waveform data

String To Byte Array




Used to transfer waveform data strings to the byte group

 7. The complete program block diagram is as shown in the figure below:

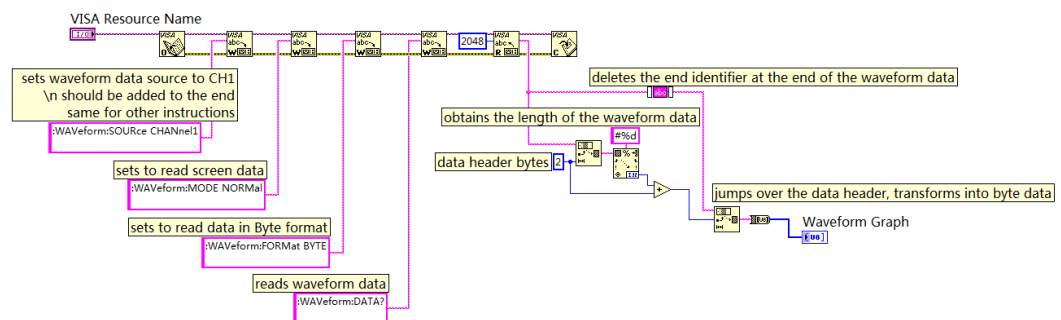

 8. Select the device resource from the VISA Resource Name drop-down list and run the program.

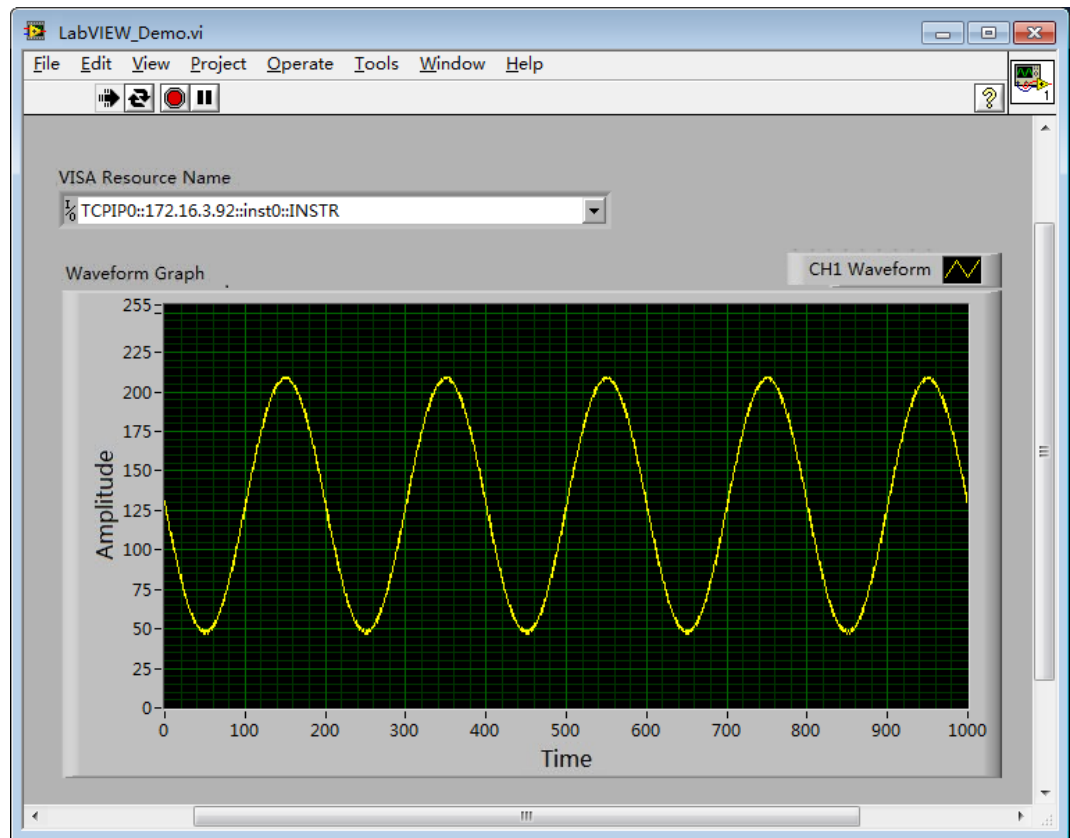


5.3 Visual Basic Programming Example

Program used in this example: Visual Basic 6.0


Function realized in this example: control the on/off state of any channel.

Enter the Visual Basic 6.0 programming environment, and perform the following procedures.

 1. Build a standard application program project (Standard EXE), and name it "Demo".
2. Click **Project** > **Add Module** to open the Add Module dialog box. In the dialog box, click the Existing tab to search for the **visa32.bas** file in the include folder under the NI-VISA installation path and add the file.

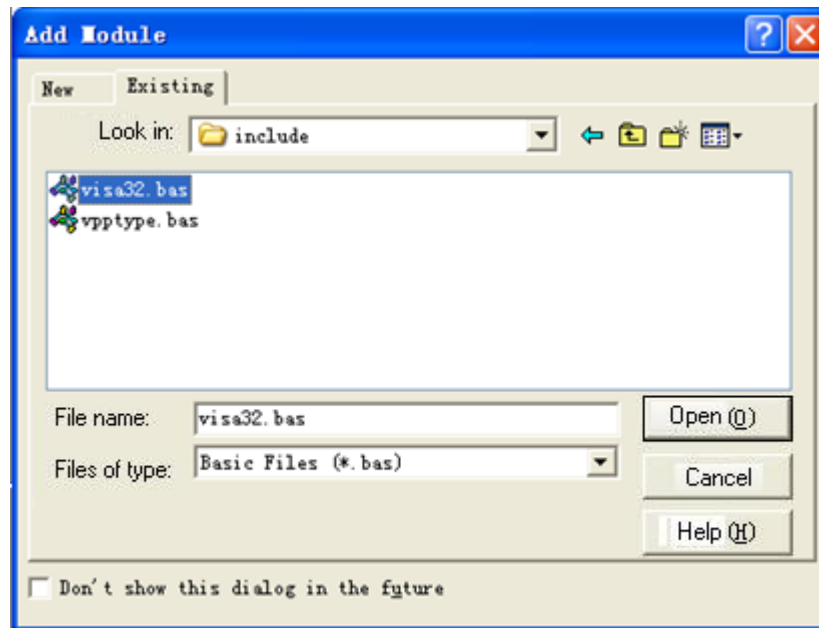

 3. In the Demo dialog box, add four buttons to represent CH1 to CH4 respectively. Add four Labels (Label1(0), Label1(1), Label1(2), Label1(3)) to represent the statuses of CH1 to CH4 respectively (when the channel is enabled, it displays the color of the channel; when the channel is disabled, it displays gray), as shown in the figure below.

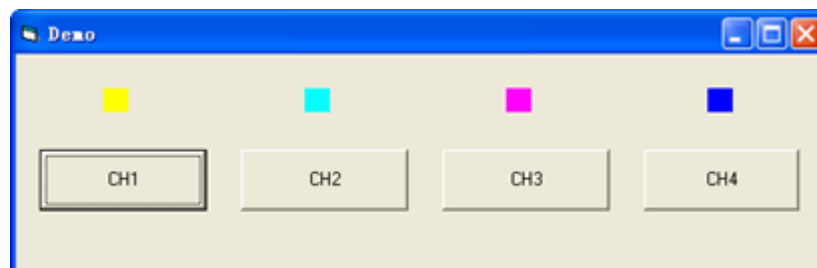

4. Click **Project > Project1 Properties** to open the Project1 – Project Properties dialog box. In the dialog box, click on the General tab and select **Form1** from the drop-down list under Startup Object.
5. Double-click CH1 to enter the programming environment. Add the following codes to control CH1-CH4. The codes of CH1 are as shown below; the codes of the other channels are similar.

```
Dim defrm As Long
Dim vi As Long
Dim strRes As String * 200
Dim list As Long
Dim nmatches As Long
Dim matches As String * 200 'Reserve the obtained device number
Dim s32Disp As Integer
' Obtain the usb resource of visa
Call viOpenDefaultRM(defrm)
Call viFindRsrc(defrm, "USB?*", list, nmatches, matches)
' Turn on the instrument
Call viOpen(defrm, matches, 0, 0, vi)
```

```

' Send a command to query the status of CH1
Call viVPrintf(vi, ":CHAN1:DISP?" + Chr$(10), 0)
' Obtain the status of CH1
Call viVScanf(vi, "%t", strRes)
s32Disp = CInt(strRes)
If (s32Disp = 1) Then
' Send the setting command
Call viVPrintf(vi, ":CHAN1:DISP 0" + Chr$(10), 0)
Label1(0).ForeColor = &H808080 'Gray
Else
Call viVPrintf(vi, ":CHAN1:DISP 1" + Chr$(10), 0)
Label1(0).ForeColor = &HFFFF& 'Yellow
End If
' Close the resource
Call viClose(vi)
Call viClose(defrm)

```

6. Save and run the project to obtain a single exe program for demo. When the instrument is correctly connected to the PC, you can control the on/off status of any channel.

 
5.4 Visual C++ Programming Example

Program used in this example: Visual C++ 6.0


Function realized in this example: search for the instrument address, connect to the instrument, send commands, and read return values.

Enter the Visual C++ 6.0 programming environment, and perform the following procedures.

1. Create a MFC project based on a dialog box.
2. Click **Project > Settings** to open the **Project Setting** dialog box. In the dialog box, click the **C/C++** tab, select **Code Generation** from the drop-down list under **Category**. Choose **Debug Multithreaded DLL** from the drop-down list under **Use run-time library**. Click **OK** to close the dialog box.

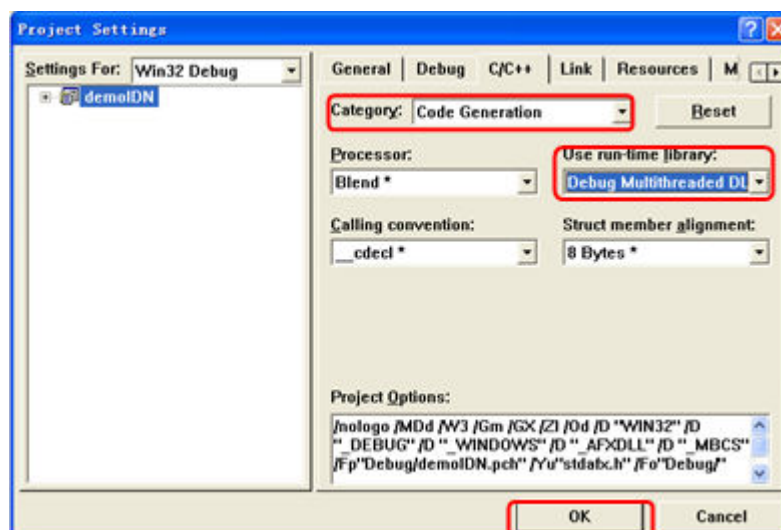

 
- Click **Project** > **Settings** to open the **Project Setting** dialog box. In the dialog box, click the **Link** tab, add "visa32.lib" under **Object/library modules**, then click **OK** to close the dialog box.

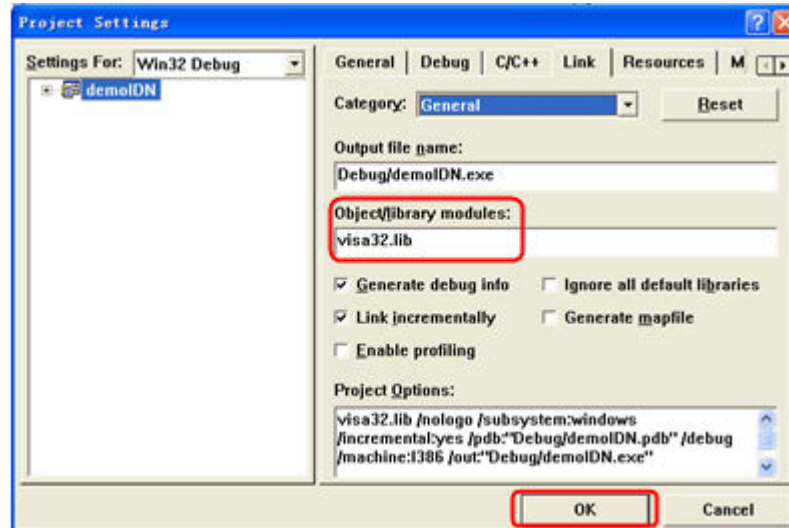

- Click **Tools** > **Options** to open the Options dialog box. Then click the **Directories** tab.


Select **Include files** from the drop-down list under **Show directories for**. Double click the empty space under **Directories** to enter the specified path of Include files: C:\Program Files\IVI Foundation\VISA\WinNT\include. Click **OK** to close the dialog box.

 Select **Library files** from the drop-down list under **Show directories for**. Double click the empty space under **Directories** to enter the specified path of Library files: C:\Program Files\IVI Foundation\VISA\WinNT\lib\msc. Click **OK** to close the dialog box.

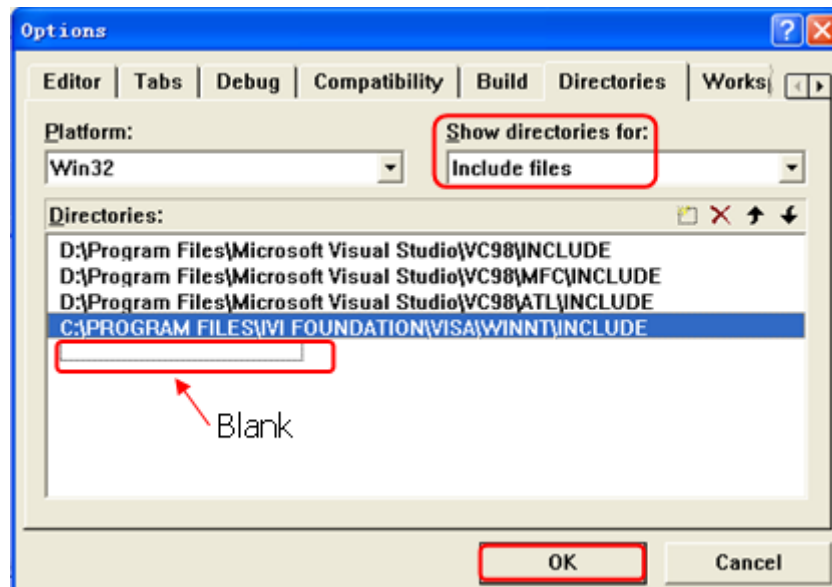


Note: By now, VISA library has been added.

 5. Add the **Text**, **Combo Box**, **Button**, and **Edit Box** controls. The layout interface for adding controls is as follows:

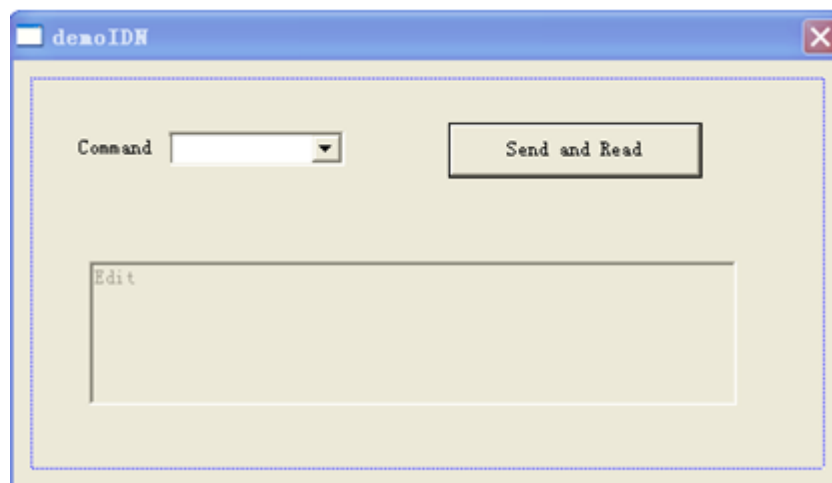

6. Modify the control attributes.
 - a. Name **Text** as "Command".
 - b. Open the **Data** item in the **Combo Box** attribute and input the following command *IDN? manually.
 - c. Open the **General** item in the **Edit Box** attribute and select **Disabled**.
 - d. Name **Button** as **Send and Read**.

 7. Add the variables `m_combox` and `m_receive` to the **Combo Box** and **Edit Box** controls respectively.

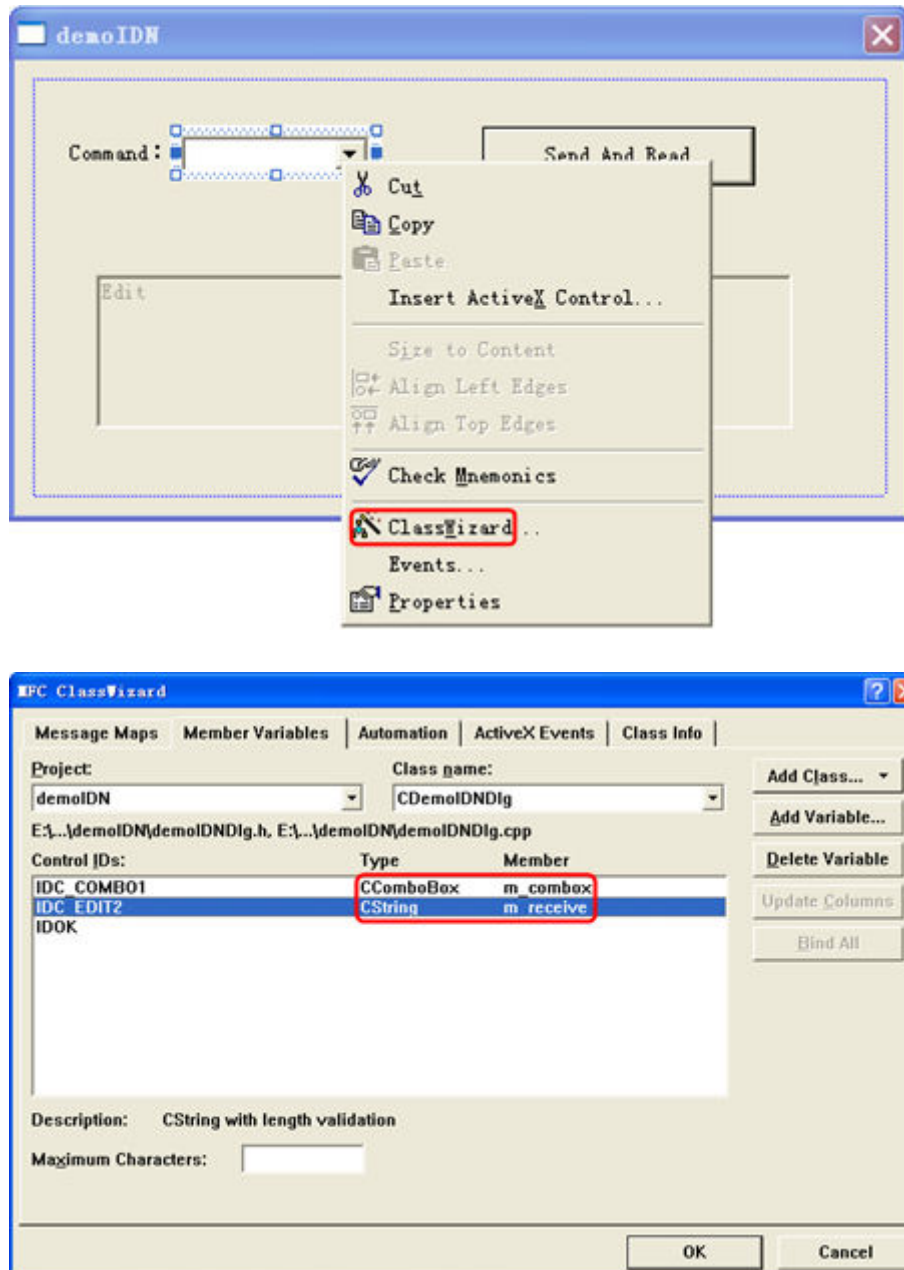

8. Add codes.

Double-click **Send and Read** to enter the programming environment. Declare the `#include <visa.h>` of the VISA library in the header file and then add the following codes:

```
ViSession defaultRM, vi;
char buf [256] = {0};
CString s, strTemp;
char* stringTemp;

ViChar buffer [VI_FIND_BUFLLEN];
```

```

ViRsrc matches=buffer;
ViUInt32 nmatches;
ViFindList list;

viOpenDefaultRM (&defaultRM);
//Acquire the USB resource of VISA
viFindRsrc(defaultRM, "USB?*", &list,&nmatches, matches);
viOpen (defaultRM,matches,VI_NULL,VI_NULL,&vi);

 
//Send the command received
m_combox.GetLBText(m_combox.GetCurSel(),strTemp);
strTemp = strTemp + "\n";
stringTemp = (char *) (LPCTSTR)strTemp;
viPrintf (vi,stringTemp);

//Read the results
viScanf (vi, "%t\n", &buf);

//Display the results
UpdateData (TRUE);
m_receive = buf;
UpdateData (FALSE);
viClose (vi);
viClose (defaultRM);

```

9. Save, compile, and run the project to obtain a single exe file. When the instrument is correctly connected to the PC, enter a command (for example, *IDN?) and click **Send and Read** to execute the command. Then, the reading results will be returned.

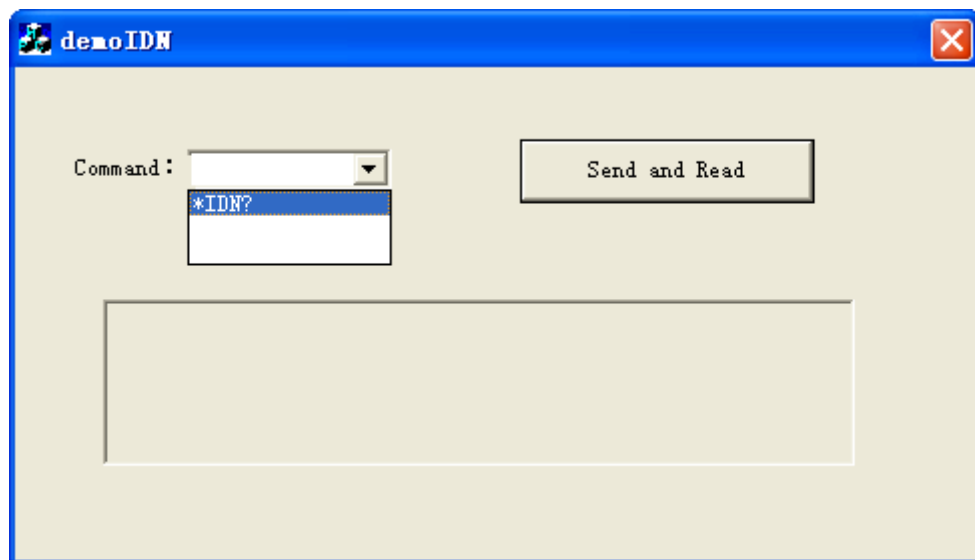


Boost Smart World and Technology Innovation

Industrial Intelligent
Manufacturing



 Semiconductors

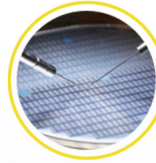

Education &
Research



Communication

System Integration



New Energy



- 5G Cellular-5G/WIFI
- UWB/RFID/ ZIGBEE
- Digital Bus/Ethernet
- Optical Communication

- Digital/Analog/RF Chip
- Memory and MCU Chip
- Third-Generation Semiconductor
- Solar Photovoltaic Cells

- New Energy Automobile
- PV/Inverter
- Power Test
- Automotive Electronics

*Provide Testing and Measuring Products
and Solutions for Industry Customers*

HEADQUARTER

RIGOL TECHNOLOGIES CO., LTD.
No.8 Keling Road, New District,
Suzhou, JiangSu, P.R.China
Tel: +86-400620002
Email: info-cn@rigol.com

JAPAN

RIGOL JAPAN CO., LTD.
5F, 3-45-6, Minamitsuka, Toshima-Ku,
Tokyo, 170-0005, Japan
Tel: +81-3-6262-8932
Fax: +81-3-6262-8933
Email: info.jp@rigol.com

EUROPE

RIGOL TECHNOLOGIES EU GmbH
Friedrichshafener Str. 5
82205 Gilching
Germany
Tel: +49(0)8105-27292-21
Email: info-europe@rigol.com

KOREA

RIGOL KOREA CO., LTD.
5F, 222, Gonghang-daero,
Gangseo-gu, Seoul, Republic of Korea
Tel: +82-2-6953-4466
Fax: +82-2-6953-4422
Email: info.kr@rigol.com

NORTH AMERICA

RIGOL TECHNOLOGIES, USA INC.
10220 SW Nimbus Ave.
Suite K-7
Portland, OR 97223
Tel: +1-877-4-**RIGOL**-1
Email: sales@rigol.com

For Assistance in Other Countries

Email: info.int@rigol.com

RIGOL® is the trademark of **RIGOL TECHNOLOGIES CO., LTD.** Product information in this document is subject to update without notice. For the latest information about **RIGOL's** products, applications and services, please contact local **RIGOL** channel partners or access **RIGOL** official website: **www.rigol.com**